

# Transponder-coded safety switches

Interlocking devices and guard locking devices



**EUCHNER**  
More than safety.

# EUCHNER

More than safety.



Headquarters in Leinfelden-Echterdingen



Logistics center in Leinfelden-Echterdingen



Production location in Unterböhringen

## Internationally successful – the EUCHNER company

EUCHNER GmbH + Co. KG is a world-leading company in the area of industrial safety technology. EUCHNER has been developing and producing high-quality switching systems for mechanical and systems engineering for more than 60 years.

The medium-sized family-operated company based in Leinfelden, Germany, employs around 800 people around the world.

18 subsidiaries and other sales partners in Germany and abroad work for our international success on the market.

## Quality and innovation – the EUCHNER products

A look into the past shows EUCHNER to be a company with a great inventive spirit. We take the technological and ecological challenges of the future as an incentive for extraordinary product developments.

EUCHNER safety switches monitor safety doors on machines and installations, help to minimize dangers and risks and thereby reliably protect people and processes. Today, our products range from electromechanical and electronic components to intelligent integrated safety solutions. Safety for people, machines and products is one of our dominant themes.

We define future safety technology with the highest quality standards and reliable technology. Extraordinary solutions ensure the great satisfaction of our customers. The product ranges are subdivided as follows:

- ▶ Transponder-coded Safety Switches
- ▶ Transponder-coded Safety Switches with guard locking
- ▶ Multifunctional Gate Box MGB
- ▶ Access management systems (Electronic-Key-System EKS)
- ▶ Electromechanical Safety Switches
- ▶ Magnetically coded Safety Switches
- ▶ Enabling Switches
- ▶ Safety Relays
- ▶ Emergency Stop Devices
- ▶ Hand-Held Pendant Stations and Handwheels
- ▶ Safety Switches with AS-Interface
- ▶ Joystick Switches
- ▶ Position Switches



<b>General</b>	<b>4</b>	
Selection criteria	5	
Safety switches without guard locking	10	
Safety switches with guard locking	11	
Function expansion	12	
<b>System Family BP</b>	<b>14</b>	
Safety switch CES-I-BP-.C07-...	16	
Safety switch CTM-.BI-BP-...	18	
<b>System Family BR</b>	<b>22</b>	
Safety switch CES-I-BR-.C07-...	24	
Safety switch CTM-.BI-BR-...	28	
BR/IO-Link Gateway GWY-CB	32	
Safety relay ESM-CB with integrated BR/IO-Link Gateway	34	
<b>System Family A</b>	<b>36</b>	
Safety switch CES-A-5...	38	
<b>System Family AP/AY</b>	<b>40</b>	
Safety switch CES-AP-C01-...	42	
Safety switch CES-AP-C.2-...	44	
Safety switch CES-I-AP-.C04-...	48	
Safety switch CES-I-AP-.C14-...	52	
Safety switch CEM-I2-AY-.C40-...	54	
Variable magnetic guard locking CEM-M2-C60-...	58	
Safety switch CTP-...-AP-...	60	
Safety switch CET.-AP-...	72	
<b>System Family AR</b>	<b>80</b>	
Safety switch CES-AR-C01-...	82	
Safety switch CES-AR-C.2-...	84	
Safety switch CES-I-AR-.C04-...	88	
Safety switch CES-I-AR-.C14-...	92	
Safety switch CEM-I2-AR-.C40-...	94	
Safety switch CTP-L.-AR-...	98	
Safety switch CET.-AR-...	106	
AR evaluation unit CES-AR-AES-12	116	
<b>Accessories</b>	<b>118</b>	
Connection material	120	
Bolts	136	
Fixing material	142	
Miscellaneous accessories	144	
<b>Index</b>	<b>148</b>	
Index by item designation	148	
Index by order number	152	

# CES technology from the inventor of transponder-coded safety engineering - transponder-coded safety systems from EUCHNER

The transponder-coded safety systems from EUCHNER are modern interlocking devices or guard locking devices of type 4 for the protection of persons, machines and processes. They are based on non-contact transponder technology (RFID) and consist of a coded actuator, a read head and evaluation electronics. In some systems, the read head and evaluation electronics form a self-contained unit. All safety functions are combined in a single component here (internal evaluation). With external evaluation, the actuator is read via a separate read head connected to an evaluation unit in the control cabinet.

## The advantages of transponder-coded safety switches

Transponder-coded safety switches from EUCHNER provide the following advantages:

- Maximum protection against tampering due to uniquely coded actuator
- Highest safety category and Performance Level (PL) according to EN ISO 13849-1

## Type examinations and approvals

EUCHNER is allowed to perform CE certification for almost all products without the involvement of a notified body, as EUCHNER is allowed to use the system for full quality assurance according to Annex X of the Machinery Directive. This procedure has been confirmed by TÜV Rheinland and is checked regularly. Nevertheless, additional type examinations are performed by a notified body such that an independent body again confirms that all laws and standards are met.

Many of the devices listed in this catalog have been tested, for instance by the German Social Accident Insurance association (DGUV), formerly the employers' liability insurance association (BG), and are given in the lists from the DGUV.

For countries outside the EU, approvals often are necessary for safety products. Many of the products are listed by Underwriters Laboratories (UL) or are marked according to the EurAsian Conformity (EAC) standard.

### Internal evaluation

Transponder signals are evaluated in the field, not in the control cabinet. All devices in this catalog have internal evaluation.

### External evaluation

With external evaluation, the evaluation electronics for the transponder signals are accommodated in a separate housing. This separation minimizes the read head's size. This is particularly advantageous if the available space at the location to be protected is very limited.

**You will find more information on these devices in the catalog Transponder-Coded Safety Systems with External Evaluation or at [www.euchner.com](http://www.euchner.com).**

- Depending on the application, a device with a suitable actuating range can be selected
- The large actuating range offers greater door guide tolerance
- The actuator can be rotated within the read head's actuating range
- Less sensitive to dirt on the surface
- Largely insensitive to vibration and shock
- Can be used in harsh environments
- Suitable for areas with increased hygiene requirements

The approval symbols on the individual pages of the catalog indicate which tests and approvals are available and which body tested the devices. With the aid of the approval symbols listed below, you can quickly see which approvals are available for the related device:



**You will find further information on the topic of directives and standards in the Service area at [www.euchner.com](http://www.euchner.com).**

# Selection criteria

## System families

### System family A



System family A is characterized by the ability to switch through clock pulses from safe control systems via its semiconductor outputs.

The clock pulses at the control system outputs do not have to be switched off. Up to 3 devices can be connected in series.

### System family AP/BP




System family AP/BP is intended to be used for separate operation. The devices are particularly suitable for the connection of safety evaluation units and safety control systems that require short test pulses. Some versions have been optimized for connection to decentralized peripheral systems, such as the ET200pro series from Siemens. The AP/BP devices generate test pulses at the safety outputs for short

circuit monitoring. Due to the little wiring work required, AP/BP devices represent a low-cost solution.

On devices from system family BP, EUCHNER IO-Link Gateways can be used to read process and device data from the switch and transfer them to an IO-Link master in real time. Devices with communication capability are identified by the INDUSTRY 4.0 READY logo.

### Connection examples

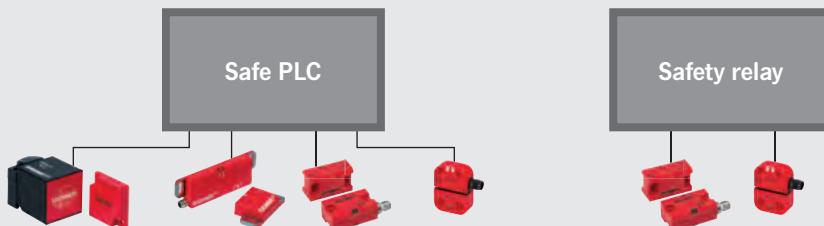

### System family AY



AY devices are intended to be used for separate operation. The AY devices generate test pulses on the safety outputs for short circuit

monitoring. The test pulses are longer than on AP devices.

### System family AR



In the AR version, up to 20 devices belonging to the AR system family can be connected in series. Category 4/PL e is achieved for series connections with up to 20 devices. The AR devices generate test pulses on the safety outputs for short circuit monitoring.

to the AR evaluation unit. If the evaluation unit is used, the monitoring signals can be evaluated as well. Instead of the Y-plug connectors, it is also possible to use a passive distribution module.

With this device, safety and status signals are collected together in the field and forwarded to the control system.

### 2 different connection options are available:

#### ■ Series connection in the field


For field wiring, EUCHNER offers the option of using M12 plugs and Y-distributors to connect together several AR devices. The safety outputs of the last switch can be connected either directly to a control system or

#### ■ Series connection in the control cabinet


Wiring takes place in the control cabinet. All information about the status of individual AR devices can be forwarded directly to the control system.

#### Examples for series connection in the field


Series connection with Y-distributors and connection to safe PLCs or safety relays

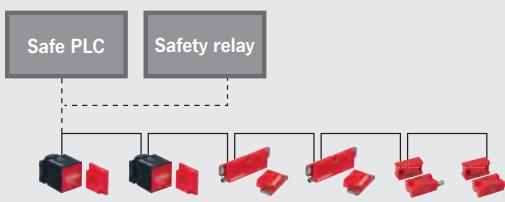

Series connection with Y-distributors and connection to AR evaluation unit

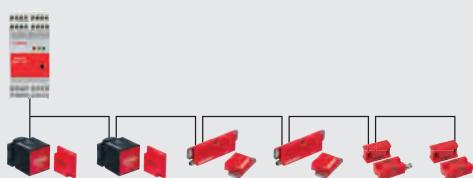


Series connection with passive distribution modules and connection to safe PLCs or safety relays

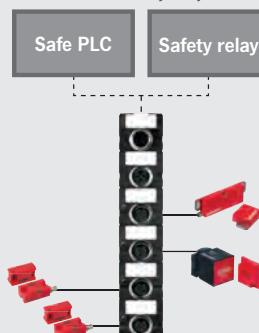

## System family BR

**BR** In the BR version, up to 20 devices belonging to the BR system family can be connected in series. EUCHNER IO-Link Gateways can be used to read process and device data from the switch and transfer them to an IO-Link master in real time. Devices with communication capability are identified by the INDUSTRY 4.0 READY logo.

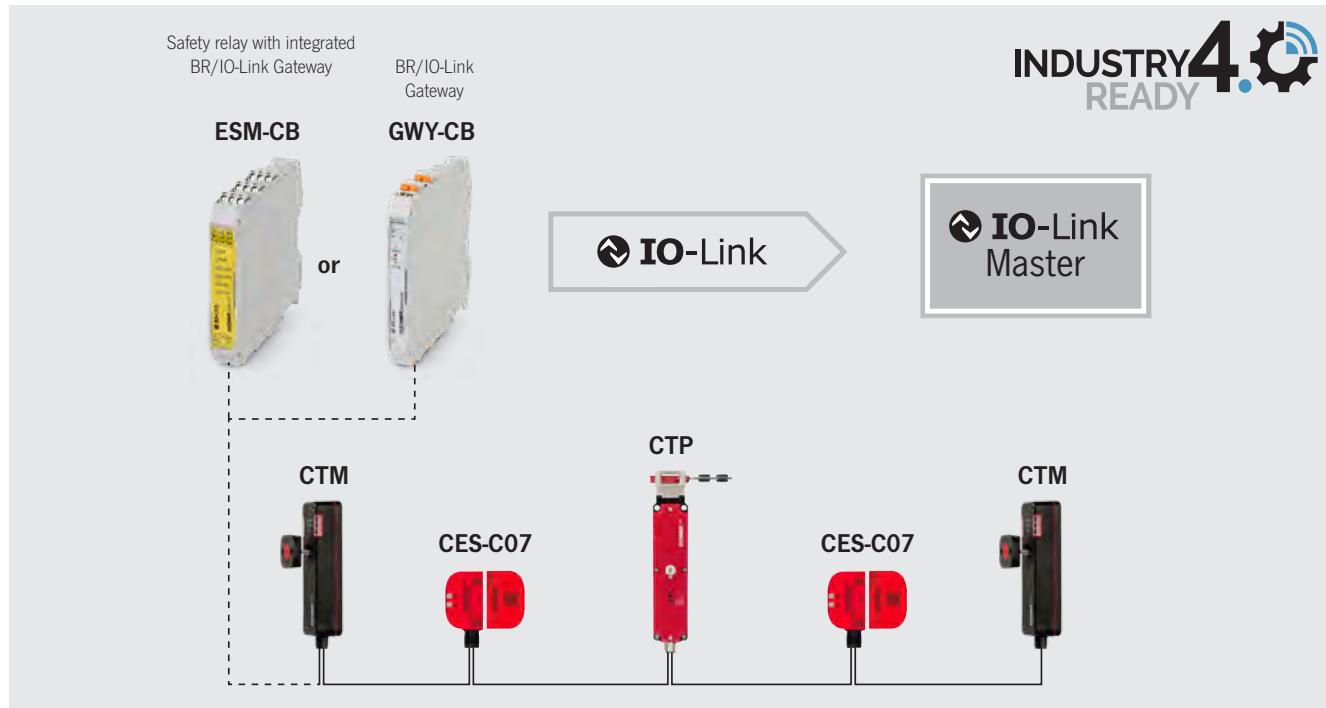


## System family AS (AS-Interface Safety at Work)

**AS** Version with integrated AS-Interface. The safety switch is connected directly to the ribbon cable via an AS-i coupling module. The wiring work is therefore reduced to a minimum, as all information on the safety switch is made available to the control system via the AS-Interface. You

will find more information on devices with AS-Interface in the catalog **Safety Switches with AS-Interface** or at [www.euchner.com](http://www.euchner.com).

## System family AS

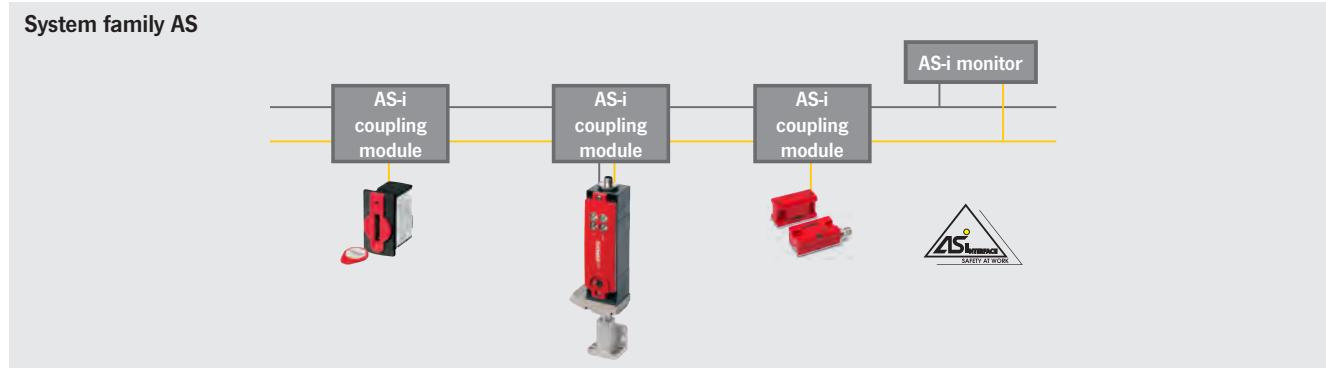

## Coding

Each transponder actuator features coding that far surpasses the requirements in EN ISO 14119 for a type 4 switch with high coding level. The code in an actuator cannot be reprogrammed.

## Unicode evaluation

With the unicode version, the actuators must be taught-in on the safety switch. During the teach-in operation, the actuator code is assigned to the safety switch. This code is saved in the safety switch. Whenever an actuator is read, the safety switch compares the code just read with the code last saved. The actuator is detected and the safety outputs/status signals are switched only if the two bit patterns are identical. The number of possible teach-in operations is dependent of the safety switch used. Only the last actuator taught-in is detected. Unicode evaluation provides a high level of protection against tampering.

## Fixcode evaluation

With fixcode version devices, an actuator is permanently assigned to the device. The device can be operated only with this one actuator. No additional actuators can be taught in.

- With AP/AR devices, the teach-in operation is performed at EUCHNER prior to delivery.
- With BP/BR devices, the teach-in operation is performed on-site at the customer's premises. Each actuator approved for the devices is assigned to the switch by a one-time teach-in operation. Another teach-in operation is not possible.

## Multicode evaluation


Unlike systems with unique code evaluation, a specific actuator code is not requested with multicode devices, instead it is only checked whether the actuator is of a suitable type that can be detected by the system (multicode detection). There is no exact comparison of the actuator code with a code saved in the evaluation unit. As a result, a teach-in operation for the actuator is not necessary.

## Operating distances and active face

The operating distances indicate the distances between the actuator and sensor from which a switching operation is triggered. The active faces on the actuator and switch define these distances. The faces must be parallel to each other on approach.

## Approach directions

Dependent on the housing design, the devices have one or more active faces and therefore one or more possible approach directions.

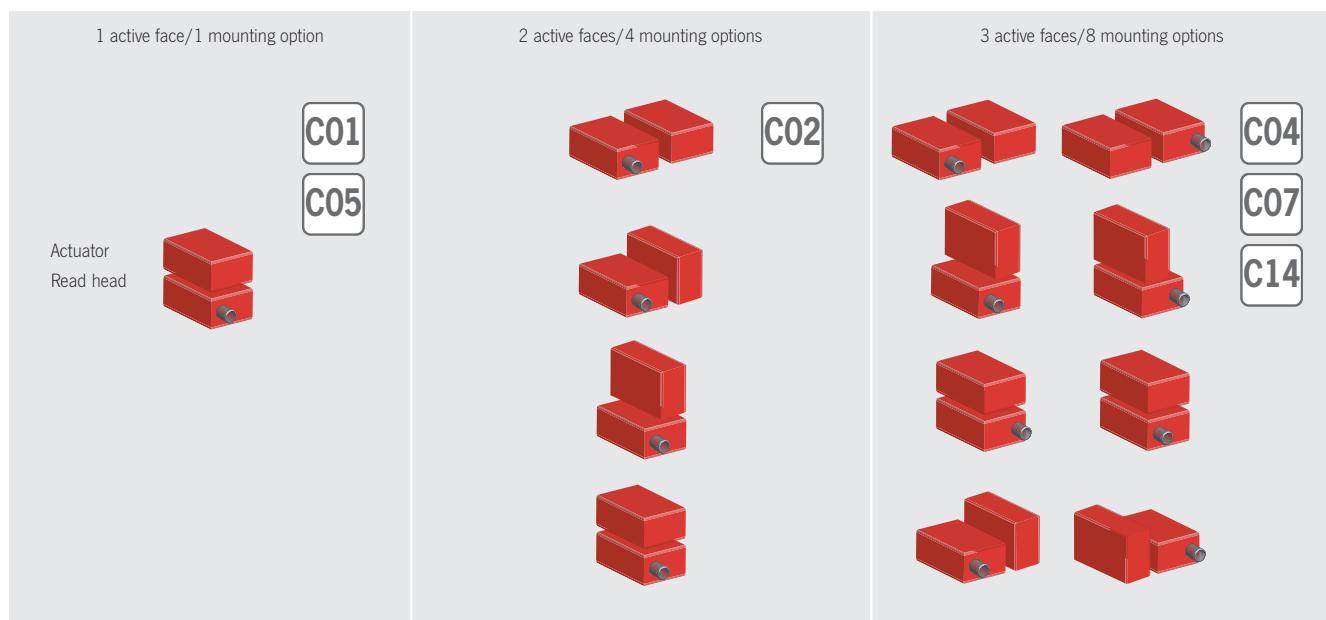

## The transponder field

Transponder-coded systems operate using electromagnetic fields. These fields differ depending on the design of the device.

## Operating distances, release distance and hysteresis

On moving an actuator toward a switch, a switching signal is triggered on reaching the operating distances. The actuator is detected and the safety outputs are switched on.

If the actuator is removed again from the field, the safety outputs are switched off again on reaching the release distance. As the operating distances and the release distance are different, there is a switching hysteresis. The larger the switching hysteresis, the less sensitive the system is to vibration.

## Typical operating distances

Each system has typical and assured operating distances. The assured operating distances are defined in the EN 60947-5-3 standard and are briefly explained in the following.

The information in the catalog corresponds to the typical operating distances.

## Assured operating distances $s_{ao}$

According to EN 60947-5-3, the assured operating distances are the distances from the active sensor face within which the presence of the actuator is correctly detected under all defined environmental conditions and manufacturing tolerances.

## Assured release distance $s_{ar}$

According to EN 60947-5-3, the assured release distance is the distance from the active sensor face outside which the actuator is no longer detected under any environmental conditions, manufacturing tolerances and fault conditions, so that the system switches off.

## Limit-range indication



The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time.

## Side lobes

Transponder fields in general comprise a main field and secondary fields (so-called side lobes). The secondary fields are significantly smaller than the main field and are to the side of the main field. A transponder is also read if it is in a secondary field. This effect is undesirable and on the very close, side approach of an actuator causes problems because the actuator is read before it has reached the main field (and therefore the intended position).

## Surrounding material and installation depth

The operating distances are reduced by flush, recessed installation in the surrounding material. This effect is stronger with a metallic surrounding material than with plastic, for example. Completely encapsulated installation in metal in which the active face on the transponder is covered is generally not possible, as the field is attenuated excessively.

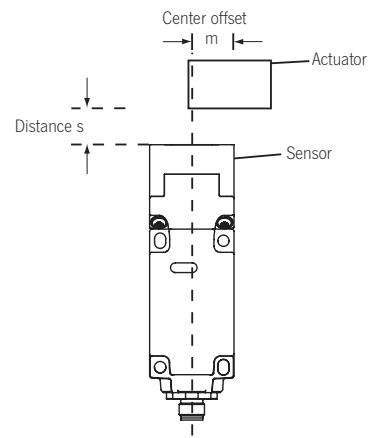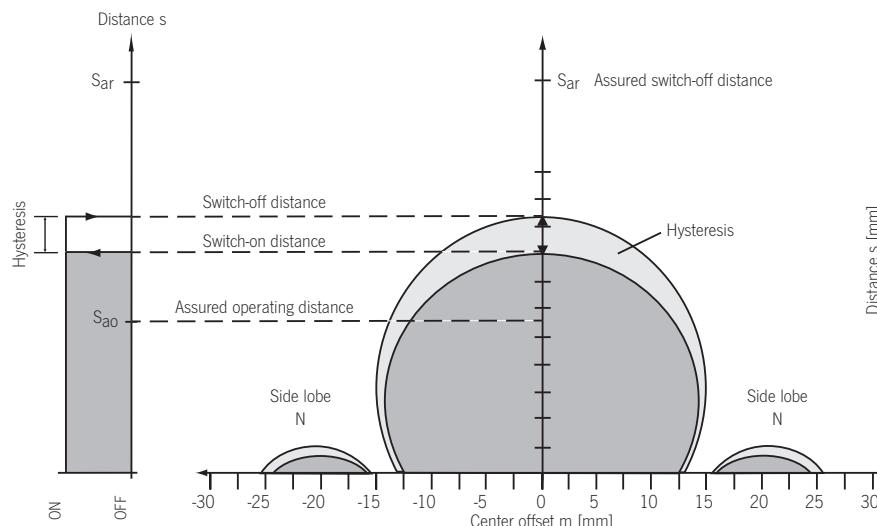

## Interlocking devices and guard locking devices


### Interlocking devices

Interlocking devices according to EN ISO 14119 are used for reliable monitoring of the position of a guard or the position of a machine component. The safety outputs switch off as soon as the guard is opened or the safe position is left.

### Guard locking devices for the protection of personnel or processes

As per EN ISO 14119, guard locking for personnel protection requires continuous monitoring of the guard locking function. On opening or failure of the guard locking, the safety outputs must be switched off.

Any guard locking for personnel protection can also be used as guard locking for process protection.

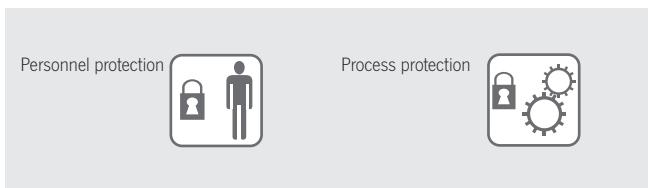

Guard locking devices for process protection are not reliably monitored by guard locking devices. The safety function of these devices is limited to position monitoring for the safety door.

Monitoring the guard locking state is not part of the safety function.

### Principle of operation of guard locking

EUCHNER offers two guard locking methods:

#### ■ Electromechanical guard locking

Here, a guard locking device such as a locking pin is moved to prevent the actuator from being pulled out (form locking).

#### ■ Magnetic guard locking

Here, the actuator is held in place by the magnetic attraction force on the guard locking solenoid (force locking).

### Guard locking principle

EUCHNER offers three guard locking principles:

Guard locking principle	Principle of operation	
	Electromechanical guard locking	Magnetic guard locking
<b>Closed-circuit current principle</b>	Guard locking actuated by spring force and released by power-ON	
<b>Open-circuit current principle</b>	Guard locking actuated by power-ON and released by spring force	Guard locking actuated by power-ON and released by power-OFF
<b>Bistable guard locking</b>	Guard locking actuated by power-ON and released by power-ON	

## Safety switches without guard locking

### C01

- ▶ Compact, square design, standard housing (EN 60947-5-2)
- ▶ 1 active face; can be repositioned in 5 directions
- ▶ Large actuating range
- ▶ Degree of protection IP67



### C02

- ▶ Narrow, elongated design
- ▶ 2 active faces
- ▶ Direct mounting on aluminum profiles
- ▶ Large temperature range
- ▶ Degree of protection IP67/IP69/IP69K



### C04

- ▶ Small design
- ▶ 3 active faces
- ▶ Degree of protection IP67/IP69/IP69K
- ▶ ATEX version available



### C14

- ▶ Small design
- ▶ 3 active faces
- ▶ Degree of protection IP67/IP69/IP69K
- ▶ Encapsulated with epoxy resin and therefore suitable for aggressive media



### C05

- ▶ Standard housing (EN 60947-5-2)
- ▶ 1 active face; can be repositioned in 5 directions
- ▶ Very large actuating range
- ▶ Degree of protection IP67
- ▶ ATEX version available



### C07

- ▶ Small design
- ▶ 3 active faces
- ▶ Degree of protection IP67/IP69/IP69K



### CTP-I

- ▶ 3 approach directions; head can be rotated in 90° steps
- ▶ Degree of protection IP67/IP69/IP69K
- ▶ Extraction force 20 N
- ▶ With integrated lock (depending on version)
- ▶ Version with emergency stop available



## Safety switches with guard locking

### CEM-C40

- ▶ Magnetic guard locking for process protection
- ▶ Guard locking solenoid and evaluation electronics in one housing
- ▶ Locking force of 600 N
- ▶ Adjustable adhesive force



### CEM-C60

- ▶ Magnetic guard locking for process protection
- ▶ Variable system
- ▶ Flexibly combinable with safety switches CES-C04 / C07
- ▶ Locking force of 650 N



### CTP

- ▶ Guard locking for personnel protection according to EN 14119
- ▶ Degree of protection IP67/IP69/IP69K
- ▶ Mounting compatible with the EUCHNER safety switches TP, STP and STA
- ▶ 3 approach directions; head can be rotated in 90° steps
- ▶ High locking force of 3,900 N
- ▶ Stainless-steel version available



### CET

- ▶ Guard locking for personnel protection according to EN 14119
- ▶ Very high locking force up to 6,500 N
- ▶ 2 safety outputs (semiconductor outputs)
- ▶ Head can be rotated in 90° steps
- ▶ Degree of protection IP67
- ▶ Metal housing
- ▶ Actuator guide with large freedom of movement
- ▶ 2-channel solenoid control permissible
- ▶ Connection via plug connectors



### CTM

- ▶ Guard locking for personnel protection according to EN 14119
- ▶ Compact size
- ▶ Bistable guard locking principle
- ▶ Degree of protection IP67/IP69/IP69K
- ▶ Locking force of 1,300 N
- ▶ Process and device data can be read via IO-Link
- ▶ Hygienic version available



## Function expansion

Due to the large selection of accessories and parts that can be retrofitted, additional or expanded functions are possible. You will find an overview of the accessories available in the section of the catalog on the related device.

### Release functions

Some situations require guard locking to be released manually (e.g. malfunctions or an emergency). The following release functions are available for EUCHNER devices:

#### Auxiliary release and auxiliary key release (1)

In the event of malfunctions, guard locking can be released with the auxiliary release irrespective of the state of the solenoid.

#### Emergency release (2)

Permits opening of a locked guard from outside the danger zone without tools.

#### Escape release (3)

Permits opening of a locked guard from the danger zone without tools.

#### Wire front release (4)

Release via a pull wire. Depending on the type of attachment, the wire front release can be used as emergency release or escape release.



### Lockout bar

The lockout bar can be used to prevent maintenance personnel from being unintentionally locked in the danger zone, for example. In locked position, the lockout bar prevents activation of guard locking. The lockout bar can be secured in locked position using padlocks.

Lockout bars are available in two versions:

- ▶ Lockout bar permanently mounted on the device
- ▶ Removable lockout bar for blocking the switch head or the actuator



## Versatile accessories

### Bolts

Bolts function as follows: the bolt tongue mechanically guides the actuator when it is inserted into the safety switch actuating head. The bolt mounted on the door frame comprises a protruding bolt tongue, the handle and the actuator, mounted offset somewhat to the rear. The switch bracket with the safety switch is fitted to the frame. The bolt absorbs forces that act on the switch and the actuator and that could damage the switch and actuator. There are bolts for many safety switches from EUCHNER, some as a set with pre-assembled safety switch.

### Function expansions that can be retrofitted


For some devices there are function expansions that can be retrofitted, e.g. manual releases, cover plates, insertion funnels, lockout bars and much more. You can find suitable accessories for your device very simply at [www.euchner.com](http://www.euchner.com).

### Connection material

EUCHNER offers a large selection of connecting cables, plug connectors and other connection accessories. You can find suitable accessories for your device very simply at [www.euchner.com](http://www.euchner.com).

### Installation material

EUCHNER offers mounting plates and brackets for many devices for a wide variety of mounting situations. You can find suitable accessories for your device very simply at [www.euchner.com](http://www.euchner.com).

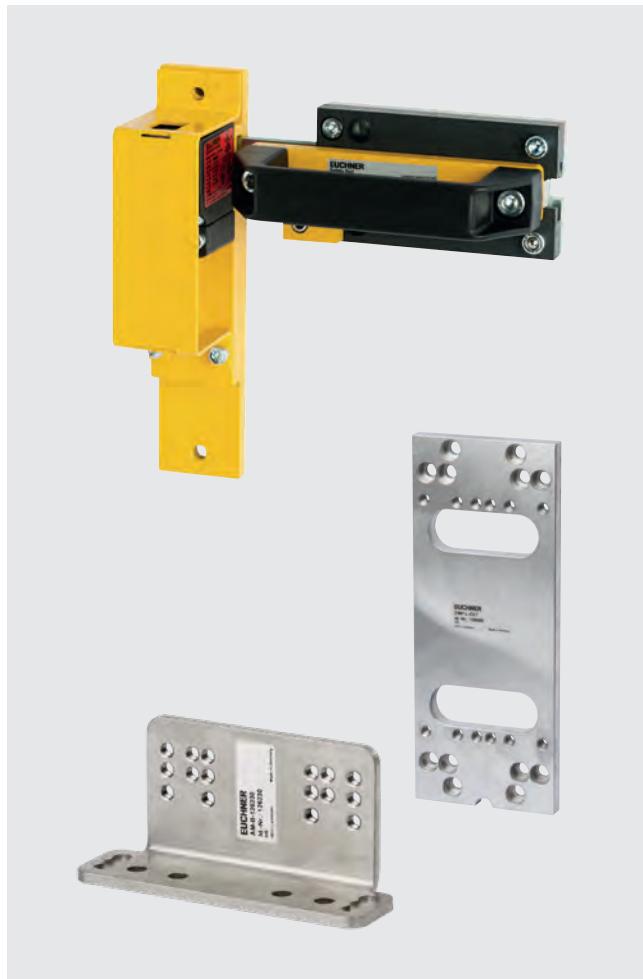



# »Communicating safety switches for the requirements of tomorrow – Industry 4.0 ready«

---

- ▶ Safety switches for separate operation
- ▶ Industry 4.0-compatible communication and expanded diagnostics in combination with IO-Link Gateway GWY-CB or safety relay with integrated IO-Link Gateway ESM-CB
- ▶ Direct connection to IP67 field modules for various decentralized peripheral systems (depending on version)
- ▶ Two safe semiconductor outputs
- ▶ Extremely short risk time
- ▶ Own pulsing for short circuit detection
- ▶ Connection via plug connectors
- ▶ Cable lengths up to 200 m possible
- ▶ PL e / category 4 according to EN ISO 13849-1

System  
family

**BP**

**BP**



CES

**C07**



CTM

**CTM**

**Safety switch CES-I-BP-.C07-...**
**INDUSTRY  
4.0  
READY**


- ▶ Communicating safety switch
- ▶ Industry 4.0 ready
- ▶ Small design
- ▶ 3 active faces
- ▶ Diagnostics via 2 LEDs
- ▶ Limit-range indication
- ▶ Degree of protection IP65/IP67/IP69/  
IP69K
- ▶ Mounting distance 22 mm (industrial  
standard)
- ▶ Simple to convert for guard locking  
with magnetic guard locking CEM-C60

**Details****Available coding options**

- ▶ Unicode evaluation
- ▶ Multicode evaluation

**Industry 4.0 ready**

The switch can communicate in combination with an EUCHNER IO-Link Gateway, and sends process and device data to higher-level control systems. Comprehensive diagnostic messages enable rapid and targeted troubleshooting.

**Housing material**

The switch is suitable for use in the food industry (ECOLAB material resistance test).

**Limit-range indication**

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time.

**Connection to IP67 field modules**

Devices with M12 plug connector, 5-pin, without monitoring output are optimized for direct connection to field modules, such as ET200pro from Siemens or comparable devices from other manufacturers.

**LED indicator**

<b>STATE</b>	Status
<b>DIA</b>	Diagnostics

**Additional connections**

<b>OD/C</b>	Door position monitoring output and communication connection to an EUCHNER IO-Link Gateway
-------------	--

**Further information**

- ▶ For dimension drawings, see p. 17
- ▶ For accessories and spare parts, see p. 17
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**Ordering table****Safety switch**

Series	Version	Order no./item	
<b>CES-I-BP-U-C07-...</b> Unicode	Without monitoring output	<b>162815</b> CES-I-BP-U-C07-SI-162815	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	With monitoring output	<b>160080</b> CES-I-BP-U-C07-SB-160080	
<b>CES-I-BP-M-C07-...</b> Multicode	Without monitoring output	<b>162813</b> CES-I-BP-M-C07-SI-162813	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	With monitoring output	<b>160076</b> CES-I-BP-M-C07-SB-160076	

**Actuator**

Series	Design	Typ. actuating range [mm]	Order no./item	
<b>CES-A-BDN-06</b>		Ø6 x 26	16	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
<b>CES-A-BTN-07</b>		40 x 26	13	



Function expansion with CEM-C60, see page 58.


**M12** **5  
pin**

**C07**

#### Accessories

Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M12</b> <b>8 pin</b>
<b>Fixing material</b>	Safety screws	Page 144

#### Dimension drawing

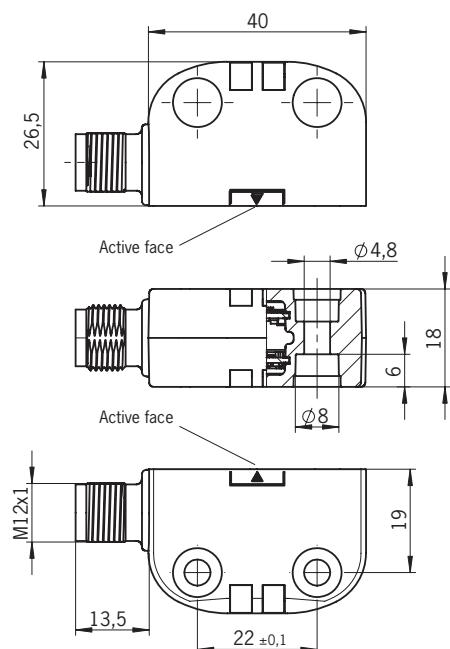

#### Terminal assignment

With monitoring output	Without monitoring output (pin 5 not used)	Designation	Function
1	1	UB	Operating voltage, 24 V DC
2	2	FO1A	Safety output, channel A
3	3	0V	Ground 0 V DC
4	4	FO1B	Safety output, channel B
5	-	OD/C	Door position monitoring output/communication

## Safety switch CTM-.BI-BP-... with guard locking

INDUSTRY  
**4.0**  
READY

- ▶ Communicating safety switch
- ▶ Industry 4.0 ready
- ▶ Safety switch with guard locking
- ▶ Locking force up to 1,300 N
- ▶ Diagnostics via 3 LEDs
- ▶ Hygienic version available

### Notice

The device is only allowed to be operated in conjunction with the actuators A-B-A1-A1-....

### Details

#### Available coding options

- ▶ Unicode evaluation
- ▶ Multicode evaluation

#### Industry 4.0 ready

The switch can communicate in combination with an EUCHNER IO-Link Gateway, and sends process and device data to higher-level control systems. Comprehensive diagnostic messages enable rapid and targeted troubleshooting.

#### Guard locking types

##### LBI BiState

Control input for guard locking. This type of guard locking has a function to prevent the activated guard locking from being deactivated during a power failure.

##### CBI Bistate

The device can be configured with the aid of the function actuators. Guard lock monitoring is switched on or off depending on the taught-in function actuator.

### Auxiliary release (optional)

Some devices have an auxiliary release (see ordering table).

### LED indicator

STATE	Status
LOCK	Guard locking
DIA	Diagnostics

### Additional connections

OD/C	Door position monitoring output and communication connection to an EUCHNER IO-Link Gateway
OI	Diagnostic monitoring output
OL	Guard lock monitoring output

### Further information

- ▶ For dimension drawings, see p. 19
- ▶ For accessories and spare parts, see p. 19
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

## Ordering table

### CTM-.BI-BP-...-SA-... with plug connectors M12

M12 8 pin	Order no./item	Coding U = unicode M = multicode	Auxiliary release	Adhesive force [N]	Hygienic version	Guard locking Personnel/process protection	For wiring diagram, see page 31	
<b>CTM-LBI</b> BiState								
<b>166087</b> CTM-LBI-BP-U-AZ-SA-166087	U	●	25				<b>A</b>	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
<b>166088</b> CTM-LBI-BP-M-AZ-SA-166088	M	●	25				<b>B</b>	
<b>166089</b> CTM-LBI-BP-U-AZ-SA-166089	U	●	25				<b>B</b>	
<b>166090</b> CTM-LBI-BP-U-AZ-SA-166090	M	●	25				<b>B</b>	
<b>CTM-CBI</b> BiState								
<b>165897</b> CTM-CBI-BP-U-AZ-SA-165897	U	●	25				<b>B</b>	


**Actuator**

Series	Design	Color	Order no./item	
<b>A-B-A1-A1-...</b>	Standard	BK/RD	<b>161642</b> A-B-A1-A1-161642	
	P Hygienic version	BK/BU	<b>161643</b> A-B-A1-A1-P-161643	
<b>SB-O.-A1-A1-...<sup>1)</sup></b>	L configuration	BK/RD	<b>165895</b> S-B-08-A1-A1-165895	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	I configuration		<b>165896</b> S-B-09-A1-A1-165896	


1) Only in combination with CTM-CBI-BP-U-AZ-SA-165897

**Accessories**

Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M12</b> <b>8 pin</b>
<b>Fixing material</b>	Safety screws	Page 144

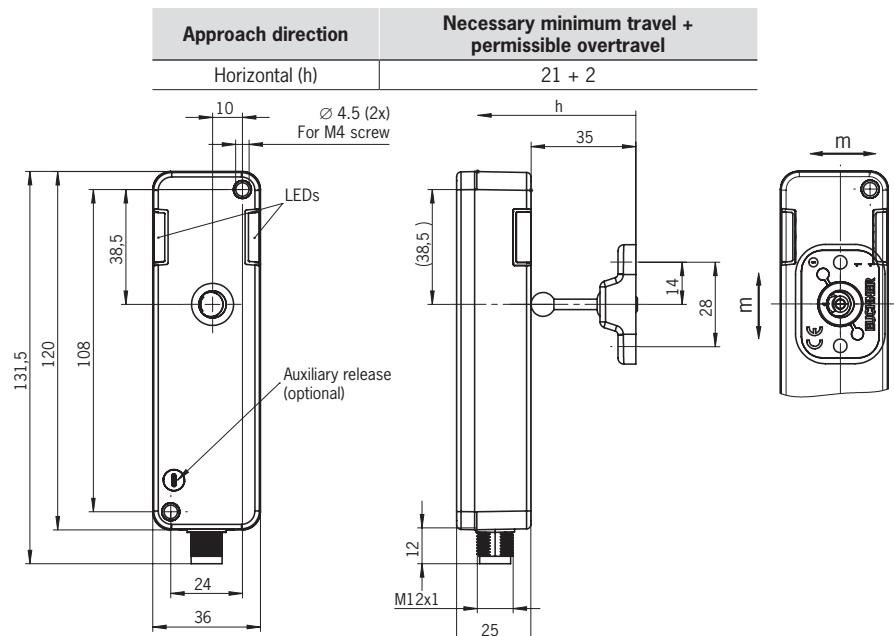**Dimension drawing**

Min. door radius [mm]

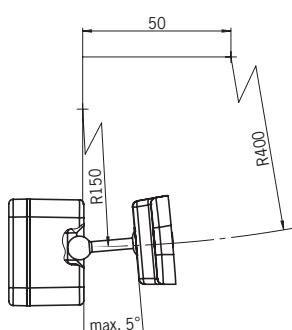



## Terminal assignment



Wiring diagram A

Pin	Designation	Function
1	IMP	Solenoid control input, 24 V DC
2	UB	Electronics and solenoid operating voltage, 24 V DC
3	FO1A	Safety output, channel A
4	FO1B	Safety output, channel B
5	OI	Diagnostic monitoring output
6	OD/C	Door position monitoring output/communication
7	OVUB	Electronics and solenoid operating voltage, 0 V DC
8	IMM	Solenoid control input, 0 V DC



Wiring diagram B

Pin	Designation	Function
1	IMP	Solenoid control input, 24 V DC
2	UB	Electronics and solenoid operating voltage, 24 V DC
3	FO1A	Safety output, channel A
4	FO1B	Safety output, channel B
5	OI	Diagnostic monitoring output
6	OD/C	Door position monitoring output/communication
7	OL	Guard lock monitoring output
8	OVUB	Electronics and solenoid operating voltage, 0 V DC




System  
family**BR**

## »Communication at 4.0 level – always up to date in series connection as well.«

---

- ▶ Can be connected in series with all BR devices (up to 20 devices)
- ▶ Quick connection via M12 connectors (depending on version)
- ▶ Evaluation via safety control systems
- ▶ Industry 4.0-compatible communication and expanded diagnostics in combination with IO-Link Gateway GWY-CB or safety relay with integrated IO-Link Gateway ESM-CB
- ▶ Two safe semiconductor outputs
- ▶ Extremely short risk time
- ▶ Own pulsing for short circuit detection
- ▶ PL e / category 4 according to EN ISO 13849-1 for up to 20 devices
- ▶ Switch chains with cable lengths up to 200 m possible

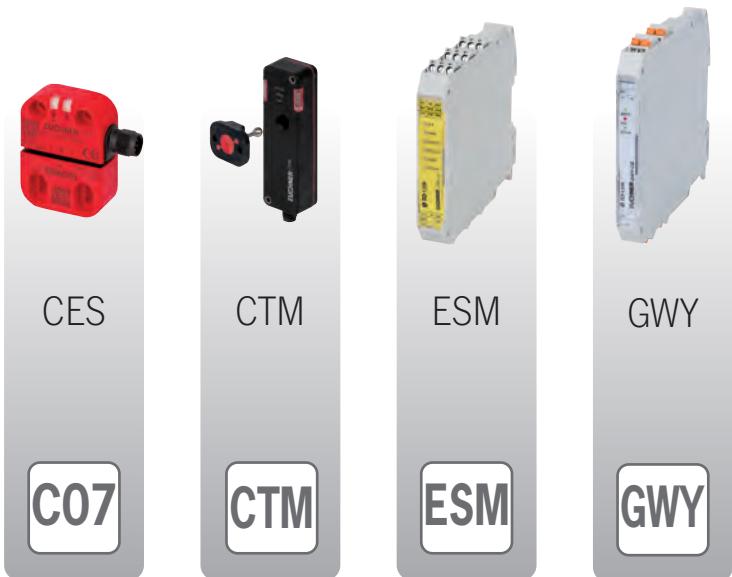System  
family**BR****BR**

**Safety switch CES-I-BR--C07-...**

- ▶ Communicating safety switch
- ▶ Industry 4.0 ready
- ▶ Small design
- ▶ 3 active faces
- ▶ Diagnostics via 2 LEDs
- ▶ Limit-range indication
- ▶ Degree of protection IP65/IP67/IP69/  
IP69K
- ▶ Mounting distance 22 mm (industrial  
standard)

**Details****Available coding options**

- ▶ Unicode evaluation
- ▶ Multicode evaluation

**Industry 4.0 ready**

The switch can communicate in combination with an EUCHNER IO-Link Gateway, and sends process and device data to higher-level control systems. Comprehensive diagnostic messages enable rapid and targeted troubleshooting.

**Housing material**

The switch is suitable for use in the food industry (ECOLAB material resistance test).

**Limit-range indication**

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time.

**LED indicator**

<b>STATE</b>	Status
<b>DIA</b>	Diagnostics

**Additional connections**

<b>OD/C</b>	Door position monitoring output and communication connection to an EUCHNER IO-Link Gateway
-------------	--

**Further information**

- ▶ For dimension drawings, see p. 25
- ▶ For accessories and spare parts, see p. 25
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**Ordering table****Safety switch**

Series	Version	Order no./item	
CES-I-BR-U-C07-... Unicode	M12 8 pin	<b>157920</b> CES-I-BR-U-C07-SA-157920	
CES-I-BR-M-C07-... Multicode	M12 8 pin	<b>156233</b> CES-I-BR-M-C07-SA-156233	 For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .

**Actuator**

Series	Design	Typ. actuating range [mm]	Order no./item	
CES-A-BDN-06	Ø6 x 26	16	<b>158210</b> CES-A-BDN-06-158210	
CES-A-BTN-07	40 x 26	13	<b>156230</b> CES-A-BTN-C07-156230	 For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .




Function expansion with CEM-C60, see page 58.

**M12** **8  
pin**

C07

**Accessories**

Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M12</b> <b>8 pin</b> Page 126
	Strapping plug/Y-distributor	<b>M12</b> Page 128
	Passive distribution module	<b>M12</b> Page 129
<b>Fixing material</b>	Safety screws	Page 144

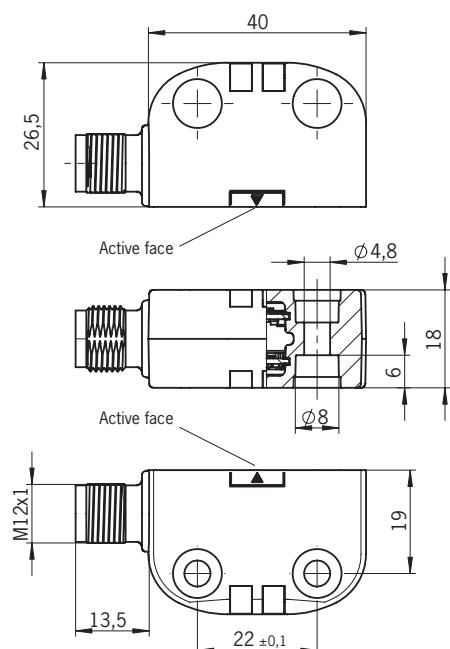**Dimension drawing****Terminal assignment**

Pin	Designation	Function
1	FI1B	Enable input, channel B
2	UB	Operating voltage, 24 V DC
3	F01A	Safety output, channel A
4	F01B	Safety output, channel B
5	OD/C	Door position monitoring output/communication
6	FI1A	Enable input, channel A
7	0V	Ground 0 V DC
8	-	n.c.

**Safety switch CES-I-BR-S-C07-...**
**INDUSTRY  
4.0  
READY**


- ▶ Communicating safety switch for reliable monitoring of several positions
- ▶ Suitable for several actuators with the same coding
- ▶ Industry 4.0 ready
- ▶ Small design
- ▶ 3 active faces
- ▶ Diagnostics via 2 LEDs
- ▶ Limit-range indication
- ▶ Degree of protection IP65/IP67/IP69/  
IP69K
- ▶ Mounting distance 22 mm (industrial  
standard)

**Details**

The safety switch is used for reliable monitoring of several positions. Identically coded actuators are mounted at each of the positions to be monitored. If a permissible code is detected, the safety outputs are switched.

**Applications**

- ▶ Rotary tables and turntables
- ▶ Safety revolving doors
- ▶ Machine slides with several stopping positions
- ▶ High-speed doors
- ▶ Safeguarding non-fixed covers

**Available coding options**

- ▶ Unicode evaluation

**Industry 4.0 ready**

The switch can communicate in combination with an EUCHNER IO-Link Gateway, and sends process and device data to higher-level control systems. Comprehensive diagnostic messages enable rapid and targeted troubleshooting.

**Actuator**

The actuators intended for the switch are available as packaging units consisting of several identically coded actuators. The switch can be put into operation only using the actuators belonging to the same packaging unit. No additional actuators can be taught-in.

Prior to setup, the code of an actuator from the packaging unit is taught-in by the safety switch in a teach-in operation. The switch thereby accepts all actuators from this package.

**Housing material**

The switch is suitable for use in the food industry (ECOLAB material resistance test).

**Limit-range indication**

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time.

**LED indicator**

<b>STATE</b>	Status
<b>DIA</b>	Diagnostics

**Additional connections**

<b>OD/C</b>	Door position monitoring output and communication connection to an EUCHNER IO-Link Gateway
-------------	--

**Further information**

- ▶ For dimension drawings, see p. 27
- ▶ For accessories and spare parts, see p. 27
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**Ordering table****Safety switch**

Series	Version	Order no./item	
CES-I-BR-S-C07-... Unicode	M12 8 pin	<b>165914</b> CES-I-BR-S-C07-SA-165914	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .

**Actuator**


Series	Design	Typ. actuating range [mm]	Packaging unit [qty.]	Order no./item	
S-C07-04-...		40 x 26	13	2	<b>165928</b> S-C07-04-V02-165928
				3	<b>166488</b> S-C07-04-V03-166488



Function expansion with CEM-C60, see page 58.

**M12** **8 pin**
**C07**
**Accessories**

Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M12</b> <b>8 pin</b> Page 126
	Strapping plug/Y-distributor	<b>M12</b> Page 128
	Passive distribution module	<b>M12</b> Page 129
<b>Fixing material</b>	Safety screws	Page 144

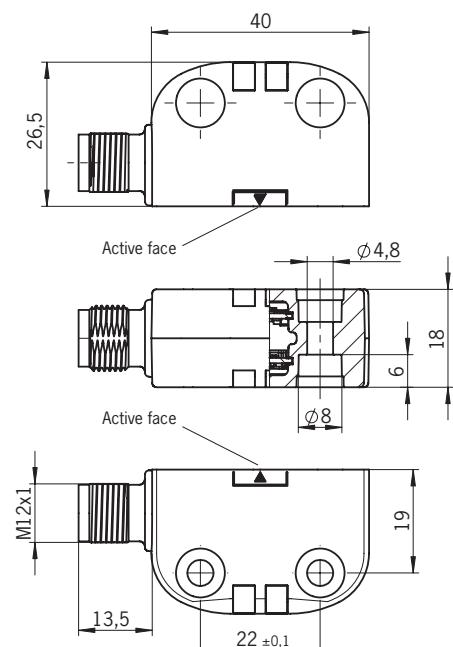**Dimension drawing****Terminal assignment**

Pin	Designation	Function
1	FI1B	Enable input, channel B
2	UB	Operating voltage, 24 V DC
3	FO1A	Safety output, channel A
4	FO1B	Safety output, channel B
5	OD/C	Door position monitoring output/communication
6	FI1A	Enable input, channel A
7	OV	Ground 0 V DC
8	-	n.c.

## Safety switch CTM-.BI-BR-... with guard locking

INDUSTRY  
**4.0**  
READY

- ▶ Communicating safety switch
- ▶ Industry 4.0 ready
- ▶ Safety switch with guard locking
- ▶ Locking force up to 1,300 N
- ▶ Diagnostics via 3 LEDs
- ▶ Hygienic version available

### Notice

The device is only allowed to be operated in conjunction with the actuators A-B-A1-A1-....

### Details

#### Available coding options

- ▶ Unicode evaluation
- ▶ Multicode evaluation

#### Industry 4.0 ready

The switch can communicate in combination with an EUCHNER IO-Link Gateway, and sends process and device data to higher-level control systems. Comprehensive diagnostic messages enable rapid and targeted troubleshooting.

#### Guard locking types

LBI BiState

Control input for guard locking. This type of guard locking has a function to prevent the activated guard locking from being deactivated during a power failure.

### Auxiliary release (optional)

Some devices have an auxiliary release (see ordering table).

#### LED indicator

STATE	Status
LOCK	Guard locking
DIA	Diagnostics

#### Additional connections

OD/C	Door position monitoring output and communication connection to an EUCHNER IO-Link Gateway
OI	Diagnostic monitoring output
OL	Guard lock monitoring output

### Further information

- ▶ For dimension drawings, see p. 30
- ▶ For accessories and spare parts, see p. 29
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

## Ordering table

CTM-.BI-BR-...-SA-... with plug connectors M12, 8-pin

M12 8 pin	Order no./item	Coding U = unicode M = multicode	Auxiliary release	Adhesive force [N]	Hygienic version	Guard locking Personnel/process protection	For wiring diagram, see page 31	
<b>CTM-LBI</b> BiState								
<b>161638</b> CTM-LBI-BR-U-AZ-SA-161638	U	●		50				
<b>161639</b> CTM-LBI-BR-U-AZ-SA-161639	U	●		25				
<b>161496</b> CTM-LBI-BR-U-ZZ-SAP-161496	U			50	●			
<b>161640</b> CTM-LBI-BR-U-ZZ-SAP-161640	U			25	●			
<b>165517</b> CTM-LBI-BR-M-AZ-SA-165517	M	●		25				

For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

## CTM-BI-BR-...-SP-... with plug connectors M12, 12-pin

Order no./item	Coding U = unicode M = multicode	Auxiliary release	Adhesive force [N]	Hygienic version	Guard locking Personnel/process protection	For wiring diagram, see page 31	
<b>CTM-LBI</b> BiState							
<b>166091</b> CTM-LBI-BR-U-AZ-SP-166091	U	●	25				
<b>166092</b> CTM-LBI-BR-MAZ-SP-166092	M	●	25				For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .


## Actuator

Series	Design	Color	Order no./item	
<b>A-B-A1-A1-...</b>	Standard	BK/RD	<b>161642</b> A-B-A1-A1-161642	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	P Hygienic version	BK/BU	<b>161643</b> A-B-A1-A1-P-161643	

## Accessories

Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M12</b> <b>8 pin</b> Page 123
	Strapping plug/Y-distributor	<b>M12</b> Page 128
	Passive distribution module	<b>M12</b> Page 129
<b>Fixing material</b>	Safety screws	Page 144

## Dimension drawing

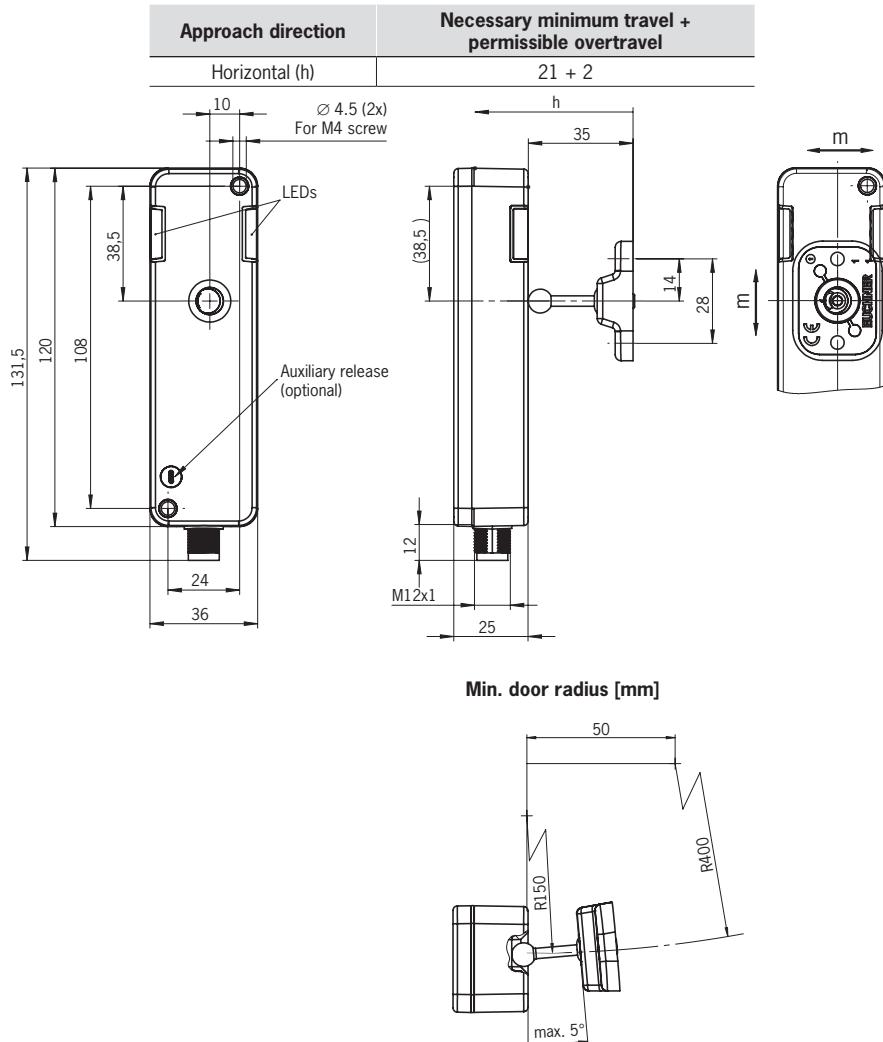



## Terminal assignment



Pin	Designation	Function
1	FI1B	Enable input, channel B
2	UB	Electronics and solenoid operating voltage, 24 V DC
3	FO1A	Safety output, channel A
4	FO1B	Safety output, channel B
5	OD/C	Door position monitoring output/communication
6	FI1A	Enable input, channel A
7	OVUB	Electronics and solenoid operating voltage, 0 V DC
8	IMP	Solenoid control input, 24 V DC



Pin	Designation	Function
1	UB	Electronics and solenoid operating voltage, 24 V DC
2	FI1A	Enable input, channel A
3	OVUB	Electronics and solenoid operating voltage, 0 V DC
4	FO1A	Safety output, channel A
5	OD/C	Door position monitoring output/communication
6	FI1B	Enable input, channel B
7	FO1B	Safety output, channel B
8	RST	Reset input
9	OL	Guard lock monitoring output
10	IMP	Solenoid control input, 24 V DC
11	OI	Diagnostic monitoring output
12	IMM	Solenoid control input, 0 V DC

**BR/IO-Link Gateway GWY-CB**

- ▶ Transfer of process and device data to a higher-level control system via IO-Link
- ▶ Compact version measuring only 12.5 mm in width
- ▶ Process-data transfer in real time
- ▶ Minimal wiring effort

**Details**

Data can be read from a BP safety switch or a BR safety switch chain using the IO-Link Gateway. Process data are cyclically sent to the control system via IO-Link. These data include all status signals, such as the position of the door or guard locking, and the indication of whether a switch is out of adjustment. The process data are available in the control system within 200 ms, enabling the data to be used for automation.

Moreover, acyclical services can be used to collect environmental data such as the switch temperature, the applied voltage and other values.

**LED indicator**

DIA	Diagnostic message
BR/FC	BR communication/error codes
IO-Link	IO-Link communication

**Further information**

- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).
- ▶ You will find information on the series connection of BR devices on page 6.


**Ordering table****BR/IO-Link Gateway**

Series	Order no./item	
GWY-CB-...	<b>165049</b> GWY-CB-1-BR-IO-165049	


For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**Which safety switches can be connected?**

BR/IO-Link Gateway	Safety switch
<b>165049</b> GWY-CB-1-BR-IO-165049	Series CES-C07
	Series CTM

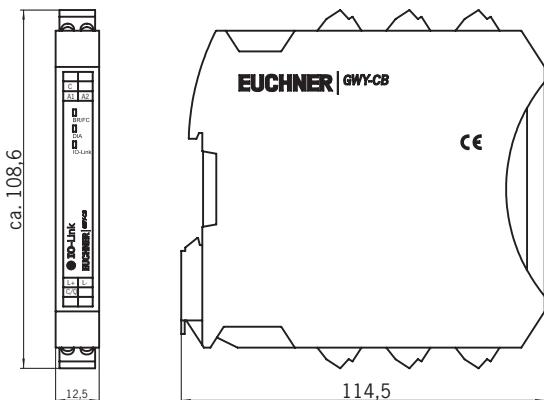**Dimension drawing**

## Block diagram

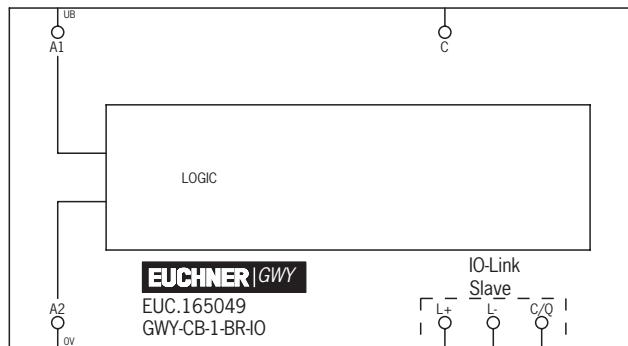

## Terminal assignment

Connection	Designation	Function
A1	<b>A1</b>	Operating voltage, 24 V DC
A2	<b>A2</b>	Ground 0 V DC
C	<b>C</b>	Safety switch communication
BR/FC	<b>C/Q</b>	IO-Link switching and communication line
DIA		
IO-Link	<b>L+/L-</b>	Power supply for IOL master IO-Link
<b>EUCHNER   GWY-CB</b>		
L+	<b>L+</b>	
C/Q	<b>C/Q</b>	

## Safety relay ESM-CB with integrated BR/IO-Link Gateway



- ▶ Evaluation unit, safety relay and IO-Link Gateway in a single device
- ▶ Connection option for two safety circuits
- ▶ 2 safety inputs for up to 20 safety switches with BR communication
- ▶ Compact version measuring only 18 mm in width
- ▶ Transfer of process and device data to a higher-level control system via IO-Link
- ▶ Process-data transfer in real time

### Details

Two safety circuits can be connected to the input side. Equipment such as an emergency stop chain and mechanical safety switches can be connected to one safety circuit. EUCHNER safety switches from system family BP or BR can be connected to the second safety circuit.

#### IO-Link Gateway

Data can be read from safety switches with BR communication using the IO-Link Gateway. Process data are cyclically sent to the control system via IO-Link. These data include all status signals, such as the position of the door or guard locking, and the indication of whether a switch is out of adjustment. The process data are available in the control system within 200 ms, enabling the data to be used for automation.

Moreover, acyclical services can be used to collect environmental data such as the switch temperature, the applied voltage and other values.

#### Space for more

- ▶ Start input for automatic start or a monitored start button
- ▶ Monitoring of downstream relays or contactors (feedback loop)
- ▶ Simultaneity monitoring to monitor safety components over time

▶ Short circuit monitoring to detect short circuits between the connecting cables and to shut down the outputs or prevent relay starting if necessary

▶ Earth fault/ground fault monitoring to detect short circuits between the connecting cables and earth or ground and to shut down the outputs or prevent relay starting if necessary.

#### LED indicator

DIA	Diagnostic message
STATE 1	Status of sensor circuit S1
STATE 2	Status of sensor circuit S2
K1/K2	Status of safety circuits K1 and K2

IO-Link      IO-Link communication

### Further information

- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).
- ▶ You will find information on the series connection of BR devices on page 6.

## Ordering table

### Safety relay with integrated IO-Link Gateway


Series	Order no./item	
ESM-CB-...	<b>158875</b> ESM-CB-AZ-FI2-BR-IO-158875	

For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).


## Which safety switches can be connected?

Safety relay	Safety switch
<b>158875</b> ESM-CB-AZ-FI2-BR-IO-158875	Series CES-C07 Series CTM

## Dimension drawing

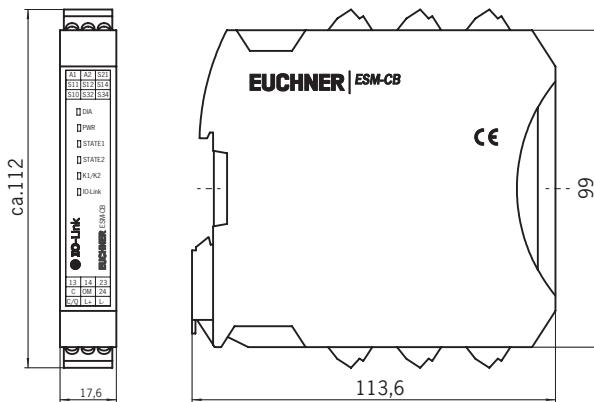

## Block diagram

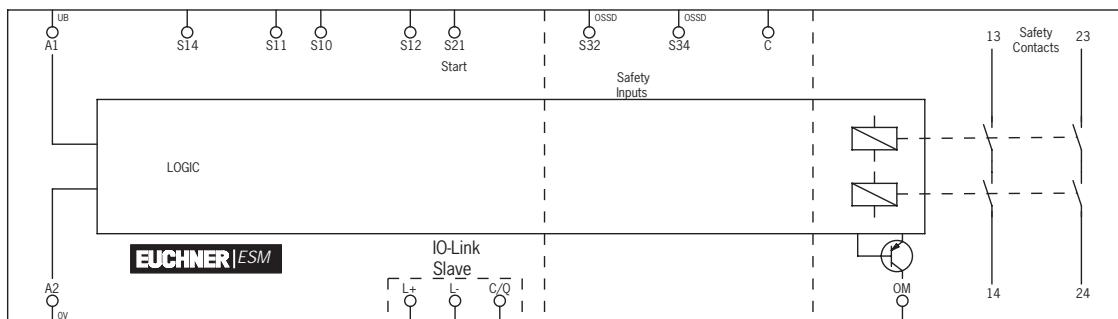

## Terminal assignment

Connection	Designation	Function
A1   A2   S21	<b>A1</b>	Operating voltage, 24 V DC
S11   S12   S14	<b>A2</b>	Ground 0 V DC
S10   S32   S34	<b>S10</b>	Supply input for S14
<input type="checkbox"/> DIA	<b>S11</b>	Supply output for S12 and S21
<input type="checkbox"/> PWR	<b>S12</b>	Sensor circuit S1 input (channel 1)
<input type="checkbox"/> STATE1	<b>S14</b>	Sensor circuit S1 input (channel 2)
<input type="checkbox"/> STATE2	<b>S21</b>	Input for start circuit
<input type="checkbox"/> K1/K2	<b>S32</b>	OSSD sensor circuit S2 input (channel 1), input for FO1A from BR series connection
<input type="checkbox"/> IO-Link	<b>S34</b>	OSSD sensor circuit S2 input (channel 2), input for FO1B from BR series connection
<b>13/14</b>		Safety contact, non-time-delay
<b>23/24</b>		Safety contact, non-time-delay
<b>C</b>		Safety switch communication
<b>OM</b>		Digital monitoring output
<b>C/Q</b>		IO-Link switching and communication line
<b>L+/L-</b>		IO-Link supply
13   14   23		
C   OM   24		
C/Q   L+   L-		

»Connect pulsed signals via  
the safe semiconductor  
outputs on up to three  
safety switches in series.«

- 
- ▶ Suitable for switching pulsed signals
  - ▶ Very large actuating range
  - ▶ Two safe semiconductor outputs
  - ▶ Monitoring output (depending on version)
  - ▶ Series connection of up to 3 devices possible
  - ▶ Cable lengths up to 300 m possible
  - ▶ ATEX version available
  - ▶ PL e / category 3 or 4 according to EN ISO 13849-1

System  
family

A



CES

C05

**Safety switch CES-A-5...**

- ▶ Standard housing (EN 60947-5-2)
- ▶ 1 active face; can be repositioned in 5 directions
- ▶ Diagnostics via 2 LEDs
- ▶ Large actuating range
- ▶ PL e/category 3 or 4
- ▶ ATEX version available

**Details****Available coding options**

- ▶ Unicode evaluation
- ▶ Multicode evaluation

**Category according to EN ISO 13849-1**

Due to two redundantly designed semiconductor outputs (safety outputs) with internal monitoring suitable for:

- ▶ CES-A-C5E-01, category 3/PL e according to EN ISO 13849-1
- ▶ CES-A-C5H-01/CES-A-W5H-01, category 4/PL e according to EN ISO 13849-1

**LED indicator**

**STATE** Status

**OUT/ERROR** Status of safety outputs/diagnostics (combined)

**Additional connections**

**OUT** Monitoring output (semiconductor)

**ATEX version**

There is a version of this device for use in potentially explosive atmospheres. For explosion protection, see marking in the ordering table.

**Important:** Use only ATEX actuators for ATEX devices.

**Notice**

On devices with unicode evaluation, the number of teach-in operations is restricted to eight.

**(i) Further information**

- ▶ For dimension drawings, see p. 39
- ▶ For accessories and spare parts, see p. 39
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**Ordering table****Safety switch**

Series	Version	Order no./item	
CES-A-C5... Unicode	-	<b>077750</b> CES-A-C5E-01	
CES-A-W5... Multicode		<b>091458</b> CES-A-C5H-01	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
CES-A-C5H-01-EX Unicode		<b>097525</b> CES-A-W5H-01	
		<b>097945<sup>1)</sup></b> CES-A-C5H-01-EX	

1) II3G Ex ic ec IIB T5 Gc X, II3D Ex ic tc IIIC T90°C Dc X

**Actuator**



Series	Design	Typ. actuating range [mm]	Order no./item	
CES-A-BPA	40 x 40	22	<b>098775</b> CES-A-BPA	
CES-A-BBA	42 x 25	20	<b>071840</b> CES-A-BBA	
CES-A-BCA	42 x 25 Material: PE-HD	20	<b>088786</b> CES-A-BCA	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
CES-A-BPA-EX-102125	40 x 40	22	<b>102125</b> CES-A-BPA-EX-102125	
CES-A-BBA-EX-098158	42 x 25	20	<b>098158</b> CES-A-BBA-EX-098158	

M12  
8 pin

C05

**Accessories**

Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M12</b> <b>8 pin</b>
<b>Bolts</b>	Bolts for housing design C05	
<b>Fixing material</b>	Safety screws	Page 144

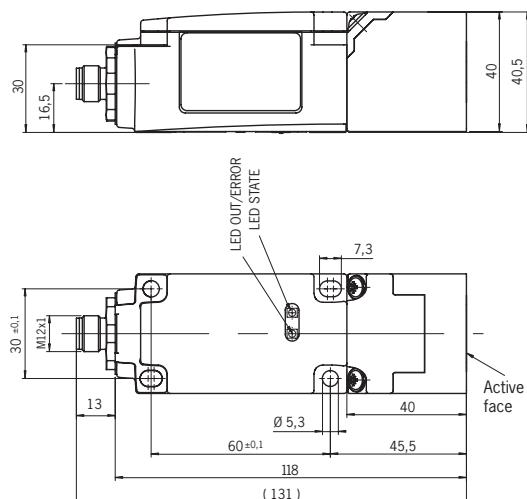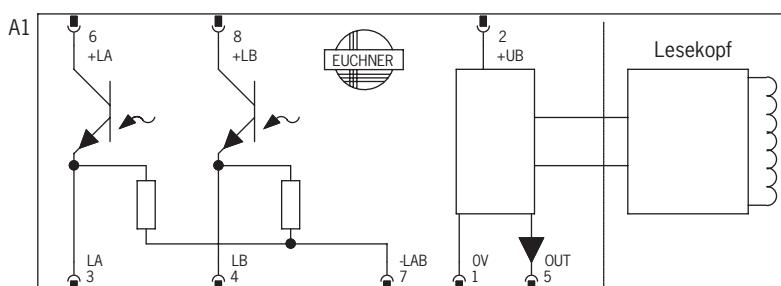**Dimension drawing****Block diagram****Terminal assignment**

Pin	Designation	Function
1	0V	Ground 0 V DC
2	+UB	Operating voltage, 24 V DC
3	LA	Safety output, channel A
4	LB	Safety output, channel B
5	OUT	Door position monitoring output
6	+LA	Safety input, channel A
7	-LAB	Common ground for channel A and channel B inputs
8	+LB	Safety input, channel B

»Developed with a focus  
on the essentials – a lot of  
safety with little effort.«

- 
- ▶ Safety switches for separate operation
  - ▶ Direct connection to IP67 field modules for various decentralized peripheral systems  
(depending on version)
  - ▶ Two safe semiconductor outputs
  - ▶ Own pulsing for short circuit detection
  - ▶ Connection via plug connectors
  - ▶ Cable lengths up to 200 m possible
  - ▶ PL e / category 4 according to EN ISO 13849-1
  - ▶ Large selection of devices

System  
family

# AP/AY



**Safety switch CES-AP-C01-...**

- ▶ 1 active face; can be repositioned in 5 directions
- ▶ Large actuating range
- ▶ Limit-range indication
- ▶ Diagnostics via 2 LEDs
- ▶ Standard housing according to EN 60947-5-2
- ▶ Degree of protection IP67

**Details****Available coding options**

- ▶ Unicode evaluation
- ▶ Multicode evaluation

**Limit-range indication**

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time.

**Connection to IP67 field modules**

Devices with M12 plug connector, 5-pin, without monitoring output are optimized for direct connection to field modules, such as ET200pro from Siemens or comparable devices from other manufacturers.

**LED indicator**

<b>STATE</b>	Status
<b>DIA</b>	Diagnostics

**Additional connections**

<b>DIA</b>	Diagnostic monitoring output (semiconductor)
<b>RST</b>	Reset input

**Further information**

- ▶ For dimension drawings, see p. 43
- ▶ For accessories and spare parts, see p. 43
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**Ordering table****Safety switch**

Series	Version	Order no./item	
CES-AP-C01-AH-... Unicode	       	Without monitoring output	<b>111145</b> CES-AP-C01-AH-SB-111145
CES-AP-C01-CH-... Multicode			<b>111708</b> CES-AP-C01-CH-SB-111708
CES-AP-C01-CH-SB Multicode		With monitoring output	<b>106798</b> CES-AP-C01-CH-SB-106798
CES-AP-C01-CH-SA Multicode		With monitoring output	<b>100250</b> <sup>1)</sup> CES-AP-C01-CH-SA-100250

1) German Social Accident Insurance approval

**Actuator**

Series	Design	Typ. actuating range [mm]	Order no./item	
CES-A-BRN		80 x 40	27	<b>100251</b> CES-A-BRN-100251
CES-A-BPA		40 x 40	22	<b>098775</b> CES-A-BPA
CES-A-BBA		42 x 25	18	<b>071840</b> CES-A-BBA
CES-A-BCA		42 x 25 Material: PE-HD	18	<b>088786</b> CES-A-BCA
CES-A-BDA-18		Ø18	19	<b>156935</b> CES-A-BDA-18


For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).


M12 5 pin M12 8 pin

C01

#### Accessories

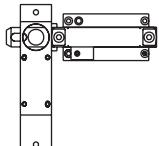Type	Version	
<b>Connection material</b>	Connecting cable with plug connector	 
		 
<b>Bolts</b>	Bolts for housing design C01	
<b>Fixing material</b>	Safety screws	

#### Dimension drawing

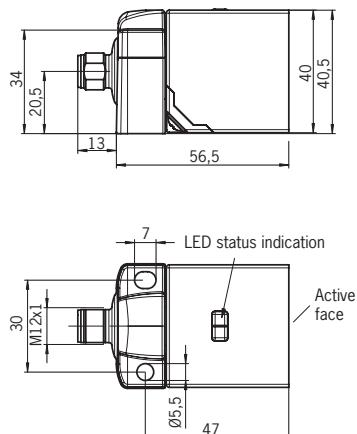

#### Terminal assignment

8 pin	5 pin	Without monitoring output (pin 5 not used)	Designation	Function
With monitoring output	With monitoring output	Without monitoring output (pin 5 not used)		
1	-	-	-	n.c.
2	1	1	UB	Operating voltage, 24 V DC
3	2	2	OA	Safety output, channel A
4	4	4	OB	Safety output, channel B
5	5	-	DIA	Diagnostic monitoring output
6	-	-	-	n.c.
7	3	3	OV	Ground 0 V DC
8	-	-	RST	Reset input

**Safety switch CES-AP-C.2-...**

- ▶ Diagnostics via 2 LEDs
- ▶ 2 active faces
- ▶ Limit-range indication
- ▶ Direct mounting on aluminum profiles
- ▶ Large temperature range (depending on version)
- ▶ Reinforcement plates and safety screws included
- ▶ Degree of protection IP67/IP69/IP69K

**Details****Available coding options**

- ▶ Unicode evaluation
- ▶ Multicode evaluation

**Limit-range indication**

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time.

**Connection to IP67 field modules**

Devices with M12 plug connector, 5-pin, without monitoring output are optimized for direct connection to field modules, such as ET200pro from Siemens or comparable devices from other manufacturers.

**Large temperature range**

Devices with connecting cable and flying lead have a temperature range from -40 °C to +65 °C (with rigid cable laying).

**LED indicator**

<b>STATE</b>	Status
<b>DIA</b>	Diagnostics

**Additional connections**

<b>OUT</b>	Monitoring output (semiconductor); not present on all versions.
------------	---

**Further information**

- ▶ For dimension drawings, see p. 46
- ▶ For accessories and spare parts, see p. 46
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**Ordering table****Safety switch**

Series	Version	Door hinge <sup>1)</sup>	Order no./item	
CES-AP-C.2-AH-... Unicode	    	With monitoring output	<b>105295</b> CES-AP-CR2-AH-SF-105295	  For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
		With monitoring output	<b>105294</b> CES-AP-CL2-AH-SF-105294	
		With monitoring output	<b>106552</b> CES-AP-CR2-AH-SB-106552	
		Without monitoring output	<b>106553</b> CES-AP-CL2-AH-SB-106553	
		Without monitoring output	<b>111748</b> CES-AP-CR2-AH-SB-111748	
	  	With monitoring output	<b>111747</b> CES-AP-CL2-AH-SB-111747	
		With monitoring output	<b>105601</b> CES-AP-CR2-AH-L05-105601	
		With monitoring output	<b>105603</b> CES-AP-CL2-AH-L05-105603	
		With monitoring output	<b>106191</b> CES-AP-CR2-AH-L10-106191	
		With monitoring output	<b>106192</b> CES-AP-CL2-AH-L10-106192	

1) Applies to the following orientation: connection/cable outlet pointing downward


Series	Version	Door hinge <sup>1)</sup>	Order no./item	
CES-AP-C.2-CH-... Multicode	 <b>click</b> <b>6 pin</b>	With monitoring output	 <b>100775</b> CES-AP-CR2-CH-SF-100775	 For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
			 <b>104509</b> CES-AP-CL2-CH-SF-104509	
	 <b>M12</b> <b>5 pin</b>	With monitoring output	 <b>106550</b> CES-AP-CR2-CH-SB-106550	
			 <b>106551</b> CES-AP-CL2-CH-SB-106551	
		Without monitoring output	 <b>109168</b> CES-AP-CR2-CH-SB-109168	
			 <b>109167</b> CES-AP-CL2-CH-SB-109167	
	 <b>PVC</b> <b>2m</b>	With monitoring output	 <b>123922</b> CES-AP-CR2-CH-SB-123922	
			 <b>105600</b> CES-AP-CR2-CH-L05-105600	
	 <b>6 wire</b> <b>PVC</b>	With monitoring output	 <b>105602</b> CES-AP-CL2-CH-L05-105602	
			 <b>106189</b> CES-AP-CR2-CH-L10-106189	
		With monitoring output	 <b>106190</b> CES-AP-CL2-CH-L10-106190	


1) Applies to the following orientation: connection/cable outlet pointing downward

#### Actuator

Series	Design	Typ. actuating range [mm]	Order no./item	
CES-A-BDN-06	 <b>Ø6 x 26</b>	19	<b>104730</b> CES-A-BDN-06-104730	 For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
CES-A-BLN-...	 <b>95 x 30</b>	15	<b>100776</b> CES-A-BLN-R2-100776	
	 <b>55 x 30</b>	15	<b>104510</b> CES-A-BLN-L2-104510	
	Independent of the door hinge	15	<b>103450</b> CES-A-BLN-U2-103450	

**Accessories**

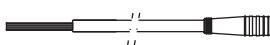Type	Version	
Connection material	Connecting cable with plug connector 	<b>click</b> <b>6 pin</b> Page 120
	Connecting cable with plug connector 	<b>M12</b> <b>5 pin</b> Page 123
Fixing material	Safety screws	Page 144

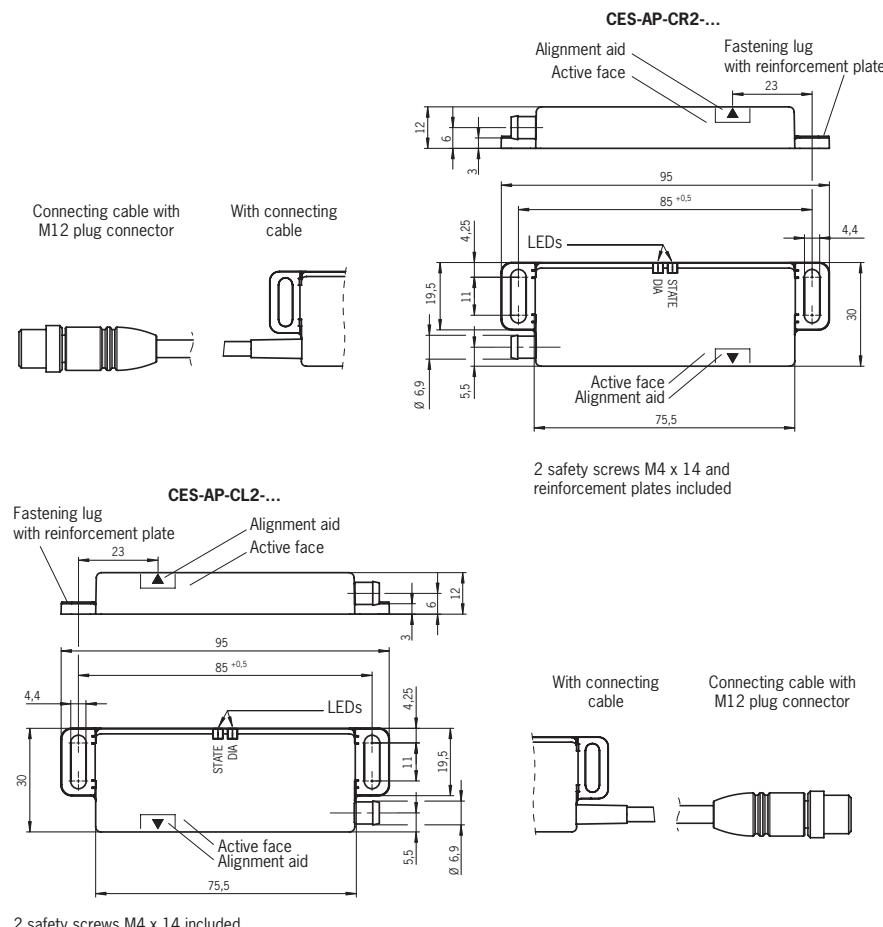**Dimension drawing**



## Terminal assignment

6 pin	6 wire	5 pin	Without monitoring output (pin 5 not used)	Designation	Function	Conductor coloring
With monitoring output	With monitoring output			UB	Operating voltage, 24 V DC	BN
1	1	1		OA	Safety output, channel A	WH
2	2	2		OV	Ground 0 V DC	BU
3	3	3		OB	Safety output, channel B	BK
4	4	4		OUT	Door position monitoring output	GY
5	5	—		—	n.c.	PK
6	—	—		—		

**Safety switch CES-I-AP-.-C04-...**

- ▶ Small design
- ▶ 3 active faces
- ▶ Diagnostics via 2 LEDs
- ▶ Limit-range indication
- ▶ Degree of protection IP67
- ▶ Mounting distance 32 mm (EUCHNER standard)
- ▶ ATEX protective cover (optional)
- ▶ Function expansion with magnetic guard locking CEM-C60
- ▶ Version with integrated AS-Interface Safety at Work available, see [www.euchner.com](http://www.euchner.com)

**Details****Available coding options**

- ▶ Unicode evaluation
- ▶ Multicode evaluation

**Limit-range indication**

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time.

**Connection to IP67 field modules**

Devices with M12 plug connector, 5-pin, without monitoring output are optimized for direct connection to field modules, such as ET200pro from Siemens or comparable devices from other manufacturers.

**Rubber support**

A rubber support is included with each switch and actuator and is intended to prevent the accumulation of soiling in the area of the mounting holes.

**LED indicator**

<b>STATE</b>	Status
<b>DIA</b>	Diagnostics

**Additional connections**

<b>OD</b>	Monitoring output (semiconductor); not present on all versions
-----------	--

**ATEX protective cover**

Housing guard AM-C-C04-EX-137528 is required for use in potentially explosive atmospheres. See accessories on p. 50.

**Further information**

- ▶ For dimension drawings, see p. 50
- ▶ For accessories and spare parts, see p. 50
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**Ordering table****Safety switch**

Series	Version	Order no./item	
CES-I-AP-U-C04-... Unicode	<b>M8</b> <b>4 pin</b> <b>M12</b> <b>5 pin</b> <b>PUR</b> <b>0,1m</b> <b>0,22m</b> <b>5m</b> <b>10m</b> <b>20m</b>	Without monitoring output	<b>115324</b> CES-I-AP-U-C04-SK-115324
		Without monitoring output	<b>115150</b> CES-I-AP-U-C04-USI-115150
		With monitoring output	<b>116502</b> CES-I-AP-U-C04-USB-116502
		With monitoring output	<b>116503</b> CES-I-AP-U-C04-U05-116503
		With monitoring output	<b>116504</b> CES-I-AP-U-C04-U10-116504
		With monitoring output	<b>116505</b> CES-I-AP-U-C04-U20-116505
			For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .

Series	Version	Order no./item	
CES-I-AP-M-C04-... Multicode	M8 4 pin Without monitoring output	<b>117325</b> CES-I-AP-M-C04-SK-117325	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	0,1m Without monitoring output	<b>117323</b> CES-I-AP-M-C04-USI-117323	
	M12 5 pin PUR 0,22m With monitoring output	<b>117324</b> CES-I-AP-M-C04-USB-117324	
	1,5m Without monitoring output	<b>160832</b> CES-I-AP-M-C04-USI-160832	
	2m Without monitoring output	<b>162592</b> CES-I-AP-M-C04-USI-162592	
	5m With monitoring output	<b>117328</b> CES-I-AP-M-C04-U05-117328	
	5 wire PUR 10m With monitoring output	<b>117329</b> CES-I-AP-M-C04-U10-117329	
	20m With monitoring output	<b>117330</b> CES-I-AP-M-C04-U20-117330	




**Actuator**


Series	Design	Typ. actuating range [mm]	Order no./item	
CES-A-BDN-06	Ø6 x 26	19	<b>104730</b> CES-A-BDN-06-104730	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	Ø6 x 38	26	<b>161742</b> CES-A-BDN-06-161742	
CES-A-BBN-C04	42 x 25	15	<b>115271</b> CES-A-BBN-C04-115271	
CES-A-BBN-161502	42 x 25	26	<b>161502</b> CES-A-BBN-161502	
CES-A-BBN-C04-EX-137527	42 x 25	15	<b>137527</b> CES-A-BBN-C04-EX-137527	



Function expansion with CEM-C60, see page 58.

**Accessories**

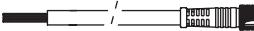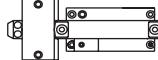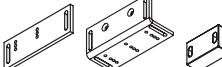Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M8</b> <b>4 pin</b> Page 121
	Connecting cable with plug connector 	<b>M12</b> <b>5 pin</b> Page 123
<b>Bolts</b>	Bolts for housing design C04 	Page 138
<b>Fixing material</b>	Mounting sets 	Page 142
	Safety screws	Page 144
 <b>Housing guard</b>	Housing guard ATEX for switches 	Page 144

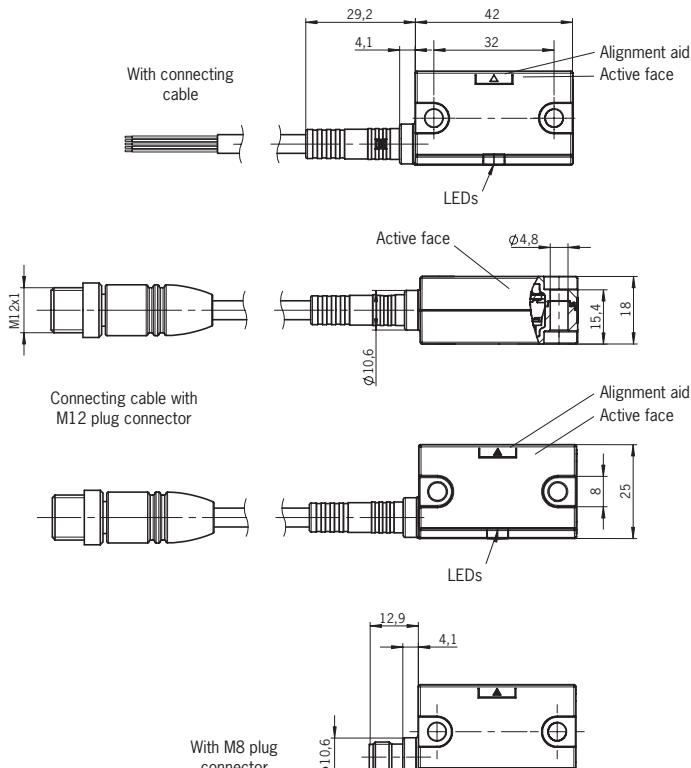**Dimension drawing**



C04

## Terminal assignment

With monitoring output 5 pin	Without monitoring output 5 wire pin 5 not used	Without monitoring output 4 pin	Designation	Function	Conductor coloring
1	1	1	UB	Operating voltage, 24 V DC	BN
2	2	2	F01A	Safety output, channel A	WH
3	3	3	0V	Ground 0 V DC	BU
4	4	4	F01B	Safety output, channel B	BK
5	-	-	OD	Door position monitoring output	GY

**Safety switch CES-I-AP--C14-...**

- ▶ Safety switch CES-C04 encapsulated in epoxy resin
- ▶ Very high resistance to aggressive media
- ▶ 3 active faces
- ▶ Diagnostic LEDs are easily visible through the transparent sleeve
- ▶ Large actuating range in frontal and lateral approach directions
- ▶ Degree of protection IP65/IP67/IP69/  
IP69K

**Details****Available coding options**

- ▶ Unicode evaluation
- ▶ Multicode evaluation

**Housing material**

The epoxy resin housing material is suitable for use in the food industry (ECOLAB material resistance test).

**Limit-range indication**

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time.

**LED indicator**

<b>STATE</b>	Status
<b>DIA</b>	Diagnostics

**Additional connections**

<b>OD</b>	Monitoring output (semiconductor)
-----------	-----------------------------------

**Further information**

- ▶ For dimension drawings, see p. 53
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**Ordering table****Safety switch**


Series	Version	Order no./item	
CES-I-AP-U-C14-... Unicode	 <b>5 wire</b> <b>PUR</b> <b>20m</b> With monitoring output	<b>158632</b> CES-I-AP-U-C14-U20-158632	
CES-I-AP-M-C14-... Multicode	 <b>5 wire</b> <b>PUR</b> <b>20m</b> With monitoring output	<b>158631</b> CES-I-AP-M-C14-U20-158631	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .

**Actuator**

Series	Design	Typ. actuating range [mm]	Order no./item	
CES-A-BBN-C14 encapsulated with epoxy resin	 72 x 30	24	<b>160441</b> CES-A-BBN-C14-160441	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .



## Dimension drawing

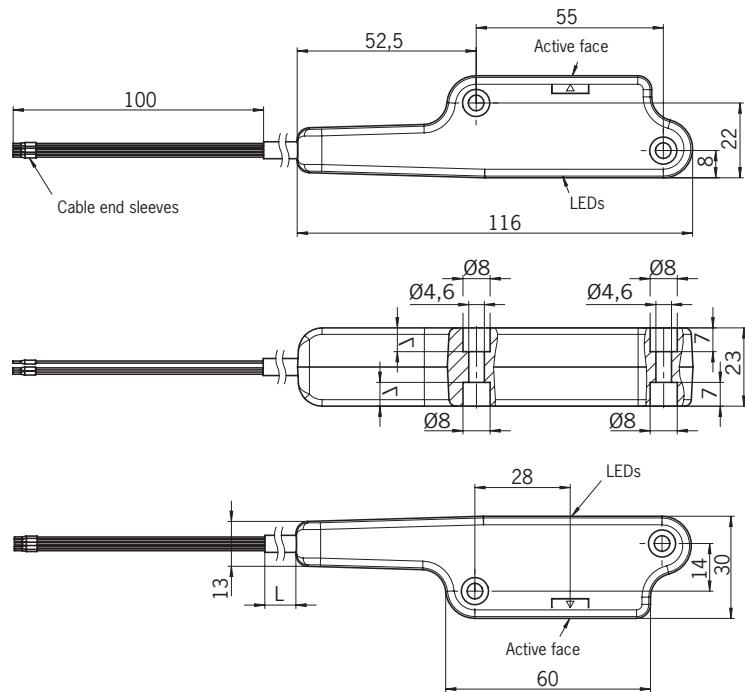

## Terminal assignment

Conductor coloring	Designation	Function
BN	UB	Operating voltage, 24 V DC
WH	FO1A	Safety output, channel A
BU	OV	Ground 0 V DC
BK	FO1B	Safety output, channel B
GY	OD	Door position monitoring output

**Safety switch CEM-I2-AY-.C40-...**  
 with guard locking for process protection


- ▶ Safety switch with guard locking for process protection
- ▶ Locking force 600 N
- ▶ Diagnostics via 4 LEDs
- ▶ Adjustable adhesive force (with guard locking inactive)
- ▶ Limit range indication for transponder and anchor plate

**Notice**

The safety switch CEM-I2-AY-.C40-... is only allowed to be operated in conjunction with the actuator A-C40.

**Details****Available coding options**

- ▶ Unicode evaluation

**Adjustable adhesive force**

The adhesive force can be set in steps of 0 N, approx. 30 N and approx. 50 N (delivery state) with the aid of a parametrization key (order no. 125481). The adhesive force is active if guard locking is inactive. The operating voltage  $U_B$  must be present for this purpose.

**Limit-range indication**

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in

time. The device also signals if the guard locking force is less than 400 N on switching on.

**LED indicator**

<b>POWER</b>	Operating voltage
<b>STATE</b>	Status
<b>DIA</b>	Diagnostics
<b>LOCK</b>	Guard locking

**Further information**

- ▶ For dimension drawings, see p. 55
- ▶ For accessories and spare parts, see p. 54
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**Ordering table****Safety switch**

Series	Version	Monitoring outputs	Order no./item	
CEM-I2-AY-... Unicode	 		<b>128103</b> CEM-I2-AY-U-C40-SA-128103	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
			<b>157549</b> CEM-I2-AY-U-C40-LZ-SA-157549	

**Actuator**


Series	Design	Order no./item	
A-C40	Adjustable in transverse direction	<b>113869</b> A-C40-113869	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	Adjustable in longitudinal direction	<b>158436</b> A-C40-158436	
Parameterization key		<b>125481</b> A-TI-001-125481	

**Accessories**

Type	Version	
Connection material	Connecting cable with plug connector 	 
Fixing material	Mounting bracket	
	Safety screws	
Miscellaneous accessories	Lockout bar	



## Dimension drawing

**Safety switch**

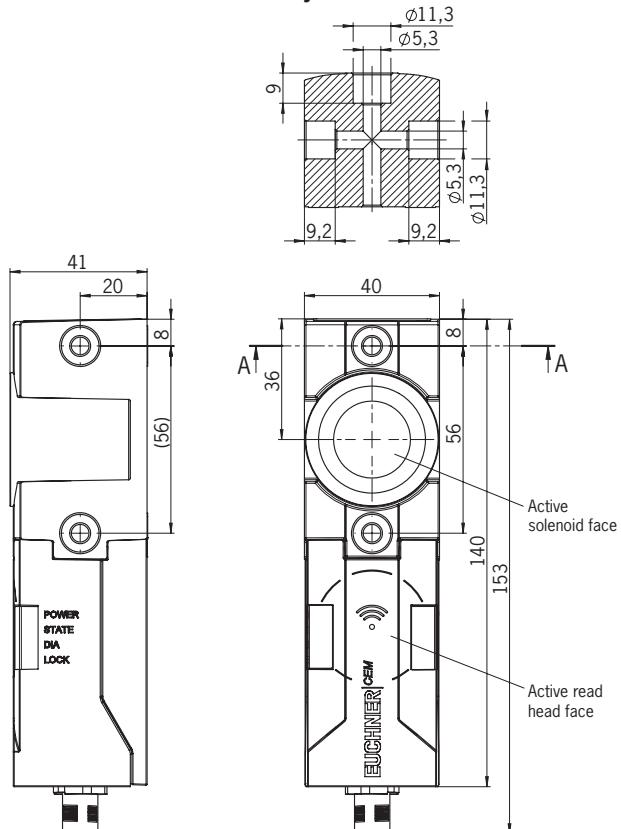

**Actuator**  
**A-C40-113869**

**Actuator**  
**A-C40-158436**

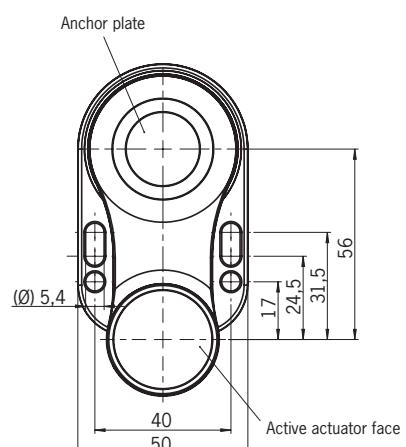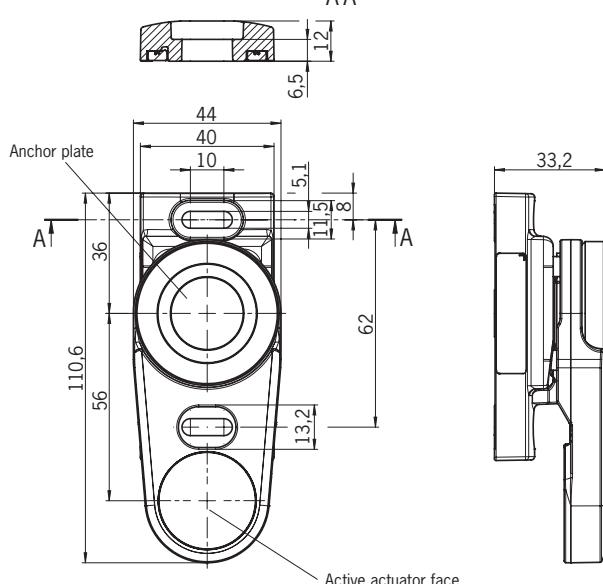



## Terminal assignment

Pin	Designation	Function
1	IMP	Control input of solenoid, 24 V DC
2	UB	Operating voltage of electronics and solenoid, 24 V DC
3	F01A	Safety output, channel A
4	F01B	Safety output, channel B
5	OI	Diagnostic monitoring output
6	OT	Door position monitoring output
7	OL	Guard locking monitoring output
8	OVUB	Operating voltage of electronics and solenoid, 0 V DC



**Variable magnetic guard locking CEM-M2-C60-...**

- ▶ Electromagnetic guard locking for process protection
- ▶ Modular system: function expansion for safety switches of series CES-C04/CES-C07
- ▶ Locking force 650 N
- ▶ Nickel-plated solenoid surface is highly resistant to corrosion
- ▶ Integrated permanent magnet with 30 N adhesive force (optional)
- ▶ Connection via plug connector M12

**Notice**

The magnetic guard locking CEM-C60 may be operated only in combination with the actuators A-C60-A1 or A-C60-B1.

**Details****Function expansion**

The safety switch is mounted on the guard locking solenoid and is used for reliable detection of the door position. The modular design enables great flexibility when it comes to selecting the suitable safety switch and the corresponding connection variant.

**Integrated permanent magnet (optional)**

The guard locking solenoid prevents the safety door from being opened unintentionally. Even when the solenoid is switched off, the integrated permanent magnet keeps the door closed with an adhesive force of 30 N.

**LED indicator**

**Yellow LED** Solenoid operating voltage

**Further information**

- ▶ For dimension drawings, see p. 59
- ▶ For accessories and spare parts, see p. 58
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).
- ▶ You will find information on the series connection of AR devices on page 5.

**Ordering table****Magnetic guard locking**

Series	Version	Order no./item	
CEM-M2-C60-...	  	161320 CEM-M2-C60-PZ-SE-161320	  For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
		163252 CEM-M2-C60-KZ-SE-163252	
	  	165746 CEM-M2-C60-PZ-SE-165746	

**Actuator**

Series	Design	Use	Order no./item	
A-C60-...		For safety switches CES-...-C04-...	161322 A-C60-A1-161322	  For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
		For safety switches CES-...-C07-...	165281 A-C60-B1-162581	


**Accessories**

Type	Version	
Connection material	Connecting cable with plug connector 	 Page 123
	Y-distributor CEM-M2-C60 to CES-AP/BP 	 Page 135
Fixing material	Safety screws	Page 144

M12 5 pin M12 8 pin

CEMI


## Dimension drawing

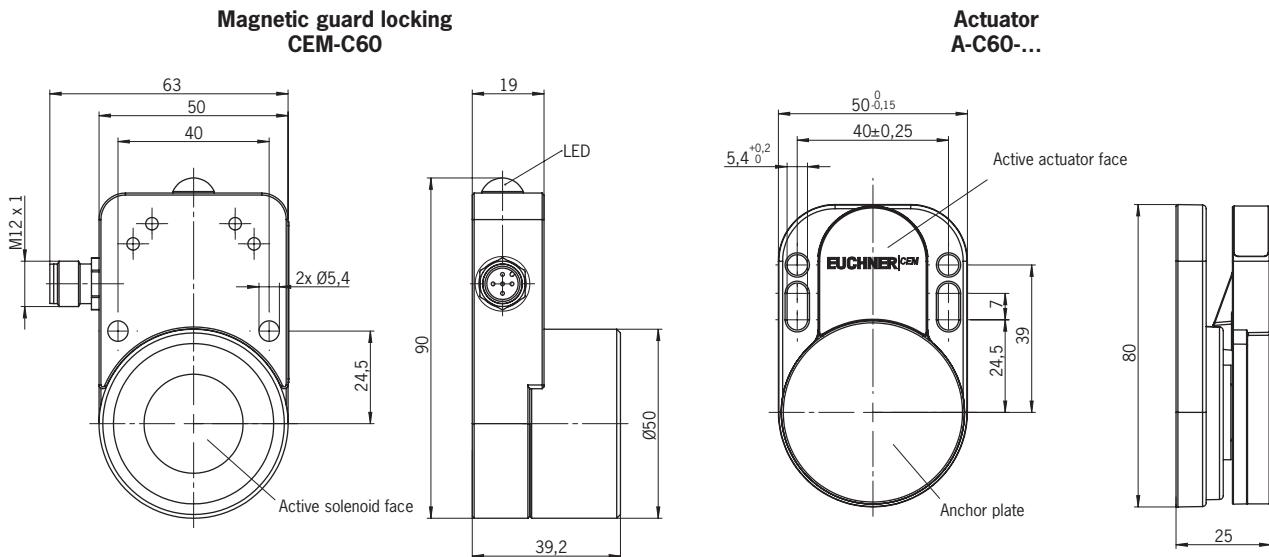

## Terminal assignment for Y-distributor

Connection of safety switch CES-I-BP  
(red socket)

Pin	Designation	Function
M12 X3.1	UB	Operating voltage, 24 V DC
X3.2	F01A	Safety output, channel A
X3.3	OVUB	Ground 0 V DC
X3.4	F01B	Safety output, channel B
X3.5	OD	Door position monitoring output

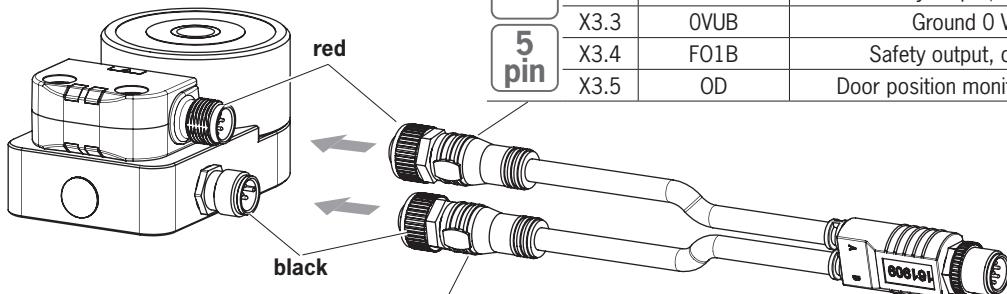

Connection of guard locking solenoid CEM-M2-C60...  
(black socket)

Pin	Designation	Function
M12 X2.1	-	n.c.
X2.2	-	n.c.
X2.3	OVUCM	Solenoid operating voltage, 0 V DC
X2.4	UCM	Solenoid operating voltage, 24 V DC
X2.5	-	n.c.

Y-distributor  
(plug)

Pin	Designation	Function
M12 X1.1	UCM	Solenoid operating voltage, 24 V DC
X1.2	UB	Operating voltage, 24 V DC
M12 X1.3	F01A	Safety output, channel A
X1.4	F01B	Safety output, channel B
M12 X1.5	OD	Door position monitoring output
X1.6	-	n.c.
X1.7	OVUB	Operating voltage ground, 0 V DC
X1.8	OVUCM	Solenoid ground, 0 V DC

## Safety switch CTP-...-AP-... with guard locking



- ▶ Safety switch with guard locking
- ▶ Locking force up to 3,900 N
- ▶ Diagnostics via 3 LEDs
- ▶ ATEX version available
- ▶ Version with integrated AS-Interface
- ▶ Safety at Work available, see [www.euchner.com](http://www.euchner.com)

### Notice

The device is only allowed to be operated in conjunction with the actuators A-C-H-....

### Details

#### Approach direction



Head can be rotated in 90° steps

#### Available coding options

- ▶ Unicode evaluation
- ▶ Multicode evaluation

### Guard locking types

- |            |   |
|------------|---|
| <b>L1</b>  | <b>Closed-circuit current principle</b><br>Guard locking by spring force.<br>Release by applying voltage to the guard locking solenoid.   |
| <b>L2</b>  | <b>Open-circuit current principle</b><br>Guard locking by solenoid force.<br>Activation of the guard locking by applying voltage to the guard locking solenoid.   |
| <b>LBI</b> | <b>BiState</b><br>Control input for guard locking.<br>This type of guard locking has a function to prevent<br>- persons from unintentionally locking themselves inside if the safety door is open in case of a power failure and if the machine is switched off.<br>- the deactivation of activated guard locking in case of a power failure.<br>As for L1, but without guard lock monitoring. Guard locking for process protection only. |
| <b>I1</b>  | As for L2, but without guard lock monitoring. Guard locking for process protection only.  |
| <b>I2</b>  | Without guard locking.  |

#### Auxiliary release

Included with all versions as standard.

#### Escape release (optional)

Some devices have an escape release. The escape release can be extended with the aid of the support brackets supplied.

### Retrofittable releases

Devices with auxiliary release can be retrofitted with various release functions (see accessories).

### Extended version

With integrated control elements (optional)

### Stainless-steel version

Devices with robust stainless-steel components for harsh ambient conditions. They comply with the IP67/IP69/IP69K degree of protection. ECOLAB certificate available.

### ATEX version

There is a version of this device for use in potentially explosive atmospheres. For explosion protection, see marking in the ordering table.

**Important:** Use only ATEX actuators for ATEX devices.

### Connection to IP67 field modules

Devices with plug connector SII (2 x M12, 5-pin) are optimized for direct connection to field modules, such as ET200pro from Siemens or comparable devices from other manufacturers.

### LED indicator

<b>STATE</b>	Status
<b>LOCK</b>	Guard locking
<b>DIA</b>	Diagnostics

### Additional connections

<b>OD</b>	Door position monitoring output
<b>OI</b>	Diagnostic monitoring output
<b>OL</b>	Guard locking monitoring output

### Further information

- ▶ For dimension drawings, see p. 66
- ▶ For accessories and spare parts, see p. 65
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

## Ordering table

### CTP-L.-AP-...-SII-... with 2 plug connectors M12

Order no./item	Coding U = unicode M = multicode	Escape release	Guard locking Personnel/process protection	For wiring diagram, see page 67	
<b>CTP-L1</b> Closed-circuit current principle					
<b>124468</b> CTP-L1-AP-U-HA-AZ-SII-124468	U				
<b>127640</b> CTP-L1-AP-U-HA-AE-SII-127640	U	●			
<b>129477</b> CTP-L1-AP-U-HA-AZ-SII-129477	U				
<b>129478</b> CTP-L1-AP-U-HA-AE-SII-129478	U	●			



For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

### CTP-I.-AP-...-SBB-... with 2 plug connectors M12

Order no./item	Coding U = unicode M = multicode	Escape release	Control elements	Guard locking Personnel/process protection	For wiring diagram, see page 67	
<b>CTP-I</b> Without guard locking						
<b>159614</b> CTP-I-AP-U-HA-ZZE-SBB-159614	U		Emergency stop			



For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

## CTP-...-AP-...-SA-... with plug connector M12

M12 8 pin	Order no./item	Coding U = unicode M = multicode	Escape release	Guard locking Personnel/process protection	For wiring diagram, see page 67	
<b>CTP-L1</b> Closed-circuit current principle						
<b>124225</b> CTP-L1-AP-U-HA-AZ-SA-124225	U					
<b>126912</b> CTP-L1-AP-U-HA-AE-SA-126912	U		●			
<b>127727</b> CTP-L1-AP-U-HA-AZ-SA-127727	U					
<b>128484</b> CTP-L1-AP-U-HA-AE-SA-128484	U		●		D	
<b>124727</b> CTP-L1-AP-M-HA-AZ-SA-124727	M					
<b>163003</b> CTP-L1-AP-M-HA-AE-SA-163003	M		●			
<b>CTP-L2</b> Open-circuit current principle						
<b>124728</b> CTP-L2-AP-U-HA-AZ-SA-124728	U					
<b>136841</b> CTP-L2-AP-U-HA-AE-SA-136841	U		●		D	
<b>124729</b> CTP-L2-AP-M-HA-AZ-SA-124729	M					
<b>CTP-LBI</b> BiState						
<b>127798</b> CTP-LBI-AP-U-HA-AZ-SA-127798	U				E	
<b>CTP-I1</b> Process protection guard locking, closed-circuit current principle						
<b>136595</b> CTP-I1-AP-U-HA-AEC-SA-136595	U		●		F	
<b>CTP-I2</b> Process protection guard locking, open- circuit current principle						
<b>126258</b> CTP-I2-AP-U-HA-AZC-SA-126258	U				F	
<b>CTP-I</b> Without guard locking						
<b>136732</b> CTP-I-AP-U-HA-ZZ-SA-136732	U				G	

For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

## CTP-...-AP-...-SA-... with plug connector M12, stainless-steel version

Order no./item	Coding U = unicode M = multicode	Escape release	Guard locking Personnel/process protection	For wiring diagram, see page 67	
<b>CTP-L1</b> Closed-circuit current principle					For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
<b>157111</b> CTP-L1-AP-U-HA-AZS-SA-157111	U				
<b>157112</b> CTP-L1-AP-U-HA-AES-SA-157112	U	●			

## CTP-...-AP-...-SA-EX-... with plug connector M12

Order no./item	Coding U = unicode M = multicode	Escape release	Guard locking Personnel/process protection	For wiring diagram, see page 67	
<b>CTP-L1</b> Closed-circuit current principle					For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
<b>136675<sup>1)</sup></b> CTP-L1-AP-U-HA-AZ-SA-EX-136675	U				
<b>129512<sup>1)</sup></b> CTP-L1-AP-U-HAAZ-SA-EX-129512	U				
<b>156240<sup>1)</sup></b> CTP-L1-AP-U-HA-AE-SA-EX-156240	U	●			

1) II3G Ex ec IIB T4 Gc X / II3D Ex tc IIIC T110°C Dc X

## CTP-...-AP-...-SH-... with plug connector M23

Order no./item	Coding U = unicode M = multicode	Escape release	Guard locking Personnel/process protection	For wiring diagram, see page 67	
<b>CTP-L1</b> Closed-circuit current principle					For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
<b>123364</b> CTP-L1-AP-U-HA-AZ-SH-123364	U				
<b>123375</b> CTP-L1-AP-U-HA-AE-SH-123375	U	●			
<b>123365</b> CTP-L1-AP-M-HA-AZ-SH-123365	M				
<b>123376</b> CTP-L1-AP-M-HA-AE-SH-123376	M	●			
<b>CTP-L2</b> Open-circuit current principle					
<b>123370</b> CTP-L2-AP-U-HA-AZ-SH-123370	U				
<b>123371</b> CTP-L2-AP-M-HA-AZ-SH-123371	M				

## CTP-...-AP-...-SH-... with plug connector M23, Extended version





M23 19 pin	Coding U = unicode M = multicode	Escape release	Control elements	Guard locking Personnel/process protection	For wiring diagram, see page 67	
<b>Order no./item</b>						
<b>CTP-L1</b> Closed-circuit current principle						
<b>137342</b> CTP-L1-AP-U-HA-AEE-SH-137342	U	●	2 pushbuttons (illuminated)			
<b>156056</b> CTP-L1-AP-U-HA-AZE-SH-156056	U		Emergency stop, 2 pushbuttons (illuminated)			<b>J</b>
<b>CTP-L2</b> Open-circuit current principle						
<b>158402</b> CTP-L2-AP-U-HA-AZE-SH-158402	U		2 pushbuttons (illuminated)			<b>H</b>

## Actuator



Series	Design	Order no./item	
<b>A-C-H...</b>	Straight	<b>126015</b> A-C-H-G-SST-126015	<p>For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a>.</p>
	Stainless steel, straight	<b>157696</b> A-C-H-G-SSS-157696	
	Straight	<b>136826</b> A-C-H-G-LS-EX-136826	
	Bent, upward <sup>1)</sup>	<b>122667</b> A-C-H-W-SST-122667	
	Bent, downward <sup>1)</sup>	<b>122668</b> A-C-H-W-SST-122668	
	Hinged actuators	<b>122671</b> A-C-H-RL-LS-122671	
		<b>122672</b> A-C-H-RR-LS-122672	
	Hinged actuators	<b>122675</b> A-C-H-RO-LS-122675	
		<b>122676</b> A-C-H-RU-LS-122676	

1) Applies to the following orientation: connection/cable outlet pointing downward


## Accessories

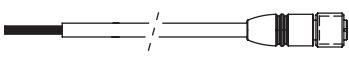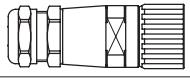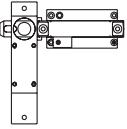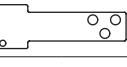Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M12</b> <b>5 pin</b> Page 123
	Connecting cable with plug connector 	<b>M12</b> <b>8 pin</b> Page 126
	Connecting cable with plug connector 	<b>M23</b> <b>19 pin</b> Page 131/132
	Female plug (for self-assembly) 	<b>M23</b> <b>19 pin</b> Page 133
<b>Bolts</b>	Bolts for housing design CTP 	Page 139
<b>Fixing material</b>	Mounting plates 	Page 142
	Safety screws 	Page 144
<b>Miscellaneous accessories</b>	Auxiliary key release 	
	Release 	
	Emergency release 	
	Wire front release (bowden) 	Page 144 f.
	Handle for wire front release 	
	Lockout bar 	





## Dimension drawing

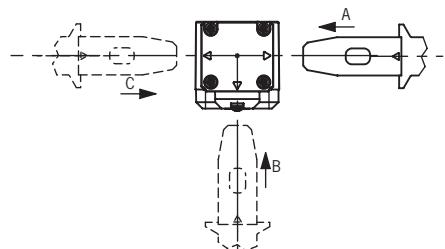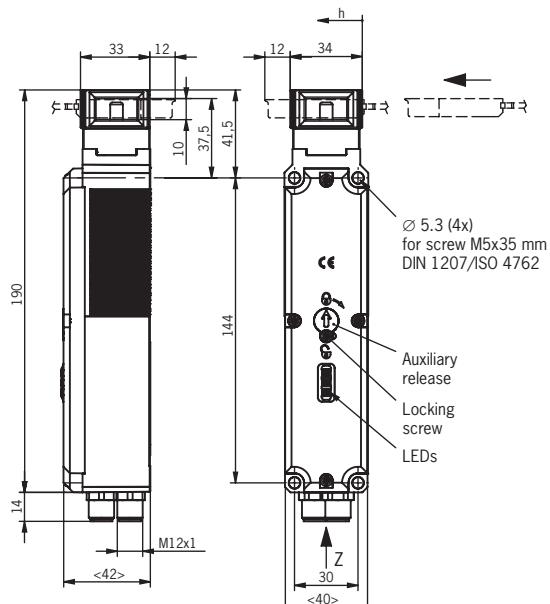

### With escape release

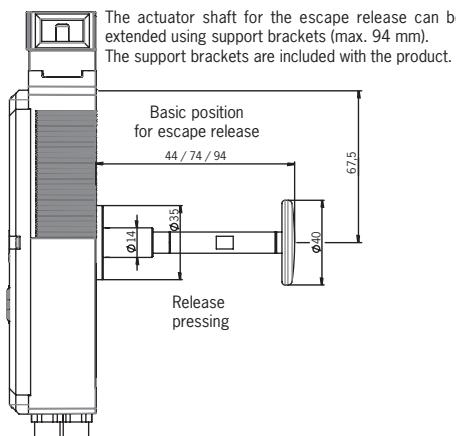

### Extended version

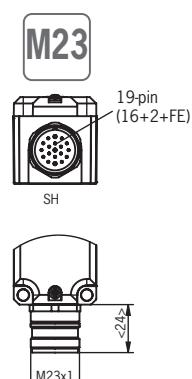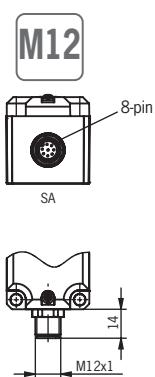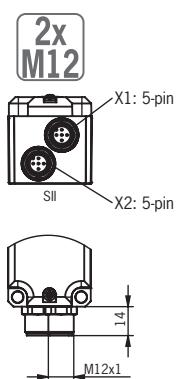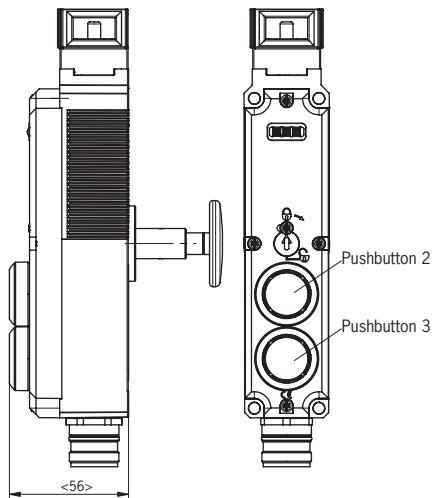

You can find the dimension drawing for version CTP-EX with escape release and for the stainless-steel version by entering the order number for the product at [www.euchner.com](http://www.euchner.com)

**2x  
M12** **5  
pin**

**CTP**

## Terminal assignment

**A**

**2x  
M12**

**5  
pin**

Wiring diagram A

Pin	Designation	Function
X 1.1	UB	Operating voltage of electronics, 24 V DC
X 1.2	FO1A	Safety output, channel A
X 1.3	OVUB	Operating voltage of electronics, 0 V DC
X 1.4	FO1B	Safety output, channel B
X 1.5	-	n.c.
X 2.1	-	n.c.
X 2.2	-	n.c.
X 2.3	IMM	Operating voltage of solenoid, 0 V DC
X 2.4	IMP	Operating voltage of solenoid, 24 V DC
X 2.5	-	n.c.

**B**

**2x  
M12**

**5  
pin**

Wiring diagram B

Pin	Designation	Function
X 1.1	UB	Operating voltage of electronics, 24 V DC
X 1.2	FO1A	Safety output, channel A
X 1.3	OVUB	Operating voltage of electronics, 0 V DC
X 1.4	FO1B	Safety output, channel B
X 1.5	-	n.c.
X 2.1	-	n.c.
X 2.2	OD	Door position monitoring output
X 2.3	IMM	Operating voltage of solenoid, 0 V DC
X 2.4	IMP	Operating voltage of solenoid, 24 V DC
X 2.5	-	n.c.

**C**

**2x  
M12**

**5  
pin**

Wiring diagram C

Pin	Designation	Function
X 1.1	UB	Operating voltage of electronics, 24 V DC
X 1.2	FO1A	Safety output, channel A
X 1.3	OVUB	Operating voltage of electronics, 0 V DC
X 1.4	FO1B	Safety output, channel B
X 1.5	-	n.c.
X 2.1	S1.A1	Emergency stop (channel A contact 1)
X 2.2	S1.B1	Emergency stop (channel B contact 1)
X 2.3	-	n.c.
X 2.4	S1.A2	Emergency stop (channel A contact 2)
X 2.5	S1.B2	Emergency stop (channel B contact 2)



Wiring diagram D

Pin	Designation	Function
1	IMP	Operating voltage of solenoid, 24 V DC
2	UB	Operating voltage of electronics, 24 V DC
3	FO1A	Safety output, channel A
4	FO1B	Safety output, channel B
5	OI	Diagnostic monitoring output
6	OD	Door position monitoring output
7	OVUB	Operating voltage of electronics, 0 V DC
8	IMM	Operating voltage of solenoid, 0 V DC



Wiring diagram E

Pin	Designation	Function
1	IMP	Operating voltage of solenoid, 24 V DC
2	UB	Operating voltage of electronics, 24 V DC
3	FO1A	Safety output, channel A
4	FO1B	Safety output, channel B
5	OI	Diagnostic monitoring output
6	OD	Door position monitoring output
7	OL	Guard locking monitoring output
8	OV	Operating voltage of electronics and solenoid, 0 V DC



Wiring diagram F

Pin	Designation	Function
1	IMP	Operating voltage of solenoid, 24 V DC
2	UB	Operating voltage of electronics, 24 V DC
3	FO1A	Safety output, channel A
4	FO1B	Safety output, channel B
5	OI	Diagnostic monitoring output
6	OD	Door position monitoring output
7	OL	Guard locking monitoring output
8	OV	Operating voltage of electronics and solenoid, 0 V DC



Wiring diagram G

Pin	Designation	Function
1	-	n.c.
2	UB	Operating voltage of electronics, 24 V DC
3	FO1A	Safety output, channel A
4	FO1B	Safety output, channel B
5	OI	Diagnostic monitoring output
6	OD	Door position monitoring output
7	OV	Operating voltage of electronics and solenoid, 0 V DC
8	-	n.c.

**M23** **19  
pin**

**CTP**

**H**

**M23**

**19  
pin**

**Wiring diagram H**

<b>Pin</b>	<b>Designation</b>	<b>Function</b>
1	IMP	Operating voltage of solenoid, 24 V DC
2	-	n.c.
3	-	n.c.
4	FO1A	Safety output, channel A
5	FO1B	Safety output, channel B
6	UB	Operating voltage of electronics, 24 V DC
7	RST	Reset input
8	OD	Door position monitoring output
9	OI	Diagnostic monitoring output
10	OL	Guard locking monitoring output
11	-	n.c.
12	FE	Function earth
13	-	n.c.
14	-	n.c.
15	-	n.c.
16	-	n.c.
17	-	n.c.
18	IMM	Operating voltage of solenoid, 0 V DC
19	OVUB	Operating voltage of electronics, 0 V DC

**I**

**M23**

**19  
pin**

**Wiring diagram I**

<b>Pin</b>	<b>Designation</b>	<b>Function</b>
1	IMP	Operating voltage of solenoid, 24 V DC
2	-	n.c.
3	-	n.c.
4	FO1A	Safety output, channel A
5	FO1B	Safety output, channel B
6	UB	Operating voltage of electronics, 24 V DC
7	RST	Reset input
8	OD	Door position monitoring output
9	OI	Diagnostic monitoring output
10	OL	Guard locking monitoring output
11	-	n.c.
12	FE	Function earth
13	IMM	Operating voltage of solenoid, 0 V DC
14	-	n.c.
15	S2	Pushbutton 2
16	H2	LED 2
17	S3	Pushbutton 3
18	H3	LED 3
19	OVUB	Operating voltage of electronics, 0 V DC

**M23** **19  
pin**

**J** **M23** **19  
pin** **Wiring diagram J**

Pin	Designation	Function
1	IMP	Operating voltage of solenoid, 24 V DC
2	IMM	Operating voltage of solenoid, 0 V DC
3	S1.C	Emergency stop (monitoring contact)
4	FO1A	Safety output, channel A
5	FO1B	Safety output, channel B
6	UB	Operating voltage of electronics, 24 V DC
7	RST	Reset input
8	OD	Door position monitoring output
9	OI	Diagnostic monitoring output
10	S1.A1	Emergency stop (channel A contact 1)
11	S1.A2	Emergency stop (channel A contact 2)
12	FE	Function earth
13	S1.B1	Emergency stop (channel B contact 1)
14	S1.B2	Emergency stop (channel B contact 2)
15	S2	Pushbutton 2
16	H2	LED 2
17	S3	Pushbutton 3
18	H3	LED 3
19	OVUB	Operating voltage of electronics, 0 V DC



## Safety switch CET.-AP-... with guard locking



- ▶ Safety switch with guard locking
- ▶ Locking force up to 6,500 N
- ▶ Metal housing
- ▶ Diagnostics via 4 LEDs
- ▶ Degree of protection IP67
- ▶ Actuator guide with large freedom of movement
- ▶ 2-channel solenoid control permissible
- ▶ Connection via plug connectors
- ▶ Version with integrated AS-Interface
- Safety at Work available, see [www.euchner.com](http://www.euchner.com)**

### Notice

The device is only allowed to be operated in conjunction with the actuator CET-A-....

### Details

#### Approach direction



Head can be rotated in 90° steps

#### Available coding options

- ▶ Unicode evaluation
- ▶ Multicode evaluation

#### Guard locking types

- |             |  |
|-------------|--|
| <b>CET3</b> | <b>Closed-circuit current principle</b><br>Guard locking by spring force.<br>Release by applying voltage to the guard locking solenoid.<br>Monitoring of the door position: The door position monitoring output OUT D is set to HIGH as soon as the actuator is above the extended plunger (state: door closed, guard locking not active). The output OUT D also remains set when guard locking is active. |
| <b>CET4</b> | <b>Open-circuit current principle</b><br>Guard locking by applying voltage to the guard locking solenoid. Release by spring force.<br>Monitoring of the door position: The door position monitoring output OUT D is set to HIGH as soon as the actuator is above the extended plunger (state: door closed, guard locking not active). The output OUT D also remains set when guard locking is active.      |

#### Teach-in input (optional)

Some devices with unicode evaluation have a teach-in input. These devices can be taught-in only if the teach-in input has the corresponding circuit. In this way, the protection against tampering is additionally increased.

#### Auxiliary release

Included with all versions as standard.

#### Escape release (optional)

Some devices have an escape release (see ordering table).

#### Wire front release (optional)

The wire front release permits remote unlocking of the guard locking via a pull wire. Flexible routing of the pull wire permits release of the guard locking in inaccessible installation situations.

#### Double ramp

Versions with double ramp can be approached from two sides.

Devices with double ramp are also suitable for applications in which the switch must be "passed over," e.g. on doors that can be opened inwards and outwards. The double ramp can be retrofitted (see accessories page 146).

#### LED indicator

<b>STATE</b>	Status
<b>DIA</b>	Diagnostics
<b>LED 1 red</b>	see wiring diagram
<b>LED 2 green</b>	see wiring diagram

#### Additional connections (depending on version)

<b>OUT</b>	Monitoring output (semiconductor)
<b>OUT D</b>	Door position monitoring output
<b>DIA</b>	Diagnostic monitoring output

#### Further information

- ▶ For dimension drawings, see p. 76
- ▶ For accessories and spare parts, see p. 75
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

## Ordering table

CET.-AP-...-SI-... with 2 plug connectors M12, without door position monitoring output, for connection to decentralized peripheral equipment

Order no./item	Coding U = unicode M = multicode	Ramp	Teach-in input	Feedback loop	Escape release	Wire front release (L1) <sup>1)</sup>	For wiring diagram, see page 78	
<b>CET3</b> Closed-circuit current principle								
<b>111346</b> CET3-AP-CRA-AH-50X-SI-111346	U							
<b>121367</b> CET3-AP-CRA-AH-50X-SI-C2290-121367	U					5 m		
<b>114073</b> CET3-AP-CRA-AH-50F-SI-114073	U				75 mm			A
<b>157408</b> CET3-AP-CRA-AH-50F-SI-C2312-157408	U				105 mm			
<b>CET4</b> Open-circuit current principle								
<b>112082</b> CET4-AP-CRA-AH-50X-SI-112082	U						A	

1) L1 = sleeve length; rope length = L1 + 1 m. Important: Handle must be ordered separately (see accessories, page 144).

CET.-AP-...-SI-... with 2 plug connectors M12, with door position monitoring output

Order no./item	Coding U = unicode M = multicode	Ramp	Teach-in input	Feedback loop	Escape release	Wire front release (L1) <sup>1)</sup>	For wiring diagram, see page 78	
<b>CET3</b> Closed-circuit current principle								
<b>124589</b> CET3-AP-CRA-AH-50X-SI-C2438-124589	U							B
<b>124594</b> CET3-AP-CRA-AH-50F-SI-C2438-127594	U				75 mm			
<b>CET4</b> Open-circuit current principle								
<b>126763</b> CET4-AP-CRA-AH-50X-SI-C2438-126763	U							B
<b>161577</b> CET4-AP-CRA-AH-50X-SI-C2509-161577	U					3 m		

1) L1 = sleeve length; rope length = L1 + 1 m. Important: Handle must be ordered separately (see accessories, page 144).



For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).



For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**CET.-AP-...-SA... with plug connector M12, with door position monitoring output**

M12 8 pin	Order no./item	Coding U = unicode M = multicode	Ramp	Teach-in input	Feedback loop	Escape release	Wire front release (L1) <sup>1)</sup>	For wiring diagram, see page 78	
<b>CET3</b> Closed-circuit current principle									
<b>122398</b> CET3-AP-CRA-AH-50X-SA-122389	U								
<b>161524<sup>2)</sup></b> CET3-AP-CRA-AH-50X-SF-161524	U								
<b>121579</b> CET3-AP-CRA-CH-50X-SA-121579	M								
<b>124601</b> CET3-AP-CRA-AH-50F-SA-124601	U					75 mm			<b>C</b>
<b>157287</b> CET3-AP-CRA-CH-50F-SA-C2312-157287	M					105 mm			
<b>122406</b> CET3-AP-CRA-AH-50X-SA-122406	U								<b>D</b>
<b>122409</b> CET3-AP-CRA-CH-50X-SA-122409	M								
<b>CET4</b> Open-circuit current principle									
<b>122415</b> CET4-AP-CRA-AH-50X-SA-122415	U								<b>C</b>
<b>122413</b> CET4-AP-CRA-CH-50X-SA-122413	M								
<b>161178</b> CET4-AP-CRA-CH-50F-SA-161178	M					75 mm			

1) L1 = sleeve length; rope length = L1 + 1 m. Important: Handle must be ordered separately (see accessories, page 144).

2) Adjustable M12 plug connector, can be rotated by 360°.

**CET.-AP-...-SH... with plug connector M23, with door position monitoring output**










M23 19 pin	Order no./item	Coding U = unicode M = multicode	Ramp	Teach-in input	Feedback loop	Escape release	Wire front release (L1) <sup>1)</sup>	For wiring diagram, see page 79	
<b>CET3</b> Closed-circuit current principle									
<b>119106</b> CET3-AP-CRA-AH-50F-SH-C2312-119106	U			●		105 mm			<b>E</b>

1) L1 = sleeve length; rope length = L1 + 1 m. Important: Handle must be ordered separately (see accessories, page 144).

**Actuator**

Series	Design	Order no./item	
<b>CET-A-BWK-50X</b>		<b>096327</b> CET-A-BWK-50X	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .


## Accessories

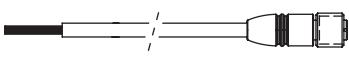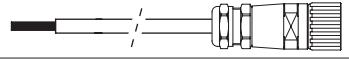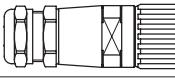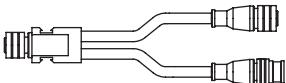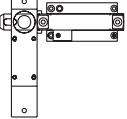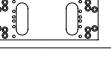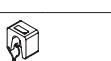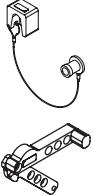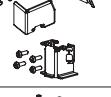Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M12</b> <b>5 pin</b> Page 123 f.
	Connecting cable with plug connector 	<b>M12</b> <b>8 pin</b> Page 126
	Connecting cable with plug connector 	<b>M23</b> <b>19 pin</b> Page 131/132
	Female plug (for self-assembly) 	<b>M23</b> <b>19 pin</b> Page 133
<b>Bolts</b>	<b>Y-distributor for connection to IP67 field modules</b> For AP devices with plug connectors 2 x M12, 5-pin, with monitoring output (e.g. CET-AP with wiring diagram B) for connection to field modules with socket M12, 5-pin. 	<b>M12</b> (socket) <b>2x M12</b> (plug) Page 134
	Bolts for housing design CET 	Page 139
<b>Fixing material</b>	Mounting plates 	Page 142
	Safety screws 	Page 144
<b>Miscellaneous accessories</b>	Lockout bar 	
	Auxiliary key release 	
	Emergency release 	
	Cover 	Page 144 f.
	Double ramp 	
	Handle for wire front release 	


## Dimension drawing

**2x  
M12**


With 2 plug connectors M12

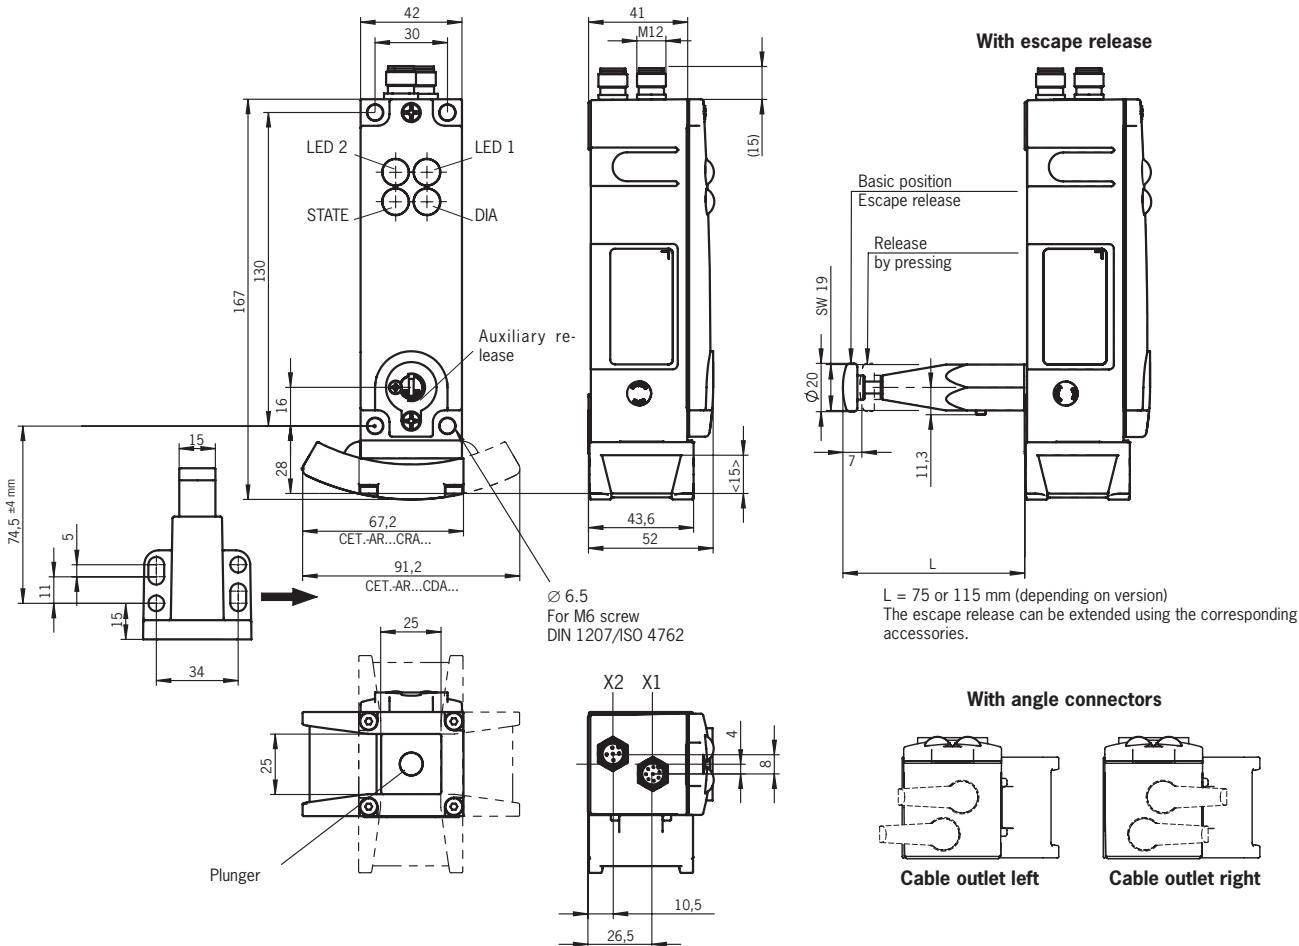

With escape release

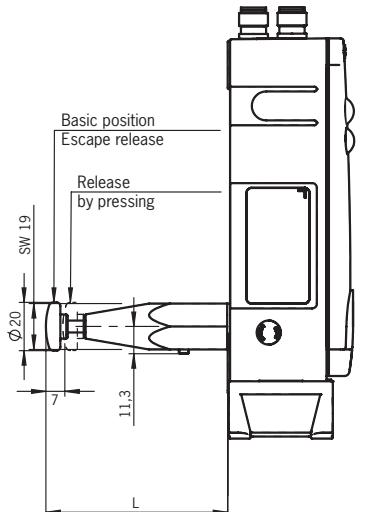

With angle connectors

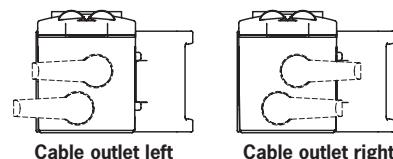


Cable outlet left


Cable outlet right

**M12**

With 1 plug connector M12

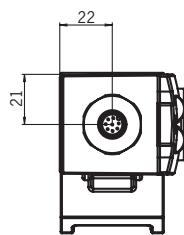

With angle connectors

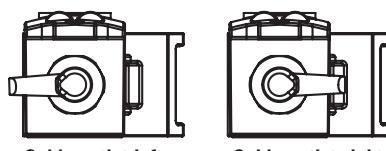


Cable outlet left

Cable outlet right


**M23**

Dimensions with plug connector M23

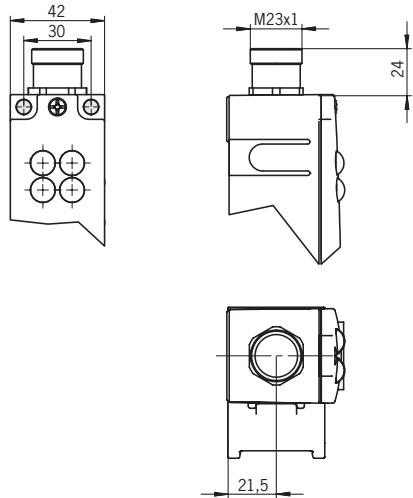


With plug connector M23

Cable outlet left

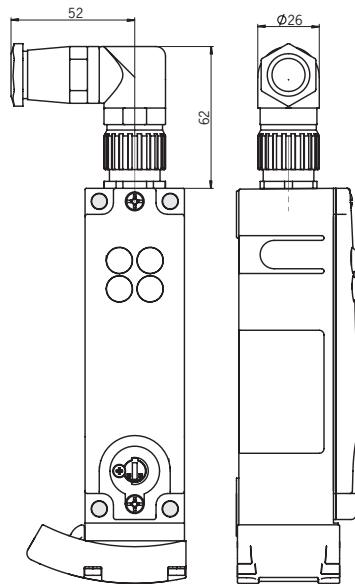


Cable outlet right

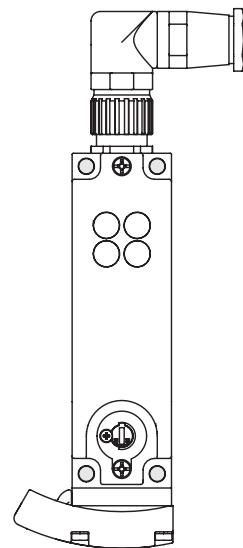


Versions with manual release options



With auxiliary key release

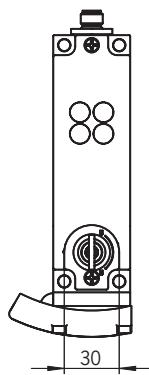

With emergency release

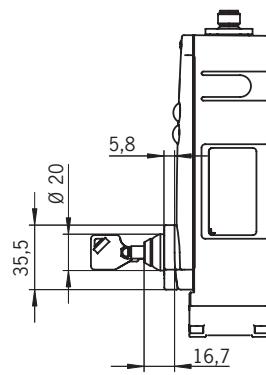

With wire front release

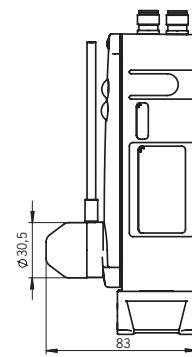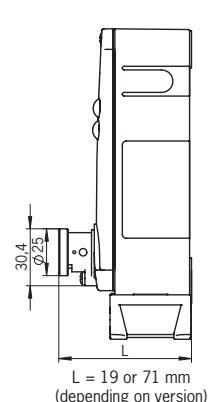



### Terminal assignment



Wiring diagrams A and B

Pin	Designation	Function	2x M12	A	B
X 1.1	UB	Operating voltage of electronics, 24 V DC	●	●	
X 1.2	OA	Safety output, channel A	●	●	
X 1.3	OVUB	Operating voltage of electronics, 0 V DC	●	●	
X 1.4	OB	Safety output, channel B	●	●	
X 1.5	-	n.c.	●	●	
X 2.1	-	n.c.	●	●	
X 2.2	OUT D	n.c. (for connection to decentralized peripheral equipment) Door position monitoring output	●		●
X 2.3	OVUCM	Operating voltage of solenoid, 0 V DC	●	●	
X 2.4	UCM	Operating voltage of solenoid, 24 V DC	●	●	
X 2.5	-	n.c.	●	●	



Wiring diagrams C and D

Pin	Designation	Function	M12	C	D
1	UCM	Operating voltage of solenoid, 24 V DC	●	●	
2	UB	Operating voltage of electronics, 24 V DC	●	●	
3	OA	Safety output, channel A	●	●	
4	OB	Safety output, channel B	●	●	
5	OUT	Guard locking monitoring output	●		
	DIA	Diagnostic monitoring output		●	
6	OUT D	Door position monitoring output	●	●	
7	OVUB	Operating voltage of electronics, 0 V DC	●	●	
8	OVUCM	Operating voltage of solenoid, 0 V DC	●	●	

**M23** **19  
pin**

**CET**

**E**

**M23**

**19  
pin**


**Wiring diagram E**

<b>Pin</b>	<b>Designation</b>	<b>Function</b>
1	UCM	Operating voltage of solenoid, 24 V DC
2	-	n.c.
3	-	n.c.
4	OA	Safety output, channel A
5	OB	Safety output, channel B
6	UB	Operating voltage of electronics, 24 V DC
7	RST	Reset input
8	OUT D	Door position monitoring output
9	-	n.c.
10	OUT	Guard locking monitoring output
11	-	n.c.
12	FE	Function earth
13	J	Teach-in input
14	-	n.c.
15	-	n.c.
16	-	n.c.
17	-	n.c.
18	OVUCM	Operating voltage of solenoid, 0 V DC
19	OVUB	Operating voltage of electronics, 0 V DC

»Minimum effort for large installations with a large number of safety doors.«

---

- ▶ Can be connected in series with all AR devices (up to 20 devices)
- ▶ Quick connection via M12 connectors (depending on version)
- ▶ Evaluation via safety control systems or an AR evaluation unit (depending on version)
- ▶ Two safe semiconductor outputs
- ▶ Own pulsing for short circuit detection
- ▶ PL e / category 4 according to EN ISO 13849-1 for up to 20 devices
- ▶ Switch chains with cable lengths up to 200 m possible
- ▶ Large selection of devices

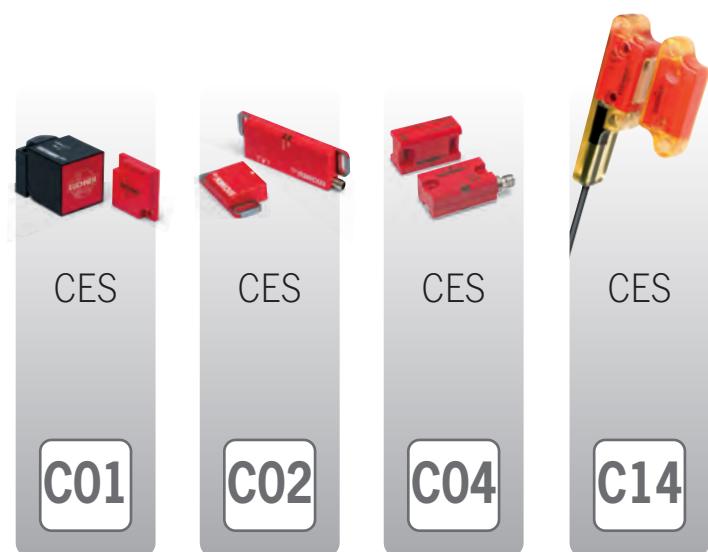System  
family**AR**

AR

**Safety switch CES-AR-C01...**

- ▶ Up to 20 switches in series
- ▶ 1 active face; can be repositioned in 5 directions
- ▶ Diagnostics via 2 LEDs
- ▶ Large actuating range
- ▶ Standard housing according to EN 60947-5-2
- ▶ Limit-range indication

**Details****Available coding options**

- ▶ Unicode evaluation
- ▶ Multicode evaluation
- ▶ Fixcode evaluation

**Limit-range indication**

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time.

**LED indicator**

STATE	Status
DIA	Diagnostics

**Additional connections**

OUT	Monitoring output (semiconductor)
RST	Reset input

**Further information**

- ▶ For dimension drawings, see p. 83
- ▶ For accessories and spare parts, see p. 83
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).
- ▶ You will find information on the series connection of AR devices on page 5.

**Ordering table****Safety switch**


Series	Version	Order no./item	
CES-AR-C01-AH-SA Unicode	 <span>M12</span> <span>8 pin</span>	<b>098941</b> CES-AR-C01-AH-SA	 <p>For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a>.</p>
CES-AR-C01-CH-SA Multicode		<b>098942</b> CES-AR-C01-CH-SA	
CES-AR-C01-EH-SA Fixcode (actuator CES-A-BPA included)		<b>098582</b> CES-AR-C01-EH-SA	


**Actuator**

Series	Design	Typ. actuating range [mm]	Order no./item	
CES-A-BRN		80 x 40	27	<b>100251</b> CES-A-BRN-100251
CES-A-BPA		40 x 40	22	<b>098775</b> CES-A-BPA
CES-A-BBA		42 x 25	18	<b>071840</b> CES-A-BBA
CES-A-BCA		42 x 25 Material: PE-HD	18	<b>088786</b> CES-A-BCA
CES-A-BDA-18		Ø18	19	<b>156935</b> CES-A-BDA-18

For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**M12** **8 pin**
**C01**
**Accessories**

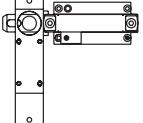Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M12</b> <b>8 pin</b> Page 126
	Strapping plug/Y-distributor 	<b>M12</b> Page 128
	Passive distribution module 	<b>M12</b> Page 129
<b>Bolts</b>	Bolts for housing design C01 	Page 136
<b>Fixing material</b>	Safety screws	Page 144

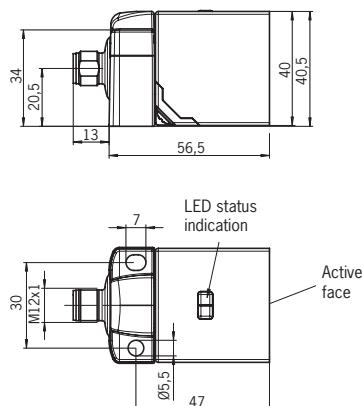**Dimension drawing****Terminal assignment**

Pin	Designation	Function
1	IB	Enable input, channel B
2	UB	Operating voltage, 24 V DC
3	OA	Safety output, channel A
4	OB	Safety output, channel B
5	OUT	Door position monitoring output
6	IA	Enable input, channel A
7	OV	Ground 0 V DC
8	RST	Reset input

**Safety switch CES-AR-C.2-...**

- ▶ Diagnostics via 2 LEDs
- ▶ 2 active faces
- ▶ Limit-range indication
- ▶ Simple mounting on aluminum profiles
- ▶ Large temperature range (depending on version)
- ▶ Reinforcement plates and safety screws included

**Details****Available coding options**

- ▶ Unicode evaluation
- ▶ Multicode evaluation

**Limit-range indication**

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time.

**Large temperature range**

Devices with connecting cable and flying lead have a temperature range from -30 °C to +65 °C (with rigid cable laying).

**LED indicator**

<b>STATE</b>	Status
<b>DIA</b>	Diagnostics

**Additional connections**

<b>OUT</b>	Monitoring output (semiconductor)
<b>RST</b>	Reset input


**Further information**

- ▶ For dimension drawings, see p. 86
- ▶ For accessories and spare parts, see p. 86
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).
- ▶ You will find information on the series connection of AR devices on page 5.

**Ordering table****Safety switch**



Series	Version	Door hinge <sup>1)</sup>	Order no./item	
CES-AR-C.2-AH-... Unicode	<b>M8</b> <b>8 pin</b>		<b>105751</b> CES-AR-CR2-AH-SG-105751	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
			<b>105753</b> CES-AR-CL2-AH-SG-105753	
	<b>M12</b> <b>8 pin</b> <b>PUR</b> <b>1m</b>		<b>105746</b> CES-AR-CR2-AH-SA-105746	
			<b>105748</b> CES-AR-CL2-AH-SA-105748	
	<b>5m</b> <b>PUR</b>		<b>109046</b> CES-AR-CR2-AH-L05-109046	
			<b>109047</b> CES-AR-CL2-AH-L05-109047	
	<b>10m</b> <b>PUR</b>		<b>109050</b> CES-AR-CR2-AH-L10-109050	
			<b>109051</b> CES-AR-CL2-AH-L10-109051	

1) Applies to the following orientation: connection/cable outlet pointing downward

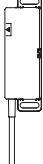
Series	Version	Door hinge <sup>1)</sup>	Order no./item	
CES-AR-C.2-CH... Multicode	 <b>M8</b> <b>8 pin</b>		<b>105750</b> CES-AR-CR2-CH-SG-105750	<p>For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a>.</p>
			<b>105752</b> CES-AR-CL2-CH-SG-105752	
	 <b>M12</b> <b>8 pin</b> <b>PUR</b> 		<b>115792</b> CES-AR-CR2-CH-SA-115792	
			<b>115793</b> CES-AR-CL2-CH-SA-115793	
			<b>105745</b> CES-AR-CR2-CH-SA-105745	
			<b>105747</b> CES-AR-CL2-CH-SA-105747	
	 <b>8 wire</b> <b>PUR</b>		<b>109044</b> CES-AR-CR2-CH-L05-109044	
			<b>109045</b> CES-AR-CL2-CH-L05-109045	
			<b>109048</b> CES-AR-CR2-CH-L10-109048	
			<b>109049</b> CES-AR-CL2-CH-L10-109049	


1) Applies to the following orientation: connection/cable outlet pointing downward

#### Actuator

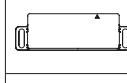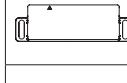Series	Design	Typ. actuating range [mm]	Order no./item	
CES-A-BDN-06	 Ø6 x 26	19	<b>104730</b> CES-A-BDN-06-104730	<p>For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a>.</p>
CES-A-BLN-...	 95 x 30	15	<b>100776</b> CES-A-BLN-R2-100776	
	 55 x 30	15	<b>104510</b> CES-A-BLN-L2-104510	
	Independent of the door hinge	15	<b>103450</b> CES-A-BLN-U2-103450	

**Accessories**

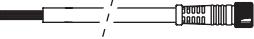Type	Version		
Connection material	Connecting cable with plug connector 	M8 8 pin	Page 122
	Connecting cable with plug connector 	M12 8 pin	Page 126
	Strapping plug/Y-distributor	M12	Page 128
	Passive distribution module	M12	Page 129
Fixing material	Safety screws		Page 144

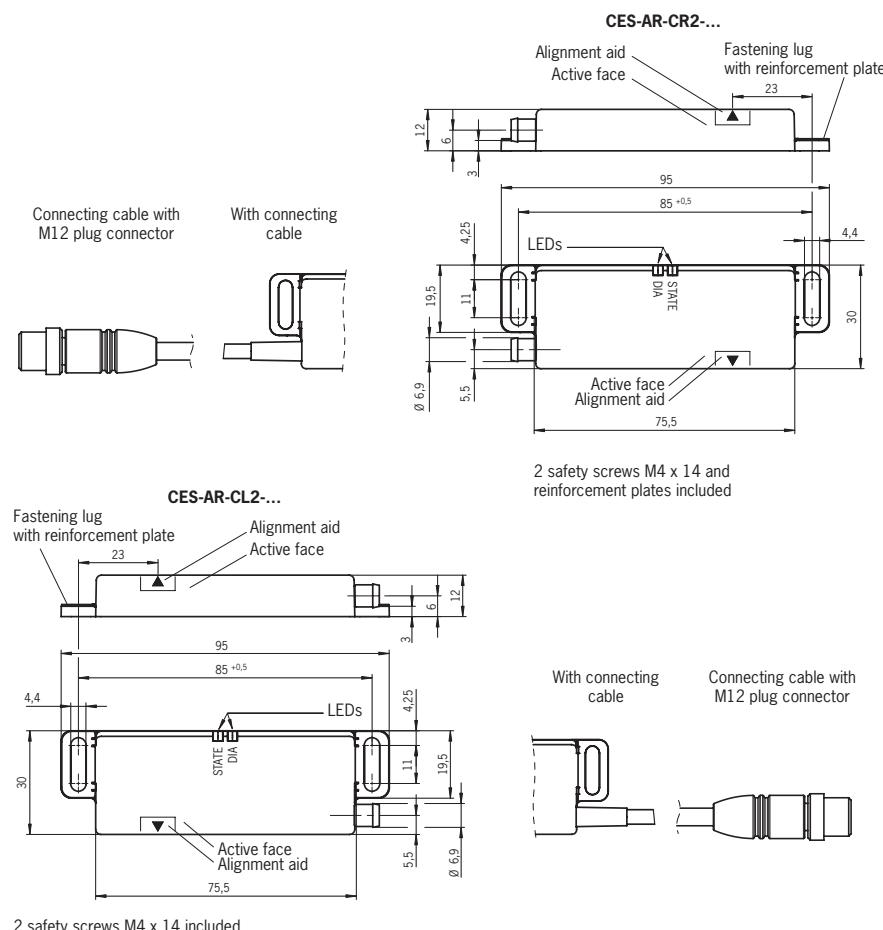**Dimension drawing**



CO2

## Terminal assignment

Pin	Designation	Function	Conductor coloring
1	IB	Enable input, channel B	WH
2	UB	Operating voltage, 24 V DC	BN
3	OA	Safety output, channel A	GN
4	OB	Safety output, channel B	YE
5	OUT	Door position monitoring output	GY
6	IA	Enable input, channel A	PK
7	OV	Ground 0 V DC	BU
8	RST	Reset input	RD

**Safety switch CES-I-AR--C04-...**

- ▶ Small design
- ▶ 3 active faces
- ▶ Diagnostics via 2 LEDs
- ▶ Limit-range indication
- ▶ Rubber support for protection against soiling
- ▶ Mounting distance 32 mm (EUCHNER standard)
- ▶ ATEX protective cover (optional)

**Details****Available coding options**

- ▶ Unicode evaluation
- ▶ Multicode evaluation
- ▶ Fixcode evaluation

**Limit-range indication**

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time.

**Rubber support**

A rubber support is included with each switch and actuator and is intended to prevent the accumulation of soiling in the area of the mounting holes.

**LED indicator**

<b>STATE</b>	Status
<b>DIA</b>	Diagnostics

**ATEX protective cover**

Housing guard AM-C-C04-EX-137528 is required for use in potentially explosive atmospheres. See accessories on p. 90.

**Further information**

- ▶ For dimension drawings, see p. 90
- ▶ For accessories and spare parts, see p. 90
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).
- ▶ You will find information on the series connection of AR devices on page 5.

**Ordering table****Safety switch**

Series	Version	Order no./item	
CES-I-AR-U-C04-... Unicode	<b>M8</b> <b>8 pin</b>	<b>119469</b> CES-I-AR-U-C04-SG-119469	     For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	<b>M12</b> <b>8 pin</b> <b>PUR</b> <b>1m</b>	<b>119473</b> CES-I-AR-U-C04-USA-119473	
	<b>5m</b>	<b>119470</b> CES-I-AR-U-C04-U05-119470	
	<b>8 wire</b> <b>PUR</b> <b>10m</b>	<b>119471</b> CES-I-AR-U-C04-U10-119471	
	<b>20m</b>	<b>119472</b> CES-I-AR-U-C04-U20-119472	

Series	Version	Order no./item	
CES-I-AR-M-C04-... Multicode	<b>M8</b> <b>8 pin</b>	<b>119474</b> CES-I-AR-M-C04-SG-119474	
	<b>M12</b> <b>8 pin</b> <b>PUR</b> <b>1m</b>	<b>119479</b> CES-I-AR-M-C04-USA-119479	
	<b>5m</b>	<b>119475</b> CES-I-AR-M-C04-U05-119475	
	<b>8 wire</b> <b>PUR</b> <b>10m</b>	<b>119476</b> CES-I-AR-M-C04-U10-119476	
	<b>20m</b>	<b>119477</b> CES-I-AR-M-C04-U20-119477	
CES-I-AR-F-C04-... <sup>1)</sup> Fixcode	<b>M8</b> <b>8 pin</b>	<b>161679</b> CES-I-AR-F-C04-SG-161679	

1) Actuator CES-A-BBN-C04 included

#### Actuator





Series	Design	Typ. actuating range [mm]	Order no./item	
CES-A-BDN-06	Ø6 x 26	19	<b>104730</b> CES-A-BDN-06-104730	
	Ø6 x 38	26	<b>161742</b> CES-A-BDN-06-161742	
CES-A-BBN-C04	42 x 25	15	<b>115271</b> CES-A-BBN-C04-115271	
CES-A-BBN-161502	42 x 25	26	<b>161502</b> CES-A-BBN-161502	
CES-A-BBN-C04-EX-137527	42 x 25	15	<b>137527</b> CES-A-BBN-C04-EX-137527	




Function expansion with CEM-C60, see page 58.

For detailed information,  
enter the order number for  
the product in the search box  
at [www.euchner.com](http://www.euchner.com).

**Accessories**

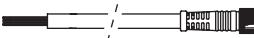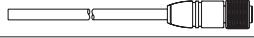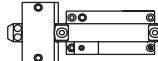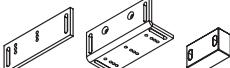Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M8</b> <b>8 pin</b> Page 122
	Connecting cable with plug connector 	<b>M12</b> <b>8 pin</b> Page 126
	Strapping plug/Y-distributor	<b>M12</b> Page 128
	Passive distribution module	<b>M12</b> Page 129
<b>Bolts</b>	Bolts for housing design C04 	Page 138
<b>Fixing material</b>	Mounting sets 	Page 142
	Safety screws	Page 144
 <b>Housing guard</b>	Housing guard ATEX for switches 	Page 144

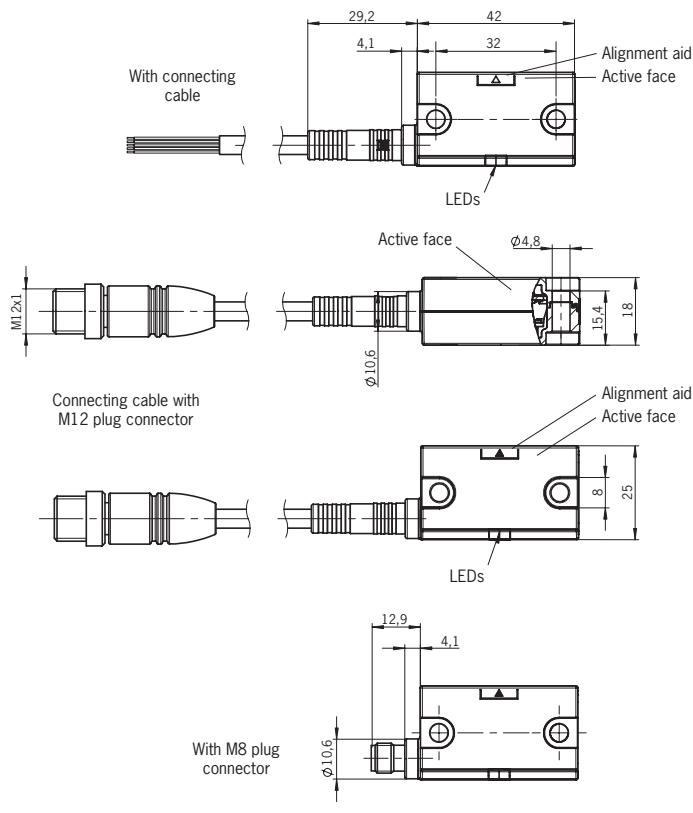**Dimension drawing**

M8 8 pin M12 8 pin  8 wire

C04

## Terminal assignment

Pin	Designation	Function	Conductor coloring
1	FI1B	Enable input, channel B	WH
2	UB	Operating voltage, 24 V DC	BN
3	FO1A	Safety output, channel A	GN
4	FO1B	Safety output, channel B	YE
5	OD	Door position monitoring output	GY
6	FI1A	Enable input, channel A	PK
7	OV	Ground 0 V DC	BU
8	RST	Reset input	RD

**Safety switch CES-I-AR--C14-...**

- ▶ Safety switch CES-C04 encapsulated in epoxy resin
- ▶ Very high resistance to aggressive media
- ▶ 3 active faces
- ▶ Diagnostic LEDs are easily visible through the transparent sleeve
- ▶ Large actuating range in frontal and lateral approach directions
- ▶ Degree of protection IP65/IP67/IP69/IP69K

**Details****Available coding options**

- ▶ Unicode evaluation
- ▶ Multicode evaluation

**Housing material**

The epoxy resin housing material is suitable for use in the food industry (ECOLAB material resistance test).

**Limit-range indication**

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED. This allows the safety door to be readjusted in time.

**LED indicator**

<b>STATE</b>	Status
<b>DIA</b>	Diagnostics

**Additional connections**

<b>OD</b>	Monitoring output (semiconductor)
-----------	-----------------------------------

**Further information**

- ▶ For dimension drawings, see p. 93
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**Ordering table****Safety switch**

Series	Version	Order no./item	
CES-I-AR-M-C14-... Multicode	With monitoring output	<b>162596</b> CES-I-AR-M-C14-U20-162596	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .


**Actuator**

Series	Design	Typ. actuating range [mm]	Order no./item	
CES-A-BBN-C14 encapsulated with epoxy resin	72 x 30	24	<b>160441</b> CES-A-BBN-C14-160441	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .

8  
wire

C14

## Dimension drawing

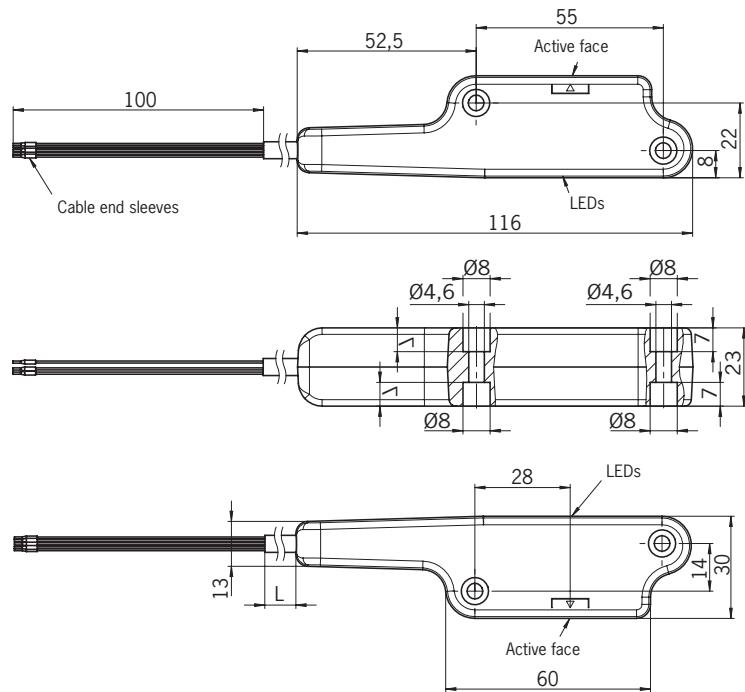

## Terminal assignment

Conductor coloring	Designation	Function
WH	FI1B	Enable input, channel B
BN	UB	Operating voltage, 24 V DC
GN	FO1A	Safety output, channel A
YE	FO1B	Safety output, channel B
GY	OD	Door position monitoring output
PK	FI1A	Enable input, channel A
BU	OV	Ground 0 V DC
RD	RST	Reset input

## Safety switch CEM-I2-AR--C40-... with guard locking for process protection



- ▶ Safety switch with guard locking for process protection
- ▶ Locking force 600 N
- ▶ Diagnostics via 4 LEDs
- ▶ Adjustable adhesive force (with guard locking inactive)
- ▶ Limit range indication for transponder and anchor plate

### Notice

The safety switch CEM-I2-AR--C40-... is only allowed to be operated in conjunction with the actuator A-C40.

### Details

#### Available coding options

- ▶ Unicode evaluation
- ▶ Multicode evaluation

#### Adjustable adhesive force

The adhesive force can be set in steps of 0 N, approx. 30 N and approx. 50 N (delivery state) with the aid of a parametrization key (order no. 125481). The adhesive force is active if guard locking is inactive. The operating voltage  $U_B$  must be present for this purpose.

#### Limit-range indication

The device detects if the actuator wanders out of the actuating range, and indicates that the actuator is in the limit range by flashing the STATE LED.

This allows the safety door to be readjusted in time. The device also signals if the guard locking force is less than 400 N on switching on.

#### LED indicator

<b>POWER</b>	Operating voltage
<b>STATE</b>	Status
<b>DIA</b>	Diagnostics
<b>LOCK</b>	Guard locking

### Further information

- ▶ For dimension drawings, see p. 95
- ▶ For accessories and spare parts, see p. 94
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).
- ▶ You will find information on the series connection of AR devices on page 5.

## Ordering table

### Safety switch

Series	Version	Order no./item	
CEM-I2-AR-... Unicode		<b>124937</b> CEM-I2-AR-U-C40-SH-124937	
CEM-I2-AR-... Multicode		<b>113739</b> CEM-I2-AR-M-C40-SH-113739	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .

### Actuator




Series	Design	Order no./item	
A-C40		<b>113869</b> A-C40-113869	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
		<b>158436</b> A-C40-158436	
Parameterization key		<b>125481</b> A-TI-001-125481	

### Accessories


Type	Version	
Connection material	Connecting cable with plug connector 	<b>M23</b> <b>19 pin</b> Page 131
	Female plug (for self-assembly) 	<b>M23</b> <b>19 pin</b> Page 133
Fixing material	Mounting bracket 	Page 142
	Safety screws 	Page 144
Miscellaneous accessories	Lockout bar 	Page 144

## Dimension drawing



## Safety switch

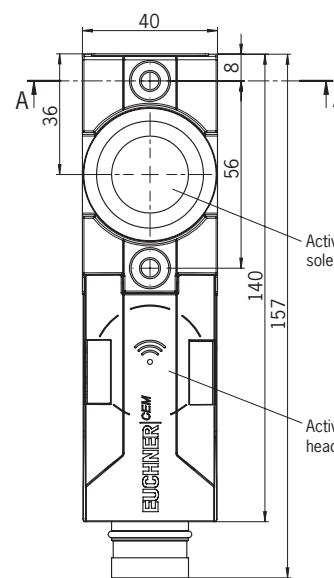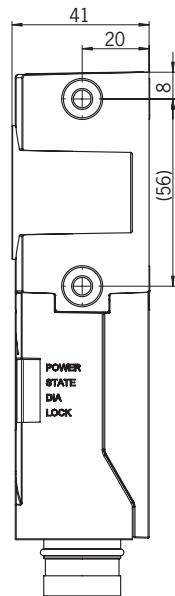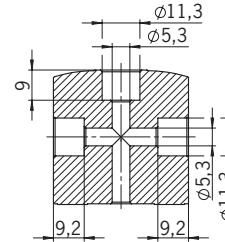

**Actuator  
A-C40-113869**

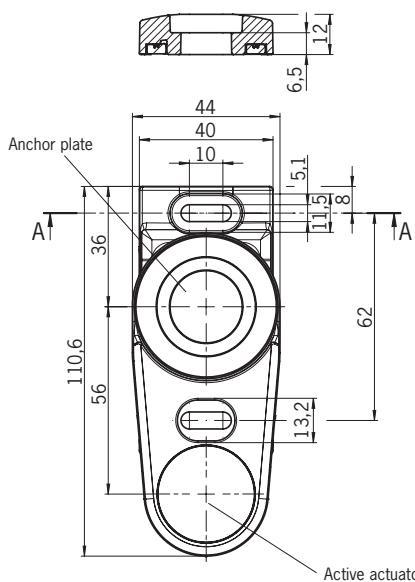

**Actuator  
A-C40-158436**

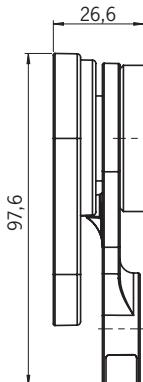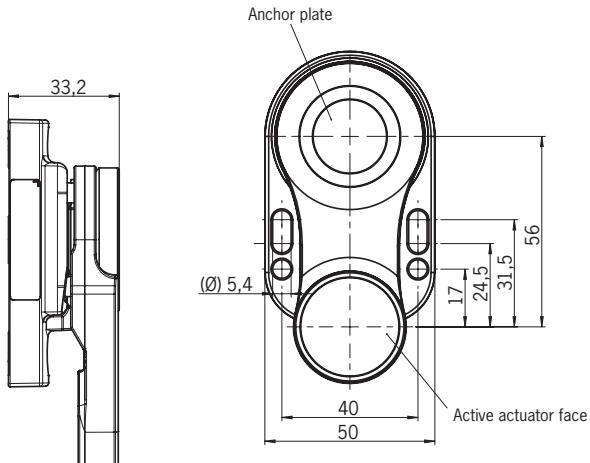

**M23** **19  
pin****Terminal assignment**

Pin	Designation	Function
1	IMP	Operating voltage of solenoid, 24 V DC
2	FI1A	Enable input, channel A
3	FI1B	Enable input, channel B
4	FO1A	Safety output, channel A
5	FO1B	Safety output, channel B
6	UB	Operating voltage of electronics, 24 V DC
7	RST	Reset input
8	OT	Door position monitoring output
9	OI	Diagnostic monitoring output
10	OL	Guard locking monitoring output
11	-	n.c.
12	FE	Function earth (must be connected to meet the EMC requirements)
13	-	n.c.
14	-	n.c.
15	-	n.c.
16	-	n.c.
17	-	n.c.
18	-	n.c.
19	OVUB	Operating voltage of electronics, 0 V DC



## Safety switch CTP-L.-AR-... with guard locking



- ▶ Safety switch with guard locking
- ▶ Locking force up to 3,900 N
- ▶ Diagnostics via 3 LEDs

### Notice

The device is only allowed to be operated in conjunction with the actuators A-C-H-....

### Details

#### Approach direction



Head can be rotated in 90° steps

#### Available coding options

- ▶ Unicode evaluation
- ▶ Multicode evaluation

#### Guard locking types

- |           |   |
|-----------|---|
| <b>L1</b> | <b>Closed-circuit current principle</b><br>Guard locking by spring force.<br>Release by applying voltage to the guard locking solenoid.                         |
| <b>L2</b> | <b>Open-circuit current principle</b><br>Guard locking by solenoid force.<br>Activation of the guard locking by applying voltage to the guard locking solenoid. |
| <b>I2</b> | As for L2, but without guard lock monitoring. Guard locking for process protection only.  |

#### Auxiliary release

Included with all versions as standard.

#### Escape release (optional)

Some devices have an escape release. The escape release can be extended with the aid of the support brackets supplied.

#### Retrofittable releases

Devices with auxiliary release can be retrofitted with various release functions (see accessories).

#### Extended version

With integrated control elements (optional)

#### Stainless-steel version

Devices with robust stainless-steel components for harsh ambient conditions. They comply with the IP67/IP69/IP69K degree of protection. ECOLAB certificate available.

#### LED indicator

<b>STATE</b>	Status
<b>LOCK</b>	Guard locking
<b>DIA</b>	Diagnostics

#### Additional connections

<b>OD</b>	Door position monitoring output
<b>OI</b>	Diagnostic monitoring output
<b>OL</b>	Guard locking monitoring output

#### Further information

- ▶ For dimension drawings, see p. 103
- ▶ For accessories and spare parts, see p. 102
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).
- ▶ You will find information on the series connection of AR devices on page 5.

1) German Social Accident Insurance approval pending

## Ordering table

CTP-L.-AR-...-SAB-... with 2 plug connectors M12

Order no./item	Coding U = unicode M = multicode	Escape release	Guard locking Personnel/process protection	For wiring diagram, see page 104	
<b>CTP-L1</b> Closed-circuit current principle					
<b>122812</b> CTP-L1-AR-U-HA-AZ-SAB-122812	U				
<b>122813</b> CTP-L1-AR-U-HA-AE-SAB-122813	U	●			
<b>123307</b> CTP-L1-AR-M-HA-AZ-SAB-123307	M				
<b>123308</b> CTP-L1-AR-M-HA-AE-SAB-123308	M	●			
<b>CTP-L2</b> Open-circuit current principle					
<b>122814</b> CTP-L2-AR-U-HA-AZ-SAB-122814	U				
<b>123361</b> CTP-L2-AR-M-HA-AZ-SAB-123361	M				

CTP-...-AR-...-SAB-... with 2 plug connectors M12, stainless-steel version

Order no./item	Coding U = unicode M = multicode	Escape release	Guard locking Personnel/process protection	For wiring diagram, see page 67	
<b>CTP-L1</b> Closed-circuit current principle					
<b>160862</b> CTP-L1-AR-U-HA-AZS-SAB-160862	U				
<b>157816</b> CTP-L1-AR-M-HA-AES-SAB-157816	M				






## CTP-L.-AR-....-SH-... with plug connector M23

M23 19 pin	Order no./item	Coding U = unicode M = multicode	Escape release	Guard locking Personnel/process protection	For wiring diagram, see page 104	
<b>CTP-L1</b> Closed-circuit current principle						
<b>123362</b> CTP-L1-AR-U-HA-AZ-SH-123362	U				<b>B</b>	<p>For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a>.</p>
<b>123373</b> CTP-L1-AR-U-HA-AE-SH-123373	U		●		<b>B</b>	
<b>123363</b> CTP-L1-AR-M-HA-AZ-SH-123363	M				<b>B</b>	
<b>123374</b> CTP-L1-AR-M-HA-AE-SH-123374	M		●		<b>B</b>	
<b>CTP-L2</b> Open-circuit current principle						
<b>123366</b> CTP-L2-AR-U-HA-AZ-SH-123366	U				<b>B</b>	
<b>123369</b> CTP-L2-AR-M-HA-AZ-SH-123369	M				<b>B</b>	

## CTP-L.-AR-....-SH-... plug connector M23, Extended version






M23 19 pin	Order no./item	Coding U = unicode M = multicode	Escape release	Control elements	Guard locking Personnel/process protection	For wiring diagram, see page 104	
<b>CTP-L1</b> Closed-circuit current principle							
<b>137341</b> CTP-L1-AR-U-HA-AZE-SH-137341	U			2 pushbuttons (illuminated)		<b>C</b>	<p>For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a>.</p>
<b>126874</b> CTP-L1-AR-U-HA-AZE-SH-126874	U			Emergency stop, 2 pushbuttons (illuminated)		<b>D</b>	
<b>137164</b> CTP-L1-AR-U-HA-AEE-SH-137164	U		●	Emergency stop, 2 pushbuttons (illuminated)		<b>D</b>	
<b>CTP-L2</b> Open-circuit current principle							
<b>137165</b> CTP-L2-AR-U-HA-AZE-SH-137165	U			Emergency stop, 2 pushbuttons (illuminated)		<b>D</b>	
<b>159112</b> CTP-L2-AR-U-HA-AEE-SH-159112	U		●	Emergency stop, 2 pushbuttons (illuminated)		<b>D</b>	

## Actuator

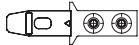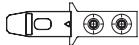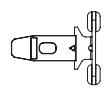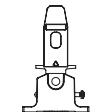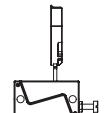
Series	Design	Order no./item	
A-C-H-...	 Straight	<b>126015</b> A-C-H-G-SST-126015	  For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	 Stainless steel, straight	<b>157696</b> A-C-H-G-SSS-157696	
	 Bent, upward <sup>1)</sup>	<b>122667</b> A-C-H-W-SST-122667	
		<b>122668</b> A-C-H-W-SST-122668	
	 Hinged actuators	<b>122671</b> A-C-H-RL-LS-122671	
		<b>122672</b> A-C-H-RR-LS-122672	
	 Hinged actuators	<b>122675</b> A-C-H-RO-LS-122675	
		<b>122676</b> A-C-H-RU-LS-122676	

1) Applies to the following orientation: connection/cable outlet pointing downward



**Accessories**

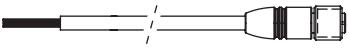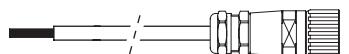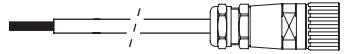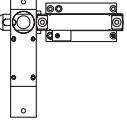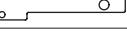Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M12</b> <b>5 pin</b> Page 123
	Connecting cable with plug connector 	<b>M23</b> <b>8 pin</b> Page 126
	Connecting cable with plug connector 	<b>M23</b> <b>19 pin</b> Page 131/132
	Female plug (for self-assembly) 	<b>M23</b> <b>19 pin</b> Page 133
	Strapping plug/Y-distributor 	<b>M12</b> Page 128
<b>Bolts</b>	Passive distribution module 	<b>M12</b> Page 129
	Bolts for housing design CTP 	Page 139
<b>Fixing material</b>	Mounting plates 	Page 142
	Safety screws 	Page 144
	Auxiliary key release 	
<b>Miscellaneous accessories</b>	Release 	
	Emergency release 	
	Wire front release (bowden) 	Page 144 f.
	Handle for wire front release 	
	Lockout bar 	




## Dimension drawing

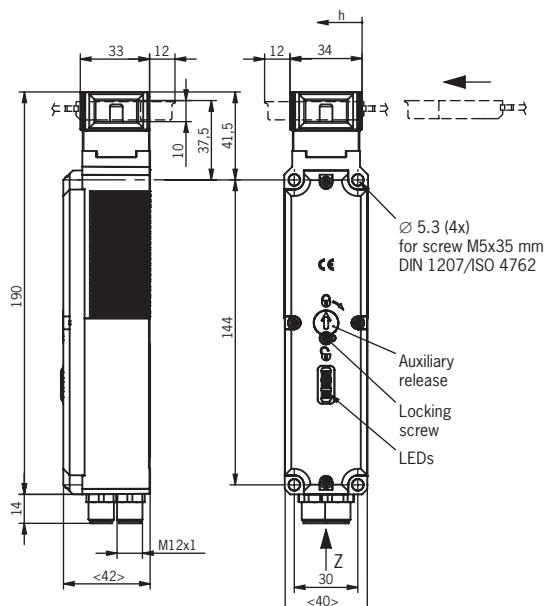

### With escape release

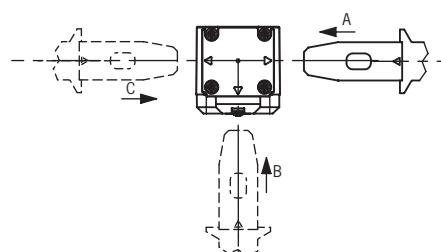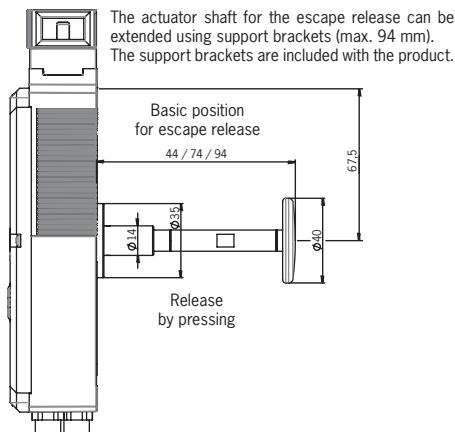

### Extended version

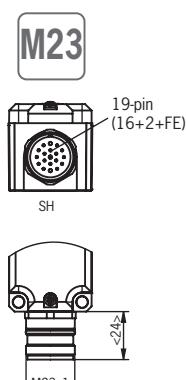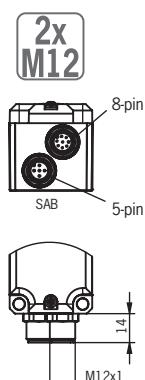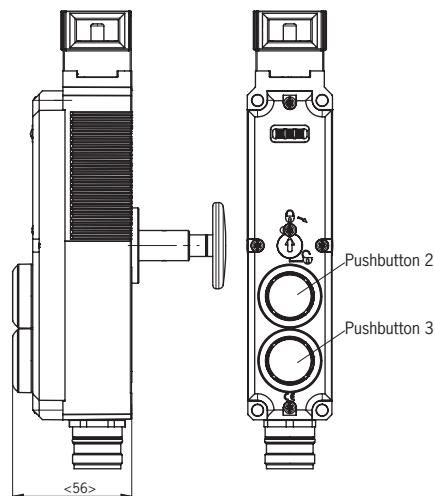

You can find the dimension drawing for the stainless-steel version by entering the order number for the product at [www.euchner.com](http://www.euchner.com)



### Terminal assignment



Wiring diagram A

Pin	Designation	Function
X 1.1	FI1B	Enable input, channel B
X 1.2	UB	Operating voltage of electronics, 24 V DC
X 1.3	FO1A	Safety output, channel A
X 1.4	FO1B	Safety output, channel B
X 1.5	OL	Guard locking monitoring output
X 1.6	FI1A	Enable input, channel A
X 1.7	OVUB	Operating voltage of electronics, 0 V DC
X 1.8	RST	Reset input
X 2.1	IMM	Operating voltage of solenoid, 0 V DC
X 2.2	OD	Door position monitoring output
X 2.3	OI	Diagnostic monitoring output
X 2.4	IMP	Operating voltage of solenoid, 24 V DC
X 2.5	-	n.c.



Wiring diagram B

Pin	Designation	Function
1	IMP	Operating voltage of solenoid, 24 V DC
2	FI1A	Enable input, channel A
3	FI1B	Enable input, channel B
4	FO1A	Safety output, channel A
5	FO1B	Safety output, channel B
6	UB	Operating voltage of electronics, 24 V DC
7	RST	Reset input
8	OD	Door position monitoring output
9	OI	Diagnostic monitoring output
10	OL	Guard locking monitoring output
11	-	n.c.
12	FE	Function earth (must be connected to meet the EMC requirements)
13	-	n.c.
14	-	n.c.
15	-	n.c.
16	-	n.c.
17	-	n.c.
18	IMM	Operating voltage of solenoid, 0 V DC
19	OVUB	Operating voltage of electronics, 0 V DC


**M23** **19  
pin****CTP****C** **M23** **19  
pin****Wiring diagram C**

<b>Pin</b>	<b>Designation</b>	<b>Function</b>
1	IMP	Operating voltage of solenoid, 24 V DC
2	FI1A	Enable input, channel A
3	FI1B	Enable input, channel B
4	FO1A	Safety output, channel A
5	FO1B	Safety output, channel B
6	UB	Operating voltage of electronics, 24 V DC
7	RST	Reset input
8	OD	Door position monitoring output
9	OI	Diagnostic monitoring output
10	OL	Guard locking monitoring output
11	-	n.c.
12	FE	Function earth (must be connected to meet the EMC requirements)
13	IMM	Operating voltage of solenoid, 0 V DC
14	-	n.c.
15	S2	Pushbutton 2
16	H2	LED 2
17	S3	Pushbutton 3
18	H3	LED 3
19	OVUB	Operating voltage of electronics, 0 V DC

**D** **M23** **19  
pin****Wiring diagram D**

<b>Pin</b>	<b>Designation</b>	<b>Function</b>
1	IMP	Operating voltage of solenoid, 24 V DC
2	FI1A	Enable input, channel A
3	FI1B	Enable input, channel B
4	FO1A	Safety output, channel A
5	FO1B	Safety output, channel B
6	UB	Operating voltage of electronics, 24 V DC
7	RST	Reset input
8	OD	Door position monitoring output
9	OI	Diagnostic monitoring output
10	S1.A1	Emergency stop (channel A contact 1)
11	S1.A2	Emergency stop (channel A contact 2)
12	FE	Function earth
13	S1.B1	Emergency stop (channel B contact 1)
14	S1.B2	Emergency stop (channel B contact 2)
15	S2	Pushbutton 2
16	H2	LED 2
17	S3	Pushbutton 3
18	H3	LED 3
19	OV	Operating voltage of electronics and solenoid, 0 V DC

## Safety switch CET.-AR-... with guard locking

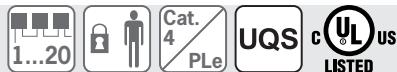

- ▶ Safety switch with guard locking
- ▶ Locking force up to 6,500 N
- ▶ Metal housing
- ▶ Diagnostics via 4 LEDs

### Notice

The device is only allowed to be operated in conjunction with the actuator CET-A-....

### Details

#### Approach direction



Head can be rotated in 90° steps

#### Available coding options

- ▶ Unicode evaluation
- ▶ Multicode evaluation

### Guard locking types

#### CET1 Closed-circuit current principle

Guard locking by spring force.  
Release by applying voltage to the guard locking solenoid.

#### CET2 Open-circuit current principle

Guard locking by solenoid force.  
Activation of the guard locking by applying voltage to the guard locking solenoid.

#### CET3

Function as for CET1-AR, but here the door position is monitored as well. The door position monitoring output OUT D is set to HIGH as soon as the actuator is above the extended plunger (state: door closed, guard locking not active). The output OUT D also remains set when guard locking is active.

#### CET4

Function as for CET2-AR, but here the door position is monitored as well. The door position monitoring output OUT D is set to HIGH as soon as the actuator is above the extended plunger (state: door closed, guard locking not active). The output OUT D also remains set when guard locking is active.

#### Auxiliary release

Included with all versions as standard.

#### Escape release (optional)

Some devices have an escape release (see ordering table).

#### Wire front release (optional)

The wire front release permits remote unlocking of the guard locking via a pull wire. Flexible routing of the pull wire permits release of the guard locking in inaccessible installation situations.

### Teach-in input (optional)

Some devices with unicode evaluation have a teach-in input. These devices can be taught-in only if the teach-in input has the corresponding circuit. In this way, the protection against tampering is additionally increased.

### Double ramp

 Versions with double ramp can be approached from two sides.

 Devices with double ramp are also suitable for applications in which the switch must be "passed over," e.g. on doors that can be opened inwards and outwards. The double ramp can be retrofitted (see accessories page 146).

### Feedback loop (optional)

Versions with feedback loop permit monitoring of downstream devices (e.g. contactors). Additionally, a start button can be integrated.

### LED indicator

**STATE** Status

**DIA** Diagnostics

**LED 1 red** see wiring diagram

**LED 2 green** see wiring diagram

### Additional connections

**OUT** Monitoring output (semiconductor)

**OUT D** Door position monitoring output (only CET3/4)

**RST** Reset input

### Further information

- ▶ For dimension drawings, see p. 112
- ▶ For accessories and spare parts, see p. 111
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).
- ▶ You will find information on the series connection of AR devices on page 5.

## Ordering table

CET.-AR-...-SG-... with 2 plug connectors M12, without door position monitoring output

Order no./item	Coding U = unicode M = multicode	Ramp	Teach-in input	Feedback loop	Function earth	Escape release	Wire front release (L1 <sup>1)</sup> )	For wiring diagram, see page 114
<b>CET1</b> Closed-circuit current principle								
<b>106275</b> CET1-AR-CDA-AH-50X-SG-106275	U		●					
<b>106616</b> CET1-AR-CRA-AH-50A-SG-106616	U			●		75 mm		
<b>106159</b> CET1-AR-CRA-AH-50F-SG-106159	U		●			75 mm		
<b>105802</b> CET1-AR-CRA-AH-50S-SG-105802	U			●				
<b>103418</b> CET1-AR-CRA-AH-50X-SG-103418	U		●					
<b>110241</b> CET1-AR-CRA-CH-50F-SG-110241	M					75 mm		A
<b>105764</b> CET1-AR-CRA-CH-50S-SG-105764	M			●				
<b>105763</b> CET1-AR-CRA-CH-50X-SG-105763	M							
<b>109015</b> CET1-AR-CRA-CH-50X-SG-C2290-109015	M				●		3 m	
<b>109231</b> CET1-AR-CDA-CH-50X-SG-109231	M							
<b>CET2</b> Open-circuit current principle								
<b>109075</b> CET2-AR-CRA-AH-50S-SG-109075	U			●				
<b>110240</b> CET2-AR-CRA-AH-50X-SG-110240	U		●					
<b>109941</b> CET2-AR-CRA-CH-50F-SG-C2312-109941	M					105 mm		A
<b>110082</b> CET2-AR-CRA-CH-50X-SG-110082	M							

For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

1) L1 = sleeve length; rope length = L1 + 1 m. Important: Handle must be ordered separately (see accessories, page 144).

## CET.-AR-...-SG... with 2 plug connectors M12, with door position monitoring output

  	Order no./item	Coding U = unicode M = multicode	Ramp	Teach-in input	Feedback loop	Function earth	Escape release	Wire front release (L1) <sup>1)</sup>	For wiring diagram, see page 114	
<b>CET3</b> Closed-circuit current principle										
<b>110114</b> CET3-AR-CRA-CH-50X-SG-C2290-110114	M				●			3 m		
<b>110906</b> CET3-AR-CRA-CH-50X-SG-110906	M				●					
<b>110907</b> CET3-AR-CRA-CH-50F-SG-110907	M				●	75 mm				
<b>109401</b> CET3-AR-CRA-AH-50X-SG-109401	U			●						<b>B</b>
<b>113139</b> CET3-AR-CRA-AH-50X-SG-C2290-113139	U			●				3 m		
<b>113965</b> CET3-AR-CRA-AH-50F-SG-113965	U			●		75 mm				
<b>112992</b> CET3-AR-CRA-CH-50S-SG-112992	M				●					
<b>114090</b> CET3-AR-CDA-CH-50F-SG-114090	M									
<b>CET4</b> Open-circuit current principle										
<b>111683</b> CET4-AR-CRA-AH-50X-SG-111683	U			●						
<b>128193</b> CET4-AR-CRA-AH-50X-SG-C2290-128193	U			●				3 m		
<b>111684</b> CET4-AR-CRA-CH-50X-SG-111684	M									
<b>114650</b> CET4-AR-CRA-CH-50F-SG-114650	M					75 mm				<b>B</b>
<b>113081</b> CET4-AR-CRA-CH-50S-SG-113081	M				●					
<b>114712</b> CET4-AR-CDA-CH-50X-SG-114712	M									
<b>162555</b> CET4-AR-CRA-AH-50X-SG-C2355-162555	U									
<b>113609</b> CET4-AR-CRA-CH-50X-SG-C2355-113609	M									<b>C</b>

1) L1 = sleeve length; rope length = L1 + 1 m. Important: Handle must be ordered separately (see accessories, page 144).

For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

## CET.-AR-...-SH-... with plug connector M23, without door position monitoring output

M23 19 pin	Coding U = unicode M = multicode	Ramp	Teach-in input	Feedback loop	Function earth	Escape release	Wire front release (L1) <sup>1)</sup>	For wiring diagram, see page 115	
<b>CET1</b> Closed-circuit current principle									
<b>110203</b> CET1-AR-CRA-AH-50X-SH-110203	U		●		●				
<b>113022</b> CET1-AR-CRA-AH-50X-SH-C2290-113022	U		●		●		3 m		
<b>110943</b> CET1-AR-CRA-AH-50F-SH-C2312-110943	U		●		●	105 mm			<b>D</b>
<b>110204</b> CET1-AR-CRA-CH-50X-SH-110204	M				●				
<b>124104</b> CET1-AR-CRA-CH-50F-SH-C2312-124104	M				●	105 mm			
<b>113255</b> CET1-AR-CDA-CH-50X-SH-113255	M				●				
<b>CET2</b> Open-circuit current principle									
<b>110205</b> CET2-AR-CRA-AH-50X-SH-110205	U		●		●				<b>D</b>
<b>110206</b> CET2-AR-CRA-CH-50X-SH-110206	M				●				

For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

1) L1 = sleeve length; rope length = L1 + 1 m. Important: Handle must be ordered separately (see accessories, page 144).

## CET.-AR-...-SH-... with plug connector M23, with door position monitoring output

M23 19 pin	Order no./item	Coding U = unicode M = multicode	Ramp	Teach-in input	Feedback loop	Function earth	Escape release	Wire front release (L1) <sup>1)</sup>	For wiring diagram, see page 115	
<b>CET3</b> Closed-circuit current principle										
<b>110103</b> CET3-AR-CRA-AH-50X-SH-110103	U			●		●				
<b>111725</b> CET3-AR-CRA-AH-50F-SH-C2312-111725	U			●		●	105 mm			
<b>113024</b> CET3-AR-CRA-AH-50X-SH-C2290-113024	U			●		●		3 m		
<b>113023</b> CET3-AR-CRA-AH-50F-SH-C2353-113023	U			●		●	105 mm	3 m		
<b>114088</b> CET3-AR-CRA-AH-50X-SH-C2290-114088	U			●		●		5 m		
<b>113148</b> CET3-AR-CRA-AH-50F-SH-113148	U			●		●	75 mm			
<b>115202</b> CET3-AR-CRA-AH-50X-SH-C2375-115202	U					●				
<b>110104</b> CET3-AR-CRA-CH-50X-SH-110104	M					●				
<b>CET4</b> Open-circuit current principle										
<b>110201</b> CET4-AR-CRA-AH-50X-SH-110201	U			●		●				
<b>116285</b> CET4-AR-CRA-AH-50F-SH-116285	U			●		●	75 mm			
<b>110202</b> CET4-AR-CRA-CH-50X-SH-110202	M					●				

1) L1 = sleeve length; rope length = L1 + 1 m. Important: Handle must be ordered separately (see accessories, page 144).







For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

## Actuator

Series	Design	Order no./item	
<b>CET-A-BWK-50X</b>		<b>096327</b> CET-A-BWK-50X	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .


## Accessories

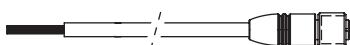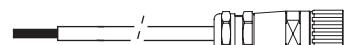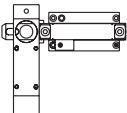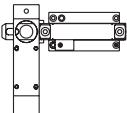Type	Version	
<b>Connection material</b>	Connecting cable with plug connector 	<b>M12</b> <b>5 pin</b> Page 123
		<b>M12</b> <b>8 pin</b> Page 126
	Connecting cable with plug connector 	<b>M23</b> <b>19 pin</b> Page 131/132
	Female plug (for self-assembly) 	<b>M23</b> <b>19 pin</b> Page 133
	Strapping plug/Y-distributor 	<b>M12</b> Page 128
<b>Bolts</b>	Passive distribution module 	<b>M12</b> Page 129
	Bolts for housing design CET 	 Page 139
<b>Fixing material</b>	Mounting plates 	 Page 142
	Safety screws 	 Page 144
<b>Miscellaneous accessories</b>	Lockout bar 	 Page 144 f.
	Auxiliary key release 	
	Emergency release 	
	Cover 	
	Double ramp 	
	Handle for wire front release 	


## Dimension drawing

**2x  
M12**

With 2 plug connectors M12

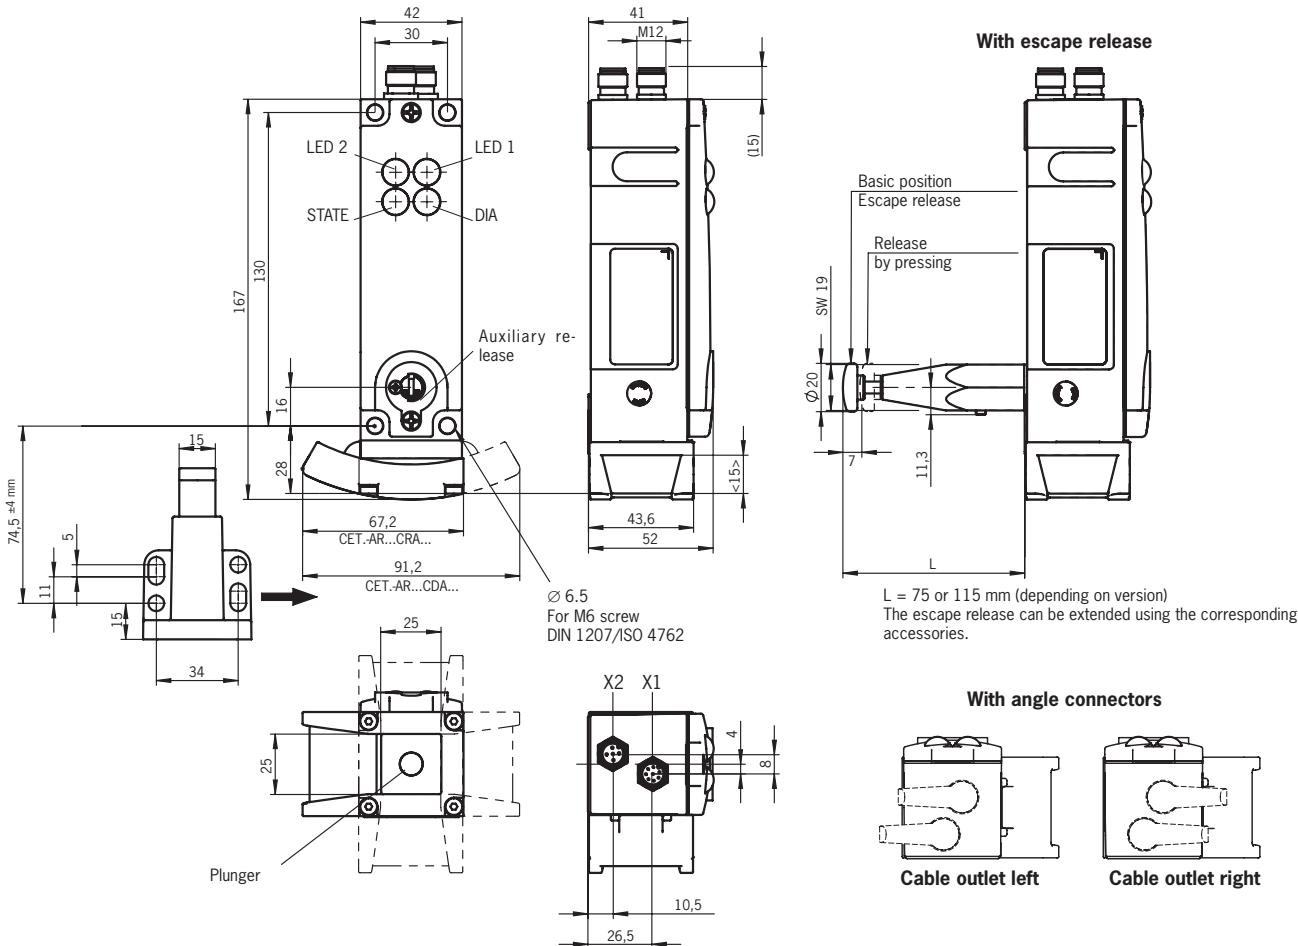


With angle connectors

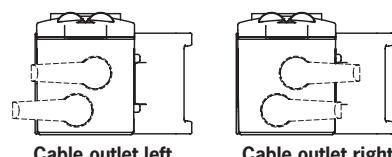


**M12**

With 1 plug connector M12

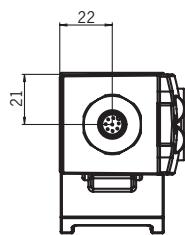


With angle connectors

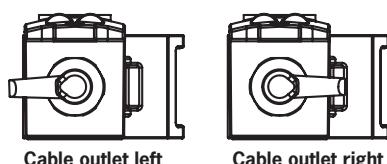


**M23**

Dimensions with plug connector M23

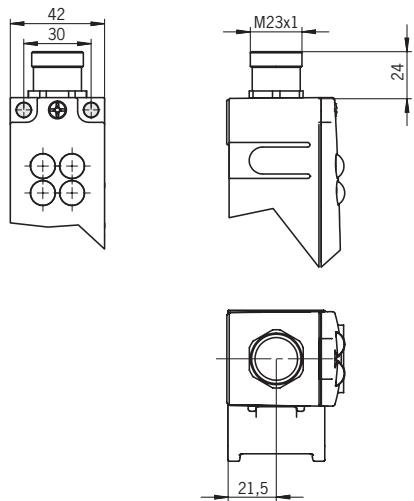


With plug connector M23

Cable outlet left

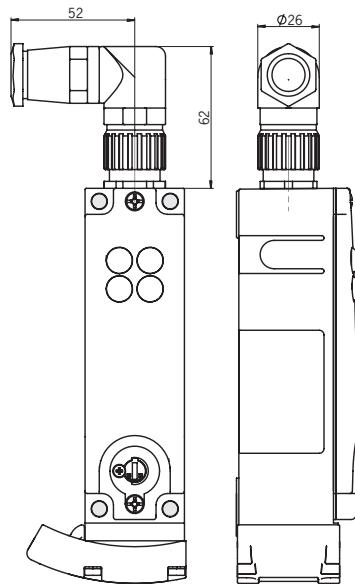


Cable outlet right

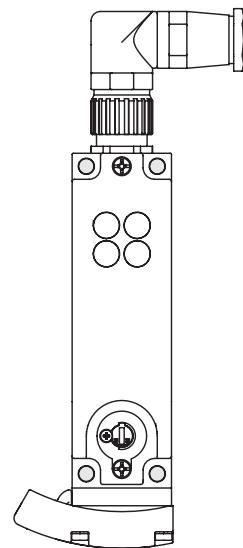


Versions with manual release options



With auxiliary key release

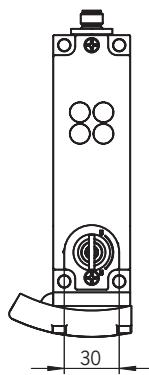

With emergency release

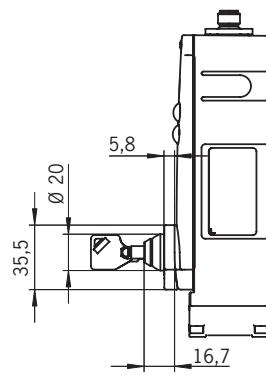

With wire front release

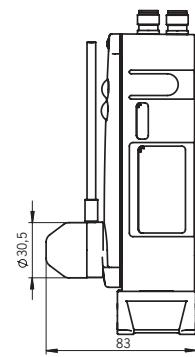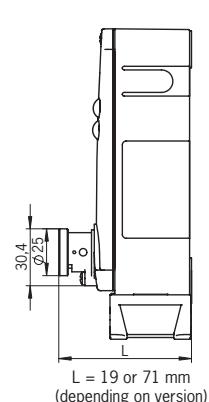



### Terminal assignment

**A** ... **C** Wiring diagrams A to C

Pin	Designation	Function	A	B	C
X 1.1	IB	Enable input, channel B	●	●	●
X 1.2	UB	Operating voltage of electronics, 24 V DC	●	●	●
X 1.3	OA	Safety output, channel A	●	●	●
X 1.4	OB	Safety output, channel B	●	●	●
X 1.5	OUT	Guard locking monitoring output	●	●	●
X 1.6	IA	Enable input, channel A	●	●	●
X 1.7	OVUB	Operating voltage of electronics, 0 V DC	●	●	●
X 1.8	RST	Reset input	●	●	●
X 2.1	OVUCM	Operating voltage of solenoid, 0 V DC	●	●	●
X 2.2	LED 1	LED 1 red, freely configurable, 24 V DC	●		
	OUT D	LED 1 red, solenoid energized	● <sup>1)</sup>		
X 2.3	LED 1	Door position monitoring output (indication on LED 2)		●	●
	LED 2	LED 1 red, freely configurable, 24 V DC		●	
	OUT	LED 2 green, freely configurable, 24 V DC	●		●
X 2.4	UCM	Guard locking monitoring output			
X 2.5	J	Operating voltage of solenoid, 24 V DC	●	●	●
	Y	Version with teach-in input	●	●	
	-	Version with feedback loop	●	●	
	FE	Version without feedback loop, without teach-in input and without function earth	● <sup>1)</sup>	●	●
		Function earth			

1) Only for order no.109015

**M23** **19  
pin**

**CET**

**D**

...

**E** **Wiring diagrams D and E**

Pin	Designation	Function	M23	D	E
1	UCM	Operating voltage of solenoid, 24 V DC	●	●	
2	IA	Enable input, channel A	●	●	
3	IB	Enable input, channel B	●	●	
4	OA	Safety output, channel A	●	●	
5	OB	Safety output, channel B	●	●	
6	UB	Operating voltage of electronics, 24 V DC	●	●	
7	RST	Reset input	●	●	
8	OUT D	Door position monitoring output (only CET3-AR and CET4-AR)		●	
9	-	n.c.	●	●	
10	OUT	Guard locking monitoring output	●	●	
11	-	n.c.	●	●	
12	FE	Function earth	●	●	
13	J	Version with teach-in input	●	●	
	Y	Version with feedback loop	●	●	
	-	Version without feedback loop and without teach-in input	●	●	
14	-	n.c.	●	●	
15	LED 1	LED 1 red, freely configurable, 24 V DC	●	●	
16	LED 2	LED 2 green, freely configurable, 24 V DC	●	●	
17	-	n.c.	●	●	
18	OVUCM	Operating voltage of solenoid, 0 V DC	●	●	
19	OVUB	Operating voltage of electronics, 0 V DC	●	●	

**AR evaluation unit CES-AR-AES-12**

- ▶ Central evaluation of an AR switch chain
- ▶ Status of each individual switch can be recognized
- ▶ For switch chains of up to 12 devices
- ▶ Four individual safe relay contacts

**Details**

The AR evaluation unit is used to evaluate the individual safety switches in an AR switch chain and to reliably interrupt a safety circuit.

The unit has two inputs for the connection of an AR switch chain. The safety contacts are switched as a function of the input signals. Downstream parts of the safety circuit can be monitored using a feedback loop.

The switching states of the connected safety switches can be signaled by means of monitoring outputs (see table Terminal assignment p. 117). If the actuator on one of the safety switches in the switch chain is moved out of the actuating range, the AR evaluation unit opens its contacts and the corresponding monitoring output is reset. The system is designed so that failures will not result in the loss of the safety function. The occurrence of failures is detected by cyclic self-monitoring at the latest at the next demand to close the safety contacts.

The system can be started either manually using a start button or automatically.

**Category according to EN ISO 13849-1**

Due to two redundant safety paths (relay contacts) with 2 internal, monitored normally open contacts per safety path, suitable for:

- ▶ Category 4 / PL e according to EN ISO 13849-1
- ▶ Each safety path is independently safe.

**LED indicator**

<b>STATE</b>	Device status
<b>DIA</b>	Fault display
<b>OUT</b>	Switch chain status

**Notice**

The plug-in connection terminals are not included and must be ordered separately.

**Further information**

- ▶ For dimension drawings, see p. 117
- ▶ For accessories and spare parts, see p. 116
- ▶ For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).
- ▶ You will find information on the series connection of AR devices on page 5.

**Ordering table****AR evaluation unit**

Series	Order no./item	
CES-AR-AES-12 Unicode	098225 CES-AR-AES-12	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .


**Accessories**

Type	Version	
Connection material	Connection kits for AR evaluation unit CES-AR-AES-12	Page 134


**Which safety switches can be connected?**

AR evaluation unit	Safety switch
098225 CES-AR-AES-12	<b>CES-AR-C01...</b> from V1.1.2 (see type label on the device)
	<b>CES-AR-CR2...</b> from V1.1.2 (see type label on the device)
	<b>CES-AR-CL2...</b> from V1.1.2 (see type label on the device)
	<b>CES-I..-AR-C04</b> from V1.0.1 (see type label on the device)
	<b>CET1/2-AR...</b> from V1.1.2 (see type label on the device)
	<b>CET3/4-AR...</b> from V1.0.0 (see type label on the device)
	<b>CTP-AR</b>


## Dimension drawing

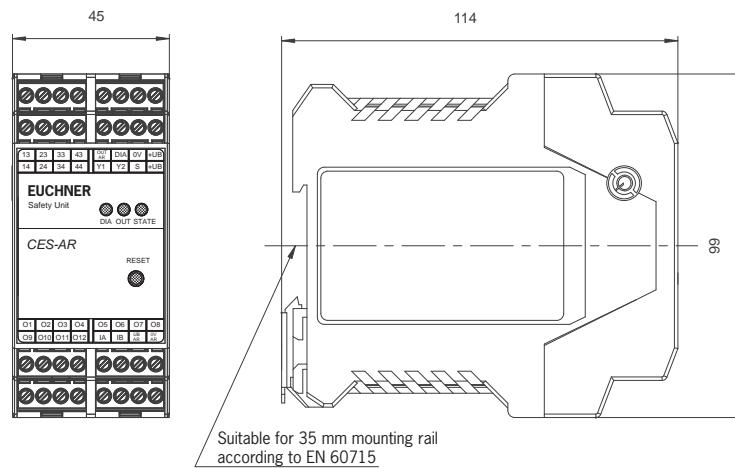

## Block diagram

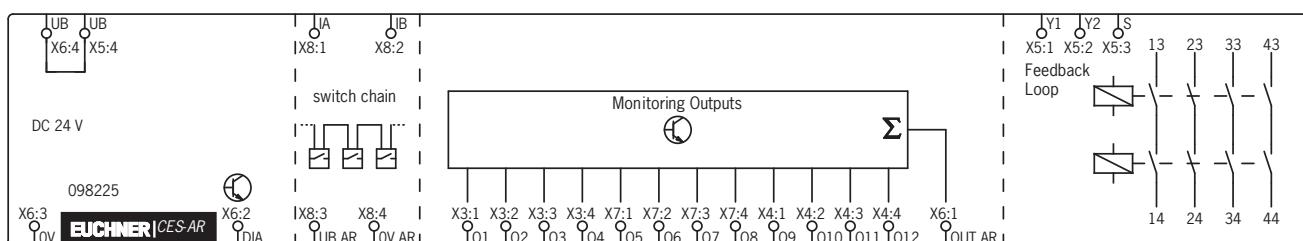

## Terminal assignment

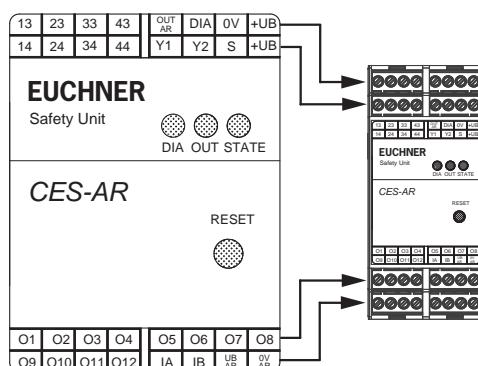

Several monitoring outputs are occupied depending on the switch type, e.g. one monitoring output for the door position and one for the guard locking status. The table below shows how many monitoring outputs the individual safety switches occupy.

Series	Number (type) of monitoring outputs	Maximum number of switches that can be connected
CES-AR	1 (door position or diagnostics)	12
CET1/2-AR	1 (status of guard locking)	12
CET3/4-AR CTP-AR	2 (first monitoring output: door position, second monitoring output: status of guard locking)	6

**Accessories**

»Exploit all the advantages  
– with well thought-out  
original accessories from  
EUCHNER.«

---

- ▶ Connection material – connect safely and easily; no long search for cables and plug connectors.
- ▶ Fixing material – secure and easy installation for many installation situations.
- ▶ Bolts and bolt sets – door handle and mounting plate in one.  
Complete sets comprising bolt and switch as complete solution.
- ▶ Function expansions – increase the possible applications with additional functions such as releases, lockout bars, etc.

**Accessories**

**Connection material**
**click**
**6 pin**
**PVC**
**Connecting cables with snap-on catch**

For the connection of:

CES-AP-C.2...-SF



Version	Order no./item	
<b>5m</b>	<b>103556</b> C-R08F06-06X014PV05,0-ES-103556	<span><b>click</b></span> <span><b>6 pin</b></span> <span><b>PVC</b></span>
<b>10m</b>	<b>103557</b> C-R08F06-06X014PV10,0-ES-103557	
<b>15m</b>	<b>103558</b> C-R08F06-06X014PV15,0-ES-103558	
<b>20m</b>	<b>103559</b> C-R08F06-06X014PV20,0-ES-103559	
<b>25m</b>	<b>103560</b> C-R08F06-06X014PV25,0-ES-103560	

For detailed information, enter  
the order number for the  
product in the search box at  
[www.euchner.com](http://www.euchner.com).

M8	4 pin	PVC	PUR
----	----------	-----	-----

## Connecting cables with plug connector

For the connection of:

CESI-AP,-C04-SK



The following applies to the device installation orientation shown:

Cable outlet C (left)

Cable outlet A (right)



Version	Cable outlet	Order no./item	
<b>M8</b>  <b>4 pin</b>  <b>PVC</b>	<b>2m</b>	<b>088812</b> C-M08F04-04X025PV02,0-ES-088812	 For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	<b>5m</b>	<b>088813</b> C-M08F04-04X025PV05,0-ES-088813	
	<b>10m</b>	<b>088814</b> C-M08F04-04X025PV10,0-ES-088814	
	<b>15m</b>	<b>088815</b> C-M08F04-04X025PV15,0-ES-088815	
	<b>25m</b>	<b>095035</b> C-M08F04-04X025PV25,0-ES-095035	
	<b>50m</b>	<b>097100</b> C-M08F04-04X025PV50,0-ES-097100	
<b>M8</b>  <b>4 pin</b>  <b>PUR</b>	<b>10m</b> <b>C</b>	<b>084703</b> C-M08F04-04X025PV10,0-ES-084703	 For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	<b>5m</b>	<b>116049</b> C-M08F04-04X034PU05,0-ES-116049	
	<b>10m</b>	<b>116050</b> C-M08F04-04X034PU10,0-ES-116050	
	<b>20m</b>	<b>116051</b> C-M08F04-04X034PU20,0-ES-116051	
	<b>50m</b>	<b>120241</b> C-M08F04-04X034PU50,0-ES-120241	

M8 8 pin PVC PUR

## Connecting cables with plug connector

For the connection of:

CES-AR-C.2...-SG



CESI-AR.-C04-SG



Version	Order no./item	
<b>M8</b> <b>8 pin</b> <b>PVC</b>	<b>5m</b> 110933 C-M08F08-08X014PV05,0-ES-110933	
	<b>10m</b> 110934 C-M08F08-08X014PV10,0-ES-110934	
	<b>15m</b> 110935 C-M08F08-08X014PV15,0-ES-110935	
	<b>20m</b> 111603 C-M08F08-08X014PV20,0-ES-111603	
<b>M8</b> <b>8 pin</b> <b>PUR</b>	<b>5m</b> 106671 C-M08F08-08X014PU05,0-ES-106671	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	<b>10m</b> 106672 C-M08F08-08X014PU10,0-ES-106672	
	<b>20m</b> 106673 C-M08F08-08X014PU20,0-ES-106673	

M12	5 pin	PVC
-----	-------	-----

## Connecting cables with plug connector

For the connection of:

CES-AP-C01-..-SB	CES-AP-C.2-..-SB	CES-I-AP-...-USB CES-I-AP-...-USI	CTP-..-AP-...-SII CTP-..-AP-...-SBB CTP-..-AR-...-SAB	CET-AP-...-SI CET-AR-...-SG	CEM-..-C60-...-SE

Plug connector can be adjusted in 6 orientations	Terminal plug not aligned. Cable outlet not defined	The following applies to the device installation orientation shown:			
		Cable outlet C (left)		Cable outlet A (right)	

Version	Cable outlet	Order no./item	
	5m	100183 C-M12F05-05X034PV05,0-MA-100183	
Connecting cable with female plug, flying lead, 5 x 0.34 mm <sup>2</sup>	10m	100184 C-M12F05-05X034PV10,0-MA-100184	
	20m	100185 C-M12F05-05X034PV20,0-MA-100185	
	50m	156064 C-M12F05-05X034PV50,0-MA-156064	
M12	5m	100180 C-M12F05-05X034PV05,0-M12M05-100180	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
5 pin	10m	100181 C-M12F05-05X034PV10,0-M12M05-100181	
PVC	20m	100182 C-M12F05-05X034PV20,0-M12M05-100182	

M12	5 pin	PVC	Extension, plug connectors at both ends for connection to decentralized peripheral equipment	5m	10m	20m	50m	100180 C-M12F05-05X034PV05,0-M12M05-100180	100181 C-M12F05-05X034PV10,0-M12M05-100181	100182 C-M12F05-05X034PV20,0-M12M05-100182

M12

5  
pin

PUR

Version	Cable outlet	Order no./item	
Connecting cable with female plug, flying lead, 5 x 0.25 mm <sup>2</sup>	C	<b>113190</b> C-M12F05-05X025PU10,0-MA-113190	
M12	A	<b>113187</b> C-M12F05-05X025PU10,0-MA-113187	
5 pin			
PUR			
Extension, plug connectors at both ends for connection to decentralized peripheral equipment	C	<b>115566</b> C-M12F05-05X025PU10,0-M12M05-115566	
10m	A	<b>115565</b> C-M12F05-05X025PU10,0-M12M05-115565	
5m	-	<b>113620</b> C-M12F05-05X034PU05,0-MA-113620	
10m	-	<b>113640</b> C-M12F05-05X034PU10,0-MA-113640	
20m	-	<b>113682</b> C-M12F05-05X034PU20,0-MA-113682	
30m	-	<b>122784</b> C-M12F05-05X034PU30,0-MA-122784	
5m	-	<b>119932</b> C-M12F05-05X034PU05,0-M12M05-119932	
10m	-	<b>119947</b> C-M12F05-05X034PU10,0-M12M05-119947	
20m	-	<b>119971</b> C-M12F05-05X034PU20,0-M12M05-119971	
M12			
5 pin			
PUR			
Extension, black cable, plug connectors at both ends for connection to decentralized peripheral equipment	1m	<b>159355</b> C-M12F05-05X034PU1,0-M12M05-159355	
1,5m	-	<b>159356</b> C-M12F05-05X034PU1,5-M12M05-159356	
3m	-	<b>159357</b> C-M12F05-05X034PU3,0-M12M05-159357	
5m	-	<b>159358</b> C-M12F05-05X034PU5,0-M12M05-159358	
8m	-	<b>159359</b> C-M12F05-05X034PU8,0-M12M05-159359	
10m	-	<b>159360</b> C-M12F05-05X034PU10,0-M12M05-159360	
15m	-	<b>159361</b> C-M12F05-05X034PU15,0-M12M05-159361	

For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

**M12** **5**  
**pin** **PUR**




Version	Cable outlet	Order no./item	
	<b>0,22m</b>	<b>163573</b> C-M12F05-05X034PU0,22-M12M05-163573	
<b>M12</b> <b>5</b> <b>pin</b> <b>PUR</b>		<b>1m</b>	<b>159362</b> C-M12F05-05X034PU1,0-M12M05-159362
Extension, yellow cable, plug connectors at both ends for connection to decentralized peripheral equipment		<b>1,5m</b>	<b>159363</b> C-M12F05-05X034PU1,5-M12M05-159363
		<b>3m</b>	<b>159364</b> C-M12F05-05X034PU3,0-M12M05-159364
		<b>5m</b>	<b>159365</b> C-M12F05-05X034PU5,0-M12M05-159365
		<b>8m</b>	<b>159919</b> C-M12F05-05X034PU8,0-M12M05-159919
		<b>10m</b>	<b>159920</b> C-M12F05-05X034PU10,0-M12M05-159920
		<b>15m</b>	<b>159921</b> C-M12F05-05X034PU15,0-M12M05-159921

For detailed  
information, enter  
the order number  
for the product in  
the search box at  
[www.euchner.com](http://www.euchner.com).

**M12**    **8 pin**    **PVC**

## Connecting cables with plug connector

For the connection of:

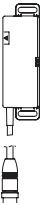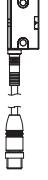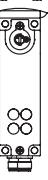CES-AP-C01-...-SA CES-AR-C01-...-SA	CES-AR-C.2-...-SA	CES-I-AR-..C04-USA	CTP-..AP-...-SA CTP-..AR-...-SAB	CET-AP-...-SA CET-AR-...-SG	CEM-..AY-...-SA
					
Plug connector can be adjusted in 6 orientations	Terminal plug not aligned. Cable outlet not defined				The following applies to the device installation orientation shown:  Cable outlet C (left)      Cable outlet A (right) 

Version	Cable outlet	Order no./item	
<b>Connecting cable with female plug, flying lead, 8 x 0.25 mm<sup>2</sup></b>    <b>M12</b> <b>8 pin</b> <b>PVC</b>	<b>5m</b>	<b>100177</b> C-M12F08-08X025PV05,0-MA-100177	  For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	<b>10m</b>	<b>100178</b> C-M12F08-08X025PV10,0-MA-100178	
	<b>20m</b>	<b>100179</b> C-M12F08-08X025PV20,0-MA-100179	
	<b>30m</b>	<b>115116</b> C-M12F08-08X025PV30,0-MA-115116	
	<b>40m</b>	<b>156065</b> C-M12F08-08X025PV40,0-MA-156065	
	<b>1m</b>	<b>123430</b> C-M12M08-08X025PV01,0-M12F08-123430	
	<b>2m</b>	<b>123431</b> C-M12M08-08X025PV02,0-M12F08-123431	
	<b>5m</b>	<b>123432</b> C-M12M08-08X025PV05,0-M12F08-123432	
	<b>10m</b>	<b>123433</b> C-M12M08-08X025PV10,0-M12F08-123433	


**M12** **8 pin** **PUR**



Version	Cable outlet	Order no./item	
<b>M12</b> <b>8 pin</b> <b>PUR</b>	<b>5m</b>	<b>115112</b> C-M12F08-08X025PU05,0-MA-115112	    For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	<b>10m</b>	<b>115113</b> C-M12F08-08X025PU10,0-MA-115113	
	<b>20m</b>	<b>115114</b> C-M12F08-08X025PU20,0-MA-115114	
	<b>30m</b>	<b>115257</b> C-M12F08-08X025PU30,0-MA-115257	
<b>M12</b> <b>8 pin</b> <b>PUR</b>	<b>10m</b>	<b>113189</b> C-M12F08-08X025PU10,0-MA-113189	    For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	<b>A</b>	<b>113188</b> C-M12F08-08X025PU10,0-MA-113188	
	<b>20m</b>	<b>120999</b> C-M12F08-08X025PU20,0-MA-120999	
	<b>C</b>	<b>120998</b> C-M12F08-08X025PU20,0-MA-120998	

## Strapping plug/Y-distributors

For the series connection of devices from the output families AR and BR

For the connection of:

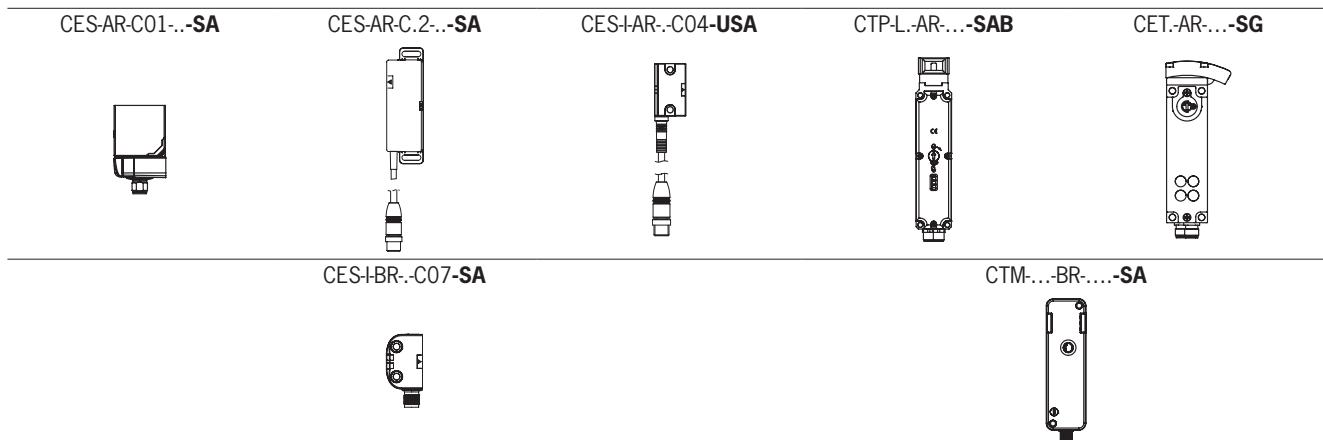

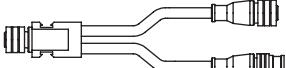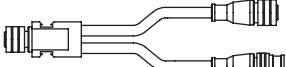	Version		Order no.	
<b>M12</b>	<b>Strapping plug</b> for AR series connection with Y-distributors (male plug)		<b>097645</b> AC-SP-SJ-097645	
<b>Series connection of AR/BR devices without IO-Link evaluation</b>				
<b>M12</b>	8 pin 1x Y-distributor M12 with connecting cable	 0,2m	<b>111696</b> AC-YD-V0,2-SBB-111696	
<b>M12</b>	5 pin 2x	 1m	<b>112395</b> AC-YD-V1,0-SBB-112395	
<b>AR</b>	8 pin 1x Y-distributor M12		<b>097627</b> AC-YD-SBB-097627	
<b>BR</b>	5 pin 2x	Not suitable for CTP-AR! Instead please use a Y-distributor with connecting cable (see above)		
<b>Series connection of BR devices with IO-Link evaluation</b>				
<b>M12</b>	8 pin 1x Y-distributor M12 with connecting cable	 0,2m	<b>158192</b> AC-YD-V0,2-SBB-158192	
<b>BR</b>	5 pin 2x	 1m	<b>158193</b> AC-YD-V1,0-SBB-158193	
<b>IO-Link</b>	8 pin 1x Y-distributor M12		<b>157913</b> AC-YD-SBB-157913	
	5 pin 2x			

For detailed information,  
enter the order number  
for the product in  
the search box at  
[www.euchner.com](http://www.euchner.com).

## Passive distribution module


For the series connection of devices from the output family AR

For the connection of:

CES-AR-C01-..-SA



CES-AR-C.2-..-SA

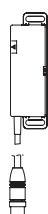


CES-I-AR-..-C04-USA



CTP-L-AR-..-SAB




CET-AR-...-SG

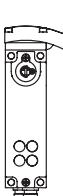


	Version	Order no.	
M12	5x <b>Passive distribution module</b> 1x	<b>120861</b> AC-DP-04-SAA-120861	 For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
AR	<b>Strapping plug</b> for bypassing unused connections on the passive distribution module (male plug)	<b>123340</b> AC-SP-A1-SA-123340	

### Dimension drawing and connection options

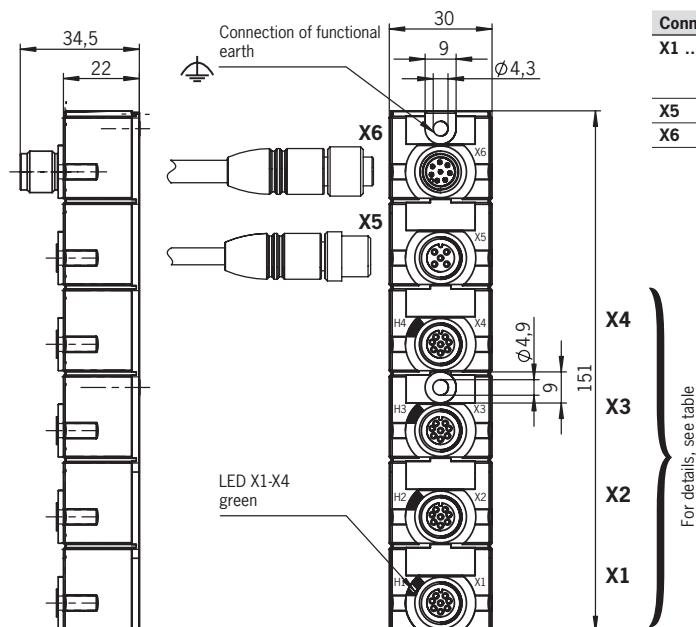

Connection	Use
X1 ... X4	<ul style="list-style-type: none"> <li>Connection of AR devices (CES-AR, CET-AR, ...)</li> <li>Bypassing using strapping plug if connection is not used or</li> <li>Connection of a further passive distribution module (<b>important:</b> only on X1)</li> </ul>
X5	Provision of the status signals for all connected AR devices
X6	Operating voltage for the AR devices and transmission of the safety signals

For details, see table

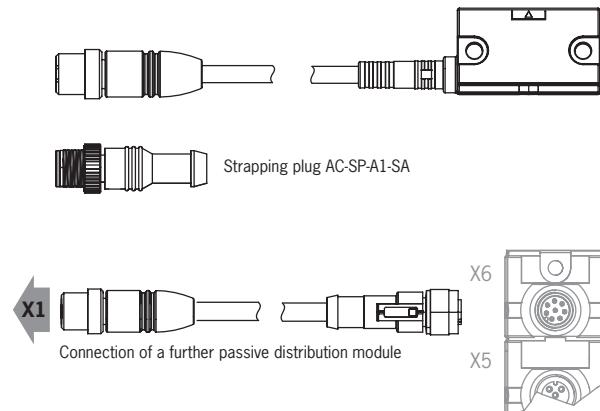


M12
8 pin
PVC

## Screened connecting cables with plug connector

For the connection of:

CES-A.5

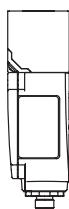


Version	Order no./item	
<b>5m</b>	<b>077751</b> C-M12F08-08X025PV05,0-GA-077751	
<b>10m</b>	<b>077752</b> C-M12F08-08X025PV10,0-GA-077752	
<b>15m</b>	<b>077753</b> C-M12F08-08X025PV15,0-GA-077753	
<b>20m</b>	<b>077871</b> C-M12F08-08X025PV20,0-GA-077871	
<b>25m</b>	<b>077872</b> C-M12F08-08X025PV25,0-GA-077872	
<b>50m</b>	<b>077873</b> C-M12F08-08X025PV50,0-GA-077873	

For detailed information,  
enter the order number  
for the product in  
the search box at  
[www.euchner.com](http://www.euchner.com).

1) The screen on the connecting cable is connected to the plug housing.

M12  
8 pin  
PVC

Connecting cable with female plug,  
screened <sup>1)</sup>,  
8 x 0.25 mm<sup>2</sup>

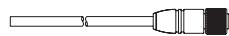

M23 **19**  
pin PUR

## Connecting cable with straight plug connector

For the connection of:


CEM-...-AR-...-SH



CTP-...-AP-...-SH  
CTP-...-AR-...-SH



CET.-AP-...-SH  
CET.AR-...-SH

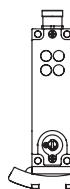

Version	Order no./item	
<b>1,5m</b>	<b>092761</b> C-M23F19-19XDIFPU01,5-MA-092761	
<b>3m</b>	<b>092816</b> C-M23F19-19XDIFPU03,0-MA-092816	
<b>6m</b>	<b>077014</b> C-M23F19-19XDIFPU06,0-MA-077014	
<b>8m</b>	<b>077015</b> C-M23F19-19XDIFPU08,0-MA-077015	
<b>10m</b>	<b>092898</b> C-M23F19-19XDIFPU10,0-MA-092898	
<b>15m</b>	<b>077016</b> C-M23F19-19XDIFPU15,0-MA-077016	
<b>20m</b>	<b>092726</b> C-M23F19-19XDIFPU20,0-MA-092726	
<b>25m</b>	<b>092727</b> C-M23F19-19XDIFPU25,0-MA-092727	
<b>30m</b>	<b>095993</b> C-M23F19-19XDIFPU30,0-MA-095993	
<b>40m</b>	<b>102490</b> C-M23F19-19XDIFPU40,0-MA-102490	

**M23**  
**19**  
**pin**  
**PUR**

Connecting cable with female  
plug,  
flying lead




For detailed information,  
enter the order number for  
the product in the search  
box at [www.euchner.com](http://www.euchner.com).

**M23****19  
pin****PUR**

## Connecting cable with angled plug connector

For the connection of:

CEM-...-AR-...-SH

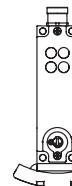CTP-...-AP-...-SH  
CTP-...-AR-...-SHCET-AP-...-SH  
CET-AR-...-SH

The following applies to the device installation orientation shown:

Cable outlet C (left)


Cable outlet A (right)



Version	Order no./item Cable outlet		
  		<b>092906</b> C-M23F19-19XDIFPU01,5- MA-092906	<b>092907</b> C-M23F19-19XDIFPU01,5- MA-092907
		<b>092908</b> C-M23F19-19XDIFPU03,0- MA-092908	<b>092909</b> C-M23F19-19XDIFPU03,0- MA-092909
		<b>077018</b> C-M23F19-19XDIFPU06,0- MA-077018	<b>085194</b> C-M23F19-19XDIFPU06,0- MA-085194
		<b>077019</b> C-M23F19-19XDIFPU08,0- MA-077019	<b>085195</b> C-M23F19-19XDIFPU08,0- MA-085195
		<b>092901</b> C-M23F19-19XDIFPU10,0- MA-092901	<b>092902</b> C-M23F19-19XDIFPU10,0- MA-092902
		<b>077020</b> C-M23F19-19XDIFPU15,0- MA-077020	<b>085196</b> C-M23F19-19XDIFPU15,0- MA-085196
		<b>092910</b> C-M23F19-19XDIFPU20,0- MA-092910	<b>092911</b> C-M23F19-19XDIFPU20,0- MA-092911
		<b>092912</b> C-M23F19-19XDIFPU25,0- MA-092912	<b>092913</b> C-M23F19-19XDIFPU25,0- MA-092913

For detailed information, enter the order number for the product in the search box at [www.euchner.com](http://www.euchner.com).

Female connector angled,  
with cable,  
halogen free

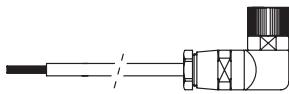


**M23**  
**19  
pin**  
**PUR**

**Female plug M23**

For the connection of:

CEM-...-AR-...-SH

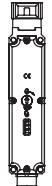CTP-...-AP-...-SH  
CTP-...-AR-...-SHCET.-AP-...-SH  
CET.-AR-...-SH

Version	Comment	Order no.	
<b>Female plug straight</b> (for self-assembly)	<b>EF</b> Female plug For conductor cross-section $19 \times 0.75 - 1 \text{ mm}^2$	<b>074616</b>	 For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	<b>EF-C1825</b> Female plug For conductor cross-section $16 \times 0.25 - 0.5 \text{ mm}^2 + 3 \times 0.75 - 1 \text{ mm}^2$	<b>077025</b>	
<b>Female connector angled</b> (for self-assembly)	<b>WF</b> Female connector angled For conductor cross-section $19 \times 0.75 - 1 \text{ mm}^2$	<b>074617</b>	 For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	<b>WF-C1825</b> Female connector angled For conductor cross-section $16 \times 0.25 - 0.5 \text{ mm}^2 + 3 \times 0.75 - 1 \text{ mm}^2$	<b>077026</b>	
<b>Replacement crimp contacts</b>	For female plugs <b>EF</b> and <b>WF</b> Conductor cross-section $19 \times 0.75 - 1 \text{ mm}^2$	<b>094309</b>	 For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	For female plugs <b>EF-C1825</b> and <b>WF-C1825</b> Conductor cross-section $16 \times 0.25 - 0.5 \text{ mm}^2 + 3 \times 0.75 - 1 \text{ mm}^2$	<b>094310</b>	

**M23**  
**19 pin**

## Connection kits

For connection to AR evaluation unit CES-AR-AES-12

Version	Comment	Order no.	
<b>CES</b> Connection kits for evaluation unit CES-AR-AES-12	Plug-in screw terminals	<b>104776</b> CES-EA-TC-AK08-104776	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	Plug-in spring terminals	<b>112629</b> CES-EA-TC-KK08-112629	

## Teach-in adapter

For connection to safety switch CET

Version	Comment	Order no.	
<b>CET</b> Teach-in adapter AC-TA-A-....	For safety switch CET1-AR/CET3-AR	<b>125496</b> AC-TA-A1-SG-125496	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	For safety switch CET2-AR/CET4-AR	<b>125497</b> AC-TA-A2-SG-125497	
	For safety switch CET1/CET3	<b>122748</b> AC-TA-A1-SH-122748	
	For safety switch CET2/CET4	<b>122749</b> AC-TA-A2-SH-122749	


## Y-distributor for connection to IP67 field modules

Y-distributor for AP devices with plug connectors 2 x M12, 5-pin, with monitoring output (e.g. CET-AP with wiring diagram B) for connection to field modules with sockets M12, 5-pin.

The Y-distributor makes it possible to operate the guard locking solenoid via a safe output module and to route the monitoring contact OUT D to an input module on a control system.

Designation	Version	Order no.	
<b>2x M12 AP</b> Y-distributor for connection to IP67 field modules 	<b>M12</b> (socket) <b>2x M12</b> (plug) <b>5 pin</b>	<b>124516</b> AC-YD-V0,2-SBB-124516	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .


## Y-distributor for connection of CEM-M2-C60 and CES-AP/BP

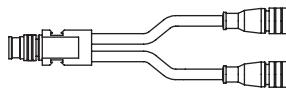Designation	Version	Order no.	
<b>2x M12</b>  <b>AP</b>  <b>BP</b>  <p><b>Y-distributor for connection of a guard locking solenoid CEM-M2-C60 to a safety switch CES-AP/BP</b></p> 	<b>M12 8 pin</b> (plug)  <b>2x M12 5 pin</b> (socket)	<b>161909</b> AC-YD-U0,2-SBB-161909	 <p>For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a>.</p>

## Filter module for the connection of switchgear with OSSD outputs

The test pulses of safety inputs FI1A and FI1B for short circuit monitoring are filtered out at the outputs FO1A\* and FO1B\* to such an extent that the downstream control system can no longer detect them.

Owing to smoothing of the test pulses at safety inputs FI1A/FI1B, short circuit monitoring will no longer be effective downstream of the filter module. Ruling out short circuits downstream of safety outputs FO1A\*/FO1B\* requires laying the cables with protection or mounting in the control cabinet of the control system.

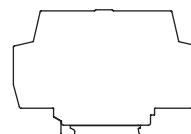Designation	Order no.	
<b>AP</b>  <b>AR</b>  <b>BP</b>  <b>BR</b>  <p><b>Filter module for the connection of switchgear with OSSD outputs</b></p>  <p>For 35 mm mounting rail</p>	<b>127460</b> AC-FM-AR-127460	 <p>For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a>.</p>

**Bolts**

C01 C05


**Bolts for housing design C01/C05**

**Notice:** The actuators are included with these bolts.

**For mounting:**

CES-AP-C01-...  
CES-AR-C01-...

CES-A-5...

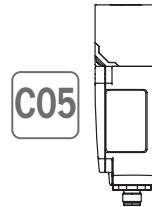

Designation	Detent mechanism/ door gap	Material	Version	Order no.	
<b>C01</b> 	<b>Bolts CES-A-C</b> Closed position: ball detent mechanism Open position: none/door gap: 15 mm	Steel	For doors hinged on the right or left	<b>082220</b>	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
<b>C05</b> 	<b>Bolts CES-A-C/F</b> Closed position: ball detent mechanism Open position: detent knob/door gap: 15 mm	Steel	Emergency release lever, for doors hinged on the right or left	<b>098357</b>	

## Bolt sets (complete with switch)

**Notice:** The actuators are included with these bolts.

Designation	Detent mechanism/ door gap	Material	Version	Order no.	
 <b>C01</b> +  <b>Bolts CES-AC...C01</b>	Closed position: ball detent mechanism/ door gap: 7 mm	Steel	Bolt with pre-assembled safety switch CES-AR-C01-AH-SA-098941 for doors hinged on the right or left	<b>109358</b>	  For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	Closed position: ball detent mechanism/ door gap: 7 mm	Steel	Bolt with pre-assembled safety switch CES-AP-C01-AH-SB-111145 for doors hinged on the right or left	<b>113986</b>	
	Closed position: ball detent mechanism Open position: detent knob/ door gap: 15 mm	Steel	Bolt with pre-assembled safety switch CES-AR-C01-AH-SA-098941 and safety plate <sup>1)</sup> for doors hinged on the right or left	<b>104028</b>	
	Closed position: ball detent mechanism Open position: detent knob/ door gap: 15 mm	Steel	Bolt with pre-assembled safety switch CES-AR-C01-AH-SA-098941 and safety plate <sup>1)</sup> for doors hinged on the right or left, emergency release lever	<b>105619</b>	
	Closed position: ball detent mechanism Open position: detent knob/ door gap: 7 mm	Steel	Bolt with pre-assembled safety switch CES-AP-C01-AH-SB-111145 and safety plate for doors hinged on the right or left, emergency release lever	<b>124401</b>	
	Closed position: ball detent mechanism Open position: detent knob/ door gap: 15 mm	Steel	Bolt with pre-assembled safety switch CES-AP-C01-AH-SB-111145 and safety plate <sup>1)</sup> for doors hinged on the right or left, emergency release lever	<b>116246</b>	
	Closed position: ball detent mechanism Open position: detent knob/ door gap: 15 mm	Steel	Bolt with pre-assembled safety switch CES-AP-C01-CH-SB-111708 and safety plate <sup>1)</sup> for doors hinged on the right or left, emergency release lever	<b>115732</b>	
	Closed position: ball detent mechanism/ door gap: 15 mm	Steel	Bolt with pre-assembled safety switch <sup>1)</sup> CES-AP-C01-CH-SB-106798 for doors hinged on the right or left	<b>110355</b>	
	Closed position: ball detent mechanism/ door gap: 15 mm	Steel	Bolt with pre-assembled safety switch <sup>1)</sup> CES-AP-C01-CH-SB-111708 for doors hinged on the right or left	<b>110354</b>	

1) The safety plate prevents the use of a padlock in closed bolt position.


C04


## Bolts for housing design C04

**Notice:** Actuators are **not** included with these bolts.

**For mounting:**

CES-IAP-.C04...  
CES-IAR-.C04...

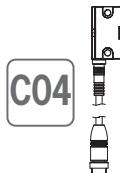

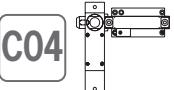Designation	Detent mechanism/ door gap	Material	Version	Order no.	
 <b>Bolts</b> <b>BTC-CES04-...</b>	Closed position: spring catch Open position: none/ door gap: 7 mm	Aluminum	For doors hinged on the right and left; can be locked in open position with padlocks	<b>121646</b>	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	Closed position: spring catch Open position: detent knob/ door gap: 7 mm	Aluminum	Emergency release lever, for doors hinged on the right and left; can be locked in open position with padlocks	<b>123583</b>	

## Bolts for housing design CTP

**Notice:** The actuators are included with the bolts CTP-... and BTC-.... Order actuator separately for the bolts BTM-UNIP-S-TH-... (for suitable actuators, see page 140).

### For mounting:

CTP-...-




Designation	Detent mechanism/ door gap	Material	Version	Order no.	
<b>Bolts CTP-AC</b>	None/ door gap: 15 mm	Steel	For doors hinged on the right and left; can be locked in open position with padlocks	<b>123653</b>	
<b>Bolts CTP-ACF</b>	Closed position: none Open position: detent knob/ door gap: 15 mm	Steel	Emergency release lever, for doors hinged on the right and left; can be locked in open position with padlocks	<b>123655</b>	
<b>Bolts CTP-AC-C2308</b>	None/ door gap: 15 mm	Steel	For doors hinged on the right and left; Bolt can be opened outward and inward (no end stop).	<b>137354</b>	
<b>Bolts BTC-CTP-S-TH-00-X</b>	None/ door gap: 15 mm	Die-cast aluminum	For doors hinged on the right and left; can be locked in open position with padlocks	<b>123659</b>	
<b>Bolts BTC-CTP-S-TH-01-F</b>	Closed position: none Open position: detent knob/ door gap: 15 mm	Die-cast aluminum	Emergency release lever, for doors hinged on the right and left; can be locked in open position with padlocks	<b>123660</b>	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
<b>Bolts BTM-UNIP-S-TH-00-X-159951 1)</b>	None / door gap: 15 mm	Steel	For doors hinged on the right and left; can be locked in open position with padlocks	<b>159951</b>	
<b>Bolts BTM-UNIP-S-TH-01-F-164196 1)</b>	Closed position: none Open position: detent knob/ door gap: 15 mm	Steel	Emergency release lever, for doors hinged on the right and left; can be locked in open position with padlocks	<b>164196</b>	
<b>Bolts CTP-GFK</b>	None/ door gap: 7 mm	Plastic	For doors hinged on the right and left; can be locked in open position with padlocks	<b>123657</b>	

1) Please order actuator separately. For suitable actuators, see page 140.

CTP

Designation	Detent mechanism/ door gap	Material	Version	Order no.	
  <b>Bolts</b> <b>CTP-GFK-F</b>	Closed position: none Open position: detent knob/ door gap: 7 mm	Plastic	Emergency release lever, for doors hinged on the right and left; can be locked in open position with padlocks	<b>123658</b>	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
	–	Plastic	For safety switch CTP	<b>096613</b>	

**Actuator for bolt BTM-UNIP-S-TH....**

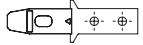Series	Design	Order no./item	
<b>A-C-H-G-LS-122677</b>	 Straight	<b>122677</b> A-C-H-G-LS-122677	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .


## Bolts for housing design CET

**Notice:**


- Actuators are **not** included with these bolts.
- Cover AM-C-124721 (protection against tampering) for CET actuators included.

### For mounting:


CET.-A.-...

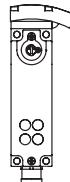

Designation	Detent mechanism/ door gap	Material	Version	Order no.	
<b>Bolts CET-A-C</b>	None/ door gap: 15 mm	Steel	For doors hinged on the right or left	<b>104309</b>	
<b>Bolts CET-A-C/F</b>	Closed position: none Open position: detent knob/ door gap: 15 mm	Steel	For doors hinged on the right or left, for CET with escape release	<b>106172</b>	
<b>Bolts CET-A-C/F-C2282</b>	Closed position: none Open position: detent knob/ door gap: 15 mm	Steel, guide strip made of stainless steel	For doors hinged on the right or left, for CET with escape release	<b>106350</b>	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
<b>Bolts CET-A-C-C2308</b>	None/ door gap: 15 mm	Steel	For doors hinged on the right or left. Bolt can be opened outward and inward (no end stop).	<b>109672</b>	

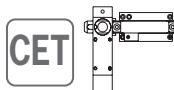

**Fixing material****Mounting sets/mounting plates**

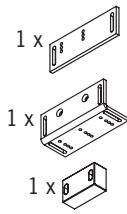Series	Use	Order no./item	
<b>Mounting set AM-SET-PP</b>  	For safety switch and actuator design C04  Set comprising: 2 x mounting plates	<b>119690</b> AM-SET-PP-119690	
<b>Mounting set AM-SET-PPB</b>  	For safety switch and actuator design C04  Set comprising: 1 x mounting plate 1 x angle mounting plate 1 x spacer	<b>119694</b> AM-SET-PPB-119694	
<b>Mounting bracket AM-B-126230</b>  	For actuator CEM...-C40	<b>126230</b> AM-B-126230	
<b>Mounting bracket AM-B-126231</b>  	For safety switch CEM...-C40	<b>126231</b> AM-B-126231	For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
<b>Angle mounting plate EMP-SB</b>  	For safety switch CTP	<b>093456</b> EMP-SB	
<b>Mounting plate EMP-B2</b>  	For actuator CTP	<b>093458</b> EMP-B2	
<b>Mounting plate EMP-B1</b>  	For actuator CTP and actuator CET	<b>093457</b> EMP-B1	
<b>Mounting plate AM-P</b>  	For safety switch CTP	<b>126026</b> AM-P-126026	



Series	Use	Order no./item	
<b>Mounting plate EMP-L-CET</b> 	For safety switch CET	<b>106695</b> EMP-L-CET	 For detailed information, enter the order number for the product in the search box at <a href="http://www.euchner.com">www.euchner.com</a> .
<b>Mounting plate EMP-B-CET</b> 	For actuator CET	<b>106694</b> EMP-B-CET	
<b>Mounting plate EMP-B1</b> 	For actuator CTP and actuator CET	<b>093457</b> EMP-B1	
<b>Mounting plate AM-P</b> 	For safety switch CET	<b>126399</b> AM-P-126399	
<b>Mounting plate AM-P</b> 	For actuator CET	<b>126400</b> AM-P-126400	
<b>Mounting plate with handle</b> 	Can be combined with mounting plates AM-P-126399 and AM-P-126400	<b>126398</b> AM-P-126398	



**Miscellaneous accessories****Safety screws**

Fixing material/screw size	Screw head diameter	Version/use	Packaging unit [qty.]	Order no.
Safety screws, stainless steel <b>M4 x 14</b>	7 mm	Actuators CES-A-BBA, CES-A-BCA	20	<b>071863</b> M4X14-NIRO/V20
Safety screws, stainless steel <b>M4 x 14</b>	10 mm	Safety switch CES-..C.2, actuator CES-A-BLN-2 and actuator CTP (straight/angled)	100	<b>086232</b> M4X14-NIRO/V100
Safety screws, stainless steel <b>M4 x 20</b>	7 mm	Safety switch CES-...C04/C07 and actuator CES-A-...C04/C07	20	<b>116978</b> M4X20-NIRO/V20
Safety screws, stainless steel <b>M5 x 10</b>	10 mm	Safety switch CES-..C01, actuator CES-A-BPA and hinged actuator CTP (left/right)	100	<b>073455</b> M5X10-NIRO/V100
Safety screws, galvanized steel <b>M5 x 16</b>	10 mm	Actuator CES-A-BRN, CET-A-BWK, A-C40 and A-C60	100	<b>073456</b> M5X16/V100
Safety screws, galvanized steel <b>M5 x 25</b>	10 mm	Hinged actuator CTP (top/bottom)	100	<b>073457</b> M5X25/V100
Plastic inserts for hexagon socket screws <b>M5/SW4</b>	–	Safety switch with guard locking	18	<b>161344</b> AM-C-SW4-V3-161344
Plastic inserts for hexagon socket screws <b>M6/SW5</b>	–	Safety switch with guard locking	18	<b>161348</b> AM-C-SW5-V3-161348

**Miscellaneous accessories**

Designation	Use	Version	Order no.
<b>C04</b> ATEX housing guard	For safety switch CES-C04	–	<b>137528</b> AM-C-C04-EX-137528
<b>C07</b> Covers	For safety switch CES-C07 and actuator CES-A-BTN-C07	–	<b>161164</b>
<b>C40</b> Lockout bar	For safety switch design C40	–	<b>123625</b> AE-L-C40-123625
<b>CTP</b> Auxiliary key release	For safety switch CTP	Identical locking, Incl. 2 keys	<b>086236</b>
		Identical locking, Key can be removed only in <i>Unlocked</i> position, Incl. 2 keys	<b>109212</b>
		Unique locking, Incl. 2 keys	<b>084177</b>
		Identical locking, Key can be removed in <i>Locked</i> position, Incl. 2 keys	<b>121917</b>
<b>Replacement key</b>	For auxiliary key release, identical locking	2 keys, identical locking	<b>099434</b>

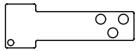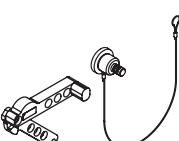Designation	Use	Version	Order no.
<b>Release</b> 	For safety switch CTP	Resetting	<b>103110</b>
<b>Emergency release</b> 	For safety switch CTP	-	<b>099877</b>
<b>Lead seal kit</b>	For emergency release	-	<b>087256</b>
<b>Wire front release (bowden)</b> 	For safety switch CTP	Resetting, sheath length 2 m (rope length 6 m)	<b>097747</b> AE-B-A1-02,0-F-097747
		Resetting, sheath length 3 m (rope length 6 m)	<b>111233</b> AE-B-A1-03,0-F-111233
<b>Handle for wire front release</b> 	Suitable for all safety switches with wire front release (bowden)		<b>099795</b> AY-HDL-099795
			<b>124204</b> AY-HDL-124204
<b>Lockout bar</b> 	For safety switch CTP	-	<b>123411</b> AE-L-CH-123411
<b>Lockout bar</b> 	For actuator CET	Suitable for shackle diameter 5 mm - 6 mm	<b>122609</b> AE-L-CET-122609
<b>Lockout bar</b> 	For actuator CET	Suitable for shackle diameter 5 mm - 9 mm	<b>156429</b> AE-L-CET-156429
<b>Holder for lockout bar</b> 	For lockout bar AE-L-CET-156420	Including wire rope and ring to hang the wire rope onto the lockout bar	<b>156338</b> AY-CHN-A1-156338
<b>Lockout bar + holder set</b> 	For actuator CET	Suitable for shackle diameter 5 mm - 9 mm. Holder including wire rope and ring to hang the wire rope onto the lockout bar.	<b>155865</b> AE-SET-LCHN-A1-155865
<b>Auxiliary key release</b> 	For safety switch CET	Identical locking, including 2 keys	<b>098850</b>
<b>Replacement key</b>	For auxiliary key release, identical locking	2 keys, identical locking	<b>099434</b>
<b>Emergency release</b> 	For safety switch CET	Latching in both positions, installation height 19 mm	<b>103714</b> AE-M-CET-103714
		Latching in both positions, installation height 70 mm	<b>159080</b> AE-M-CET-159080
<b>Lead seal kit</b>	For emergency release	-	<b>087256</b>

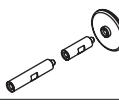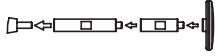Designation	Use	Version	Order no.
Cover 	For safety switch CET and actuator CET	Door hinge right	<b>098808</b>
		Door hinge left	<b>098807</b>
Cover 	For actuator CET	Horizontal and vertical mounting option on the actuator, suitable for fixing screws M5 x 16	<b>124979</b> AM-C-124979
Double ramp 	For safety switch CET	–	<b>114091</b> CET-DR
Handle for wire front release 	Suitable for all safety switches with wire front release (bowden)		<b>099795</b> AY-HDL-099795
			<b>124204</b> AY-HDL-124204
Extension for escape release 	For safety switch CET		<b>127377</b> AF-E-80-127377

CET



**Index by item designation**

<b>Item</b>	<b>Order no.</b>	<b>Page</b>
A-B-A1-A1-161642	161642	19, 29
A-B-A1-A1-P-161643	161643	19, 29
A-C-H-GLS-122677	122677	140
A-C-H-G-LS-EX-136826	136826	64
A-C-H-G-SSS-157696	157696	64, 101
A-C-H-G-SST-126015	126015	64, 101
A-C-H-RL-LS-122671	122671	64, 101
A-C-H-RO-LS-122675	122675	64, 101
A-C-H-RR-LS-122672	122672	64, 101
A-C-H-RU-LS-122676	122676	64, 101
A-C-H-W-SST-122667	122667	64, 101
A-C-H-W-SST-122668	122668	64, 101
A-C40-113869	113869	54, 94
A-C40-158436	158436	54, 94
A-C60-A1-161322	161322	58
A-C60-B1-162581	165281	58
A-TI-001-125481	125481	54, 94
AC-DP-04-SAA-120861	120861	129
AC-FM-AR-127460	127460	135
AC-SP-A1-SA-123340	123340	129
AC-SP-SJ-097645	097645	128
AC-TA-A1-SG-125496	125496	134
AC-TA-A1-SH-122748	122748	134
AC-TA-A2-SG-125497	125497	134
AC-TA-A2-SH-122749	122749	134
AC-YD-SBB-097627	097627	128
AC-YD-SBB-157913	157913	128
AC-YD-U0,2-SBB-161909	161909	135
AC-YD-V0,2-SBB-111696	111696	128
AC-YD-V0,2-SBB-124516	124516	134
AC-YD-V0,2-SBB-158192	158192	128
AC-YD-V1,0-SBB-112395	112395	128
AC-YD-V1,0-SBB-158193	158193	128
AE L CET 156429	156429	145
AE SET LCHN A1 155865	155865	145
AE-B-A1-02,0-F-097747	097747	145
AE-B-A1-03,0-F-111233	111233	145
AE-L-CH-123411	123411	145
AE-L-C40-123625	123625	144
AE-L-CET-122609	122609	145
AE-M-CET-103714	103714	145
AE-M-CET-159080	159080	145
AF-E-80-127377	127377	146
AM-B-126230	126230	142
AM-B-126231	126231	142
AM-C-124979	124979	146
AM-C-C04-EX-137528	137528	144
AM-C-SW4-V3-161344	161344	144
AM-C-SW5-V3-161348	161348	144
AM-P-126026	126026	142
AM-P-126398	126398	143
AM-P-126399	126399	143
AM-P-126400	126400	143
AM-SET-PP-119690	119690	142
AM-SET-PPB-119694	119694	142
AY CHN A1 156338	156338	145
AY-HDL-099795	099795	145, 146
AY-HDL-124204	124204	145, 146
Bolt BTC-CTP-S-TH-00-X	123659	139
Bolt BTC-CTP-S-TH-01-F	123660	139
Bolt BTM-UNIP-S-TH-00-X-159951	159951	139
Bolt BTM-UNIP-S-TH-01-F-164196	164196	139
Bolt CES-A-C	082220	136

<b>Item</b>	<b>Order no.</b>	<b>Page</b>
Bolt CES-A-C/F	098357	136
Bolt CET-A-C	104309	141
Bolt CET-A-C/F	106172	141
Bolt CET-A-C/F C2282	106350	141
Bolt CET-A-C/C2308	109672	141
Bolt CTP-AC	123653	139
Bolt CTP-AC-C2308	137354	139
Bolt CTP-ACF	123655	139
Bolt CTP-GFK	123657	139
Bolt CTP-GFK-F	123658	140
C-M08F04-04X025PV02,0-ES-088812	088812	121
C-M08F04-04X025PV05,0-ES-088813	088813	121
C-M08F04-04X025PV10,0-ES-084703	084703	121
C-M08F04-04X025PV10,0-ES-088814	088814	121
C-M08F04-04X025PV15,0-ES-088815	088815	121
C-M08F04-04X025PV25,0-ES-095035	095035	121
C-M08F04-04X025PV50,0-ES-097100	097100	121
C-M08F04-04X034PU05,0-ES-116049	116049	121
C-M08F04-04X034PU10,0-ES-116050	116050	121
C-M08F04-04X034PU20,0-ES-116051	116051	121
C-M08F04-04X034PU50,0-ES-120241	120241	121
C-M08F08-08X014PU05,0-ES-106671	106671	122
C-M08F08-08X014PU10,0-ES-106672	106672	122
C-M08F08-08X014PU20,0-ES-106673	106673	122
C-M08F08-08X014PV05,0-ES-110933	110933	122
C-M08F08-08X014PV10,0-ES-110934	110934	122
C-M08F08-08X014PV15,0-ES-110935	110935	122
C-M08F08-08X014PV20,0-ES-111603	111603	122
C-M12F05-05X025PU10,0-M12M05-115565	115565	124
C-M12F05-05X025PU10,0-M12M05-115566	115566	124
C-M12F05-05X025PU10,0-MA-113187	113187	124
C-M12F05-05X025PU10,0-MA-113190	113190	124
C-M12F05-05X034PU02,22-M12M05-163573	163573	125
C-M12F05-05X034PU05,0-M12M05-119932	119932	124
C-M12F05-05X034PU05,0-MA-113620	113620	124
C-M12F05-05X034PU1,0-M12M05-159355	159355	124
C-M12F05-05X034PU1,0-M12M05-159362	159362	125
C-M12F05-05X034PU1,5-M12M05-159356	159356	124
C-M12F05-05X034PU1,5-M12M05-159363	159363	125
C-M12F05-05X034PU10,0-M12M05-119947	119947	124
C-M12F05-05X034PU10,0-M12M05-159360	159360	124
C-M12F05-05X034PU10,0-M12M05-159920	159920	125
C-M12F05-05X034PU10,0-MA-113640	113640	124
C-M12F05-05X034PU15,0-M12M05-159361	159361	124
C-M12F05-05X034PU15,0-M12M05-159921	159921	125
C-M12F05-05X034PU20,0-M12M05-119971	119971	124
C-M12F05-05X034PU20,0-MA-113682	113682	124
C-M12F05-05X034PU3,0-M12M05-159357	159357	124
C-M12F05-05X034PU3,0-M12M05-159364	159364	125
C-M12F05-05X034PU30,0-MA-122784	122784	124
C-M12F05-05X034PU5,0-M12M05-159358	159358	124
C-M12F05-05X034PU5,0-M12M05-159365	159365	125
C-M12F05-05X034PU8,0-M12M05-159359	159359	124
C-M12F05-05X034PU8,0-M12M05-159919	159919	125
C-M12F05-05X034PV05,0-M12M05-100180	100180	123
C-M12F05-05X034PV05,0-MA-100183	100183	123
C-M12F05-05X034PV10,0-M12M05-100181	100181	123
C-M12F05-05X034PV10,0-MA-100184	100184	123
C-M12F05-05X034PV20,0-M12M05-100182	100182	123
C-M12F05-05X034PV20,0-MA-100185	100185	123
C-M12F05-05X034PV50,0-MA-156064	156064	123
C-M12F08-08X025PU05,0-MA-115112	115112	127
C-M12F08-08X025PU10,0-MA-113188	113188	127

Item	Order no.	Page	Item	Order no.	Page
C-M12F08-08X025PU10,0-MA-113189	113189	127	CESA-BBN-C04-115271	115271	49, 89
C-M12F08-08X025PU10,0-MA-115113	115113	127	CESA-BBN-C04-EX-137527	137527	49, 89
C-M12F08-08X025PU20,0-MA-115114	115114	127	CESA-BBN-C14-160441	160441	52, 92
C-M12F08-08X025PU20,0-MA-120998	120998	127	CESA-BCA	088786	38, 42, 82
C-M12F08-08X025PU20,0-MA-120999	120999	127	CESA-BDA 18	156935	42, 82
C-M12F08-08X025PU30,0-MA-115257	115257	127	CESA-BDN-06-104730	104730	45, 49, 85, 89
C-M12F08-08X025PV05,0-GA-077751	077751	130	CESA-BDN-06-158210	158210	16, 24
C-M12F08-08X025PV05,0-MA-100177	100177	126	CESA-BDN-06-161742	161742	49, 89
C-M12F08-08X025PV10,0-GA-077752	077752	130	CESA-BLN-L2-104510	104510	45, 85
C-M12F08-08X025PV10,0-MA-100178	100178	126	CESA-BLN-R2-100776	100776	45, 85
C-M12F08-08X025PV15,0-GA-077753	077753	130	CESA-BLN-U2-103450	103450	45, 85
C-M12F08-08X025PV20,0-GA-077871	077871	130	CESA-BPA	098775	38, 42, 82
C-M12F08-08X025PV20,0-MA-100179	100179	126	CESA-BPA-EX-102125	102125	38
C-M12F08-08X025PV25,0-GA-077872	077872	130	CESA-BRN-100251	100251	42, 82
C-M12F08-08X025PV30,0-MA-115116	115116	126	CESA-BTN-C07-156230	156230	16, 24
C-M12F08-08X025PV40,0-MA-156065	156065	126	CESA-C5E-01	077750	38
C-M12F08-08X025PV50,0-GA-077873	077873	130	CESA-C5H-01	091458	38
C-M12M08-08X025PV01,0-M12F08-123430	123430	126	CESA-C5H-01-EX	097945	38
C-M12M08-08X025PV02,0-M12F08-123431	123431	126	CESA-W5H-01	097525	38
C-M12M08-08X025PV05,0-M12F08-123432	123432	126	CESAP-C01-AH-SB-111145	111145	42
C-M12M08-08X025PV10,0-M12F08-123433	123433	126	CESAP-C01-CH-SA-100250	100250	42
C-M23F19-19XDIFPU01,5-MA-092761	092761	131	CESAP-C01-CH-SB-106798	106798	42
C-M23F19-19XDIFPU01,5-MA-092906	092906	132	CESAP-C01-CH-SB-111708	111708	42
C-M23F19-19XDIFPU01,5-MA-092907	092907	132	CESAP-CL2-AH-L05-105603	105603	44
C-M23F19-19XDIFPU03,0-MA-092816	092816	131	CESAP-CL2-AH-L10-106192	106192	44
C-M23F19-19XDIFPU03,0-MA-092908	092908	132	CESAP-CL2-AH-SB-106553	106553	44
C-M23F19-19XDIFPU03,0-MA-092909	092909	132	CESAP-CL2-AH-SB-111747	111747	44
C-M23F19-19XDIFPU06,0-MA-077014	077014	131	CESAP-CL2-AH-SF-105294	105294	44
C-M23F19-19XDIFPU06,0-MA-077018	077018	132	CESAP-CL2-CH-L05-105602	105602	45
C-M23F19-19XDIFPU06,0-MA-085194	085194	132	CESAP-CL2-CH-L10-106190	106190	45
C-M23F19-19XDIFPU08,0-MA-077015	077015	131	CESAP-CL2-CH-SB-106551	106551	45
C-M23F19-19XDIFPU08,0-MA-077019	077019	132	CESAP-CL2-CH-SB-109167	109167	45
C-M23F19-19XDIFPU08,0-MA-085195	085195	132	CESAP-CL2-CH-SF-104509	104509	45
C-M23F19-19XDIFPU10,0-MA-092898	092898	131	CESAP-CR2-AH-L05-105601	105601	44
C-M23F19-19XDIFPU10,0-MA-092901	092901	132	CESAP-CR2-AH-SB-106191	106191	44
C-M23F19-19XDIFPU10,0-MA-092902	092902	132	CESAP-CR2-AH-SB-106552	106552	44
C-M23F19-19XDIFPU15,0-MA-077016	077016	131	CESAP-CR2-AH-SB-111748	111748	44
C-M23F19-19XDIFPU15,0-MA-077020	077020	132	CESAP-CR2-AH-SF-105295	105295	44
C-M23F19-19XDIFPU15,0-MA-085196	085196	132	CESAP-CR2-CH-L05-105600	105600	45
C-M23F19-19XDIFPU20,0-MA-092726	092726	131	CESAP-CR2-CH-L10-106189	106189	45
C-M23F19-19XDIFPU20,0-MA-092910	092910	132	CESAP-CR2-CH-SB-106550	106550	45
C-M23F19-19XDIFPU20,0-MA-092911	092911	132	CESAP-CR2-CH-SB-109168	109168	45
C-M23F19-19XDIFPU25,0-MA-092727	092727	131	CESAP-CR2-CH-SB-123922	123922	45
C-M23F19-19XDIFPU25,0-MA-092912	092912	132	CESAP-CR2-CH-SF-100775	100775	45
C-M23F19-19XDIFPU25,0-MA-092913	092913	132	CESAR-AES-12	098225	116
C-M23F19-19XDIFPU30,0-MA-095993	095993	131	CESAR-C01-AH-SA	098941	82
C-M23F19-19XDIFPU40,0-MA-102490	102490	131	CESAR-C01-CH-SA	098942	82
C-R08F06-06X014PV05,0-ES-103556	103556	120	CESAR-C01-EH-SA	098582	82
C-R08F06-06X014PV10,0-ES-103557	103557	120	CESAR-CL2-AH-L05-109047	109047	84
C-R08F06-06X014PV15,0-ES-103558	103558	120	CESAR-CL2-AH-L10-109051	109051	84
C-R08F06-06X014PV20,0-ES-103559	103559	120	CESAR-CL2-AH-SA-105748	105748	84
C-R08F06-06X014PV25,0-ES-103560	103560	120	CESAR-CL2-AH-SG-105753	105753	84
CEMI2-AR-M-C40-SH-113739	113739	94	CESAR-CL2-CH-L05-109045	109045	85
CEMI2-AR-U-C40-SH-124937	124937	94	CESAR-CL2-CH-L10-109049	109049	85
CEMI2-AY-U-C40-LZ-SA-157549	157549	54	CESAR-CL2-CH-SA-105747	105747	85
CEMI2-AY-U-C40-SA-128103	128103	54	CESAR-CL2-CH-SA-115793	115793	85
CEM-M2-C60-KZ-SE-163252	163252	58	CESAR-CL2-CH-SG-105752	105752	85
CEM-M2-C60-PZ-SE-161320	161320	58	CESAR-CL2-AH-L05-109046	109046	84
CEM-M2-C60-PZ-SE-165746	165746	58	CESAR-CL2-AH-SA-105746	105746	84
CES-A-BBA	071840	38, 42, 82			
CES-ABBA-EX-098158	098158	38			
CES-ABBN-161502	161502	49, 89			

<b>Item</b>	<b>Order no.</b>	<b>Page</b>
CES-AR-CR2-AH-SG-105751	105751	84
CES-AR-CR2-CH-L05-109044	109044	85
CES-AR-CR2-CH-L10-109048	109048	85
CES-AR-CR2-CH-SA-105745	105745	85
CES-AR-CR2-CH-SA-115792	115792	85
CES-AR-CR2-CH-SG-105750	105750	85
CES-EA-TC-AK08-104776	104776	134
CES-EA-TC-KK08-112629	112629	134
CES-I-AP-M-C04-SK-117325	117325	49
CES-I-AP-M-C04-U05-117328	117328	49
CES-I-AP-M-C04-U10-117329	117329	49
CES-I-AP-M-C04-U20-117330	117330	49
CES-I-AP-M-C04-USB-117324	117324	49
CES-I-AP-M-C04-USI-117323	117323	49
CES-I-AP-M-C04-USI-160832	160832	49
CES-I-AP-M-C04-USI-162592	162592	49
CES-I-AP-M-C14-U20-158631	158631	52
CES-I-AP-U-C04-SK-115324	115324	48
CES-I-AP-U-C04-U05-116503	116503	48
CES-I-AP-U-C04-U10-116504	116504	48
CES-I-AP-U-C04-U20-116505	116505	48
CES-I-AP-U-C04-USB-116502	116502	48
CES-I-AP-U-C04-USI-115150	115150	48
CES-I-AP-U-C14-U20-158632	158632	52
CES-I-AR-F-C04-SG-161679	161679	89
CES-I-AR-M-C04-SG-119474	119474	89
CES-I-AR-M-C04-U05-119475	119475	89
CES-I-AR-M-C04-U10-119476	119476	89
CES-I-AR-M-C04-U20-119477	119477	89
CES-I-AR-M-C04-USA-119479	119479	89
CES-I-AR-M-C14-U20-162596	162596	92
CES-I-AR-U-C04-SG-119469	119469	88
CES-I-AR-U-C04-U05-119470	119470	88
CES-I-AR-U-C04-U10-119471	119471	88
CES-I-AR-U-C04-U20-119472	119472	88
CES-I-AR-U-C04-USA-119473	119473	88
CES-I-BP-M-C07-SB-160076	160076	16
CES-I-BP-M-C07-SI-162813	162813	16
CES-I-BP-U-C07-SB-160080	160080	16
CES-I-BP-U-C07-SI-162815	162815	16
CES-I-BR-M-C07-SA-156233	156233	24
CES-I-BR-S-C07-SA-165914	165914	26
CES-I-BR-U-C07-SA-157920	157920	24
CET-A-BWK-50X	096327	74, 110
CET-DR	114091	146
CET1-AR-CDA-AH-50X-SG-106275	106275	107
CET1-AR-CDA-CH-50X-SG-109231	109231	107
CET1-AR-CDA-CH-50X-SH-113255	113255	109
CET1-AR-CRA-AH-50A-SG-106616	106616	107
CET1-AR-CRA-AH-50F-SG-106159	106159	107
CET1-AR-CRA-AH-50F-SH-C2312-110943	110943	109
CET1-AR-CRA-AH-50S-SG-105802	105802	107
CET1-AR-CRA-AH-50X-SG-103418	103418	107
CET1-AR-CRA-AH-50X-SH-110203	110203	109
CET1-AR-CRA-AH-50X-SH-C2290-113022	113022	109
CET1-AR-CRA-CH-50F-SG-110241	110241	107
CET1-AR-CRA-CH-50F-SH-C2312-124104	124104	109
CET1-AR-CRA-CH-50S-SG-105764	105764	107
CET1-AR-CRA-CH-50X-SG-105763	105763	107
CET1-AR-CRA-CH-50X-SG-C2290-109015	109015	107
CET1-AR-CRA-CH-50X-SH-110204	110204	109
CET2-AR-CRA-AH-50S-SG-109075	109075	107
CET2-AR-CRA-AH-50X-SG-110240	110240	107

<b>Item</b>	<b>Order no.</b>	<b>Page</b>
CET2-AR-CRA-AH-50X-SH-110205	110205	109
CET2-AR-CRA-CH-50F-SG-C2312-109941	109941	107
CET2-AR-CRA-CH-50X-SG-110082	110082	107
CET2-AR-CRA-CH-50X-SH-110206	110206	109
CET3-AP-CRA-AH-50F-SA-124601	124601	74
CET3-AP-CRA-AH-50F-SH-C2312-119106	119106	74
CET3-AP-CRA-AH-50F-SI-114073	114073	73
CET3-AP-CRA-AH-50F-SI-C2312-157408	157408	73
CET3-AP-CRA-AH-50F-SI-C2438-127594	124594	73
CET3-AP-CRA-AH-50X-SA-122389	122398	74
CET3-AP-CRA-AH-50X-SA-122406	122406	74
CET3-AP-CRA-AH-50X-SF-161524	161524	74
CET3-AP-CRA-AH-50X-SI-111346	111346	73
CET3-AP-CRA-AH-50X-SI-C2290-121367	121367	73
CET3-AP-CRA-AH-50X-SI-C2438-124589	124589	73
CET3-AP-CRA-CH-50F-SA-C2312-157287	157287	74
CET3-AP-CRA-CH-50X-SA-121579	121579	74
CET3-AP-CRA-CH-50X-SA-122409	122409	74
CET3-AR-CDA-CH-50F-SG-114090	114090	108
CET3-AR-CRA-AH-50F-SG-113965	113965	108
CET3-AR-CRA-AH-50F-SH-111348	111348	110
CET3-AR-CRA-AH-50F-SH-C2312-111725	111725	110
CET3-AR-CRA-AH-50F-SH-C2353-113023	113023	110
CET3-AR-CRA-AH-50X-SG-109401	109401	108
CET3-AR-CRA-AH-50X-SG-C2290-113139	113139	108
CET3-AR-CRA-AH-50X-SH-110103	110103	110
CET3-AR-CRA-AH-50X-SH-C2290-113024	113024	110
CET3-AR-CRA-AH-50X-SH-C2290-114088	114088	110
CET3-AR-CRA-AH-50X-SH-C2375-115202	115202	110
CET3-AR-CRA-CH-50F-SG-110907	110907	108
CET3-AR-CRA-CH-50S-SG-112992	112992	108
CET3-AR-CRA-CH-50X-SG-110906	110906	108
CET3-AR-CRA-CH-50X-SG-C2290-110114	110114	108
CET3-AR-CRA-CH-50X-SH-110104	110104	110
CET4-AP-CRA-AH-50X-SA-122415	122415	74
CET4-AP-CRA-AH-50X-SI-112082	112082	73
CET4-AP-CRA-AH-50X-SI-C2438-126763	126763	73
CET4-AP-CRA-AH-50X-SI-C2509-161577	161577	73
CET4-AP-CRA-CH-50F-SA-161178	161178	74
CET4-AP-CRA-CH-50X-SA-122413	122413	74
CET4-AR-CDA-CH-50X-SG-114712	114712	108
CET4-AR-CRA-AH-50F-SH-116285	116285	110
CET4-AR-CRA-AH-50X-SG-111683	111683	108
CET4-AR-CRA-AH-50X-SG-C2290-128193	128193	108
CET4-AR-CRA-AH-50X-SG-C2355-162555	162555	108
CET4-AR-CRA-AH-50X-SH-110201	110201	110
CET4-AR-CRA-CH-50F-SG-114650	114650	108
CET4-AR-CRA-CH-50S-SG-113081	113081	108
CET4-AR-CRA-CH-50X-SG-111684	111684	108
CET4-AR-CRA-CH-50X-SG-C2355-113609	113609	108
CET4-AR-CRA-CH-50X-SH-110202	110202	110
CTM-CBI-BP-U-AZ-SA-165897	165897	18
CTM-LBI-BP-M-AZ-SA-166088	166088	18
CTM-LBI-BP-U-AZ-SA-166087	166087	18
CTM-LBI-BP-U-AZ-SA-166089	166089	18
CTM-LBI-BP-U-AZ-SA-166090	166090	18
CTM-LBI-BR-M-AZ-SA-165517	165517	28
CTM-LBI-BR-M-AZ-SP-166092	166092	29
CTM-LBI-BR-U-AZ-SA-161638	161638	28
CTM-LBI-BR-U-AZ-SA-161639	161639	28
CTM-LBI-BR-U-AZ-SP-166091	166091	29
CTM-LBI-BR-U-ZZ-SA-P-161496	161496	28
CTM-LBI-BR-U-ZZ-SA-P-161640	161640	28

Item	Order no.	Page	Item	Order no.	Page
CTP-I-AP-U-HA-ZZ-SA-136732	136732	62	M5X25/V100	073457	144
CTP-I-AP-U-HA-ZZE-SBB-159614	159614	61	S-B-08-A1-A1-165895	165895	19
CTP-I1-AP-U-HA-AEC-SA-136595	136595	62	S-B-09-A1-A1-165896	165896	19
CTP-I2-AP-U-HA-AZC-SA-126258	126258	62	S-C07-04-V02-165928	165928	26
CTP-L1-AP-M-HA-AE-SA-163003	163003	62	S-C07-04-V03-166488	166488	26
CTP-L1-AP-M-HA-AE-SH-123376	123376	63	Switch bracket	096613	140
CTP-L1-AP-M-HA-AZ-SA-124727	124727	62			
CTP-L1-AP-M-HA-AZ-SH-123365	123365	63			
CTP-L1-AP-U-HA-AE-SA-126912	126912	62			
CTP-L1-AP-U-HA-AE-SA-128484	128484	62			
CTP-L1-AP-U-HA-AE-SA-EX-156240	156240	63			
CTP-L1-AP-U-HA-AE-SH-123375	123375	63			
CTP-L1-AP-U-HA-AE-SII-127640	127640	61			
CTP-L1-AP-U-HA-AE-SII-129478	129478	61			
CTP-L1-AP-U-HA-AEE-SH-137342	137342	64			
CTP-L1-AP-U-HA-AES-SA-157112	157112	63			
CTP-L1-AP-U-HA-AZ-SA-EX-129512	129512	63			
CTP-L1-AP-U-HA-AZ-SA-124225	124225	62			
CTP-L1-AP-U-HA-AZ-SA-127727	127727	62			
CTP-L1-AP-U-HA-AZ-SA-EX-136675	136675	63			
CTP-L1-AP-U-HA-AZ-SH-123364	123364	63			
CTP-L1-AP-U-HA-AZ-SII-124468	124468	61			
CTP-L1-AP-U-HA-AZ-SII-129477	129477	61			
CTP-L1-AP-U-HA-AZE-SH-156056	156056	64			
CTP-L1-AP-U-HA-AZS-SA-157111	157111	63			
CTP-L1-AR-M-HA-AE-SAB-123308	123308	99			
CTP-L1-AR-M-HA-AE-SH-123374	123374	100			
CTP-L1-AR-M-HA-AES-SAB-157816	157816	99			
CTP-L1-AR-M-HA-AZ-SAB-123307	123307	99			
CTP-L1-AR-M-HA-AZ-SH-123363	123363	100			
CTP-L1-AR-U-HA-AE-SAB-122813	122813	99			
CTP-L1-AR-U-HA-AE-SH-123373	123373	100			
CTP-L1-AR-U-HA-AEE-SH-137164	137164	100			
CTP-L1-AR-U-HA-AZ-SAB-122812	122812	99			
CTP-L1-AR-U-HA-AZ-SH-123362	123362	100			
CTP-L1-AR-U-HA-AZE-SH-126874	126874	100			
CTP-L1-AR-U-HA-AZE-SH-137341	137341	100			
CTP-L1-AR-U-HA-AZS-SAB-160862	160862	99			
CTP-L2-AP-M-HA-AZ-SA-124729	124729	62			
CTP-L2-AP-M-HA-AZ-SH-123371	123371	63			
CTP-L2-AP-U-HA-AE-SA-136841	136841	62			
CTP-L2-AP-U-HA-AZ-SA-124728	124728	62			
CTP-L2-AP-U-HA-AZ-SH-123370	123370	63			
CTP-L2-AP-U-HA-AZE-SH-158402	158402	64			
CTP-L2-AR-M-HA-AZ-SAB-123361	123361	99			
CTP-L2-AR-M-HA-AZ-SH-123369	123369	100			
CTP-L2-AR-U-HA-AEE-SH-159112	159112	100			
CTP-L2-AR-U-HA-AZ-SAB-122814	122814	99			
CTP-L2-AR-U-HA-AZ-SH-123366	123366	100			
CTP-L2-AR-U-HA-AZE-SH-137165	137165	100			
CTP-LBI-AP-U-HA-AZ-SA-127798	127798	62			
EMP-B-CET	106694	143			
EMP-B1	093457	142, 143			
EMP-B2	093458	142			
EMP-L-CET	106695	143			
EMP-SB	093456	142			
ESM-CB-AZ-FI2-BR-IO-158875	158875	34			
GWY-CB-1-BR-IO-165049	165049	32			
M4X14-NIRO/V100	086232	144			
M4X14-NIRO/V20	071863	144			
M4X20-NIRO/V20	116978	144			
M5X10-NIRO/V100	073455	144			
M5X16/V100	073456	144			

**Index by order number**

<b>Order no.</b>	<b>Item</b>	<b>Page</b>
071840	CES-A-BBA	38, 42, 82
071863	M4X14-NIRO/V20	144
073455	M5X10-NIRO/V100	144
073456	M5X16/V100	144
073457	M5X25/V100	144
074616		133
074617		133
077014	C-M23F19-19XDIFPU06,0-MA-077014	131
077015	C-M23F19-19XDIFPU08,0-MA-077015	131
077016	C-M23F19-19XDIFPU15,0-MA-077016	131
077018	C-M23F19-19XDIFPU06,0-MA-077018	132
077019	C-M23F19-19XDIFPU08,0-MA-077019	132
077020	C-M23F19-19XDIFPU15,0-MA-077020	132
077025		133
077026		133
077750	CES-A-C5E-01	38
077751	C-M12F08-08X025PV05,0-GA-077751	130
077752	C-M12F08-08X025PV10,0-GA-077752	130
077753	C-M12F08-08X025PV15,0-GA-077753	130
077871	C-M12F08-08X025PV20,0-GA-077871	130
077872	C-M12F08-08X025PV25,0-GA-077872	130
077873	C-M12F08-08X025PV50,0-GA-077873	130
082220	Bolt CES-A-C	136
084177		144
084703	C-M08F04-04X025PV10,0-ES-084703	121
085194	C-M23F19-19XDIFPU06,0-MA-085194	132
085195	C-M23F19-19XDIFPU08,0-MA-085195	132
085196	C-M23F19-19XDIFPU15,0-MA-085196	132
086232	M4X14-NIRO/V100	144
086236		144
087256		145
088786	CES-A-BCA	38, 42, 82
088812	C-M08F04-04X025PV02,0-ES-088812	121
088813	C-M08F04-04X025PV05,0-ES-088813	121
088814	C-M08F04-04X025PV10,0-ES-088814	121
088815	C-M08F04-04X025PV15,0-ES-088815	121
091458	CES-A-C5H-01	38
092726	C-M23F19-19XDIFPU20,0-MA-092726	131
092727	C-M23F19-19XDIFPU25,0-MA-092727	131
092761	C-M23F19-19XDIFPU01,5-MA-092761	131
092816	C-M23F19-19XDIFPU03,0-MA-092816	131
092898	C-M23F19-19XDIFPU10,0-MA-092898	131
092901	C-M23F19-19XDIFPU10,0-MA-092901	132
092902	C-M23F19-19XDIFPU10,0-MA-092902	132
092906	C-M23F19-19XDIFPU01,5-MA-092906	132
092907	C-M23F19-19XDIFPU01,5-MA-092907	132
092908	C-M23F19-19XDIFPU03,0-MA-092908	132
092909	C-M23F19-19XDIFPU03,0-MA-092909	132
092910	C-M23F19-19XDIFPU20,0-MA-092910	132
092911	C-M23F19-19XDIFPU20,0-MA-092911	132
092912	C-M23F19-19XDIFPU25,0-MA-092912	132
092913	C-M23F19-19XDIFPU25,0-MA-092913	132
093456	EMP-SB	142
093457	EMP-B1	142, 143
093458	EMP-B2	142
094309		133
094310		133
095035	C-M08F04-04X025PV25,0-ES-095035	121
095993	C-M23F19-19XDIFPU30,0-MA-095993	131
096327	CET-A-BWK-50X	74, 110
096613	Switch bracket	140

<b>Order no.</b>	<b>Item</b>	<b>Page</b>
097100	C-M08F04-04X025PV50,0-ES-097100	121
097525	CES-A-W5H-01	38
097627	AC-YD-SBB-097627	128
097645	AC-SP-SJ-097645	128
097747	AE-B-A1-02,0-F-097747	145
097945	CES-A-C5H-01-EX	38
098158	CES-A-BBA-EX-098158	38
098225	CES-AR-AES-12	116
098357	Bolt CES-A-C/F	136
098582	CES-AR-C01-EH-SA	82
098775	CES-A-BPA	38, 42, 82
098807		146
098808		146
098850		145
098941	CES-AR-C01-AH-SA	82
098942	CES-AR-C01-CH-SA	82
099434		144, 145
099795	AY-HDL-099795	145, 146
099877		145
100177	C-M12F08-08X025PV05,0-MA-100177	126
100178	C-M12F08-08X025PV10,0-MA-100178	126
100179	C-M12F08-08X025PV20,0-MA-100179	126
100180	C-M12F05-05X034PV05,0-M12M05-100180	123
100181	C-M12F05-05X034PV10,0-M12M05-100181	123
100182	C-M12F05-05X034PV20,0-M12M05-100182	123
100183	C-M12F05-05X034PV05,0-MA-100183	123
100184	C-M12F05-05X034PV10,0-MA-100184	123
100185	C-M12F05-05X034PV20,0-MA-100185	123
100250	CES-AP-C01-CH-SA-100250	42
100251	CES-A-BRN-100251	42, 82
100775	CES-AP-CR2-CH-SF-100775	45
100776	CES-A-BLN-R2-100776	45, 85
102125	CES-A-BPA-EX-102125	38
102490	C-M23F19-19XDIFPU40,0-MA-102490	131
103110		145
103418	CET1-AR-CRA-AH-50X-SG-103418	107
103450	CES-A-BLN-U2-103450	45, 85
103556	C-R08F06-06X014PV05,0-ES-103556	120
103557	C-R08F06-06X014PV10,0-ES-103557	120
103558	C-R08F06-06X014PV15,0-ES-103558	120
103559	C-R08F06-06X014PV20,0-ES-103559	120
103560	C-R08F06-06X014PV25,0-ES-103560	120
103714	AE-M-CET-103714	145
104028		137
104309	Bolt CET-A-C	141
104509	CES-AP-CL2-CH-SF-104509	45
104510	CES-A-BLN-L2-104510	45, 85
104730	CES-A-BDN-06-104730	45, 49, 85, 89
104776	CES-EA-TC-AK08-104776	134
105294	CES-AP-CL2-AH-SF-105294	44
105295	CES-AP-CR2-AH-SF-105295	44
105600	CES-AP-CR2-CH-L05-105600	45
105601	CES-AP-CR2-AH-L05-105601	44
105602	CES-AP-CL2-CH-L05-105602	45
105603	CES-AP-CL2-AH-L05-105603	44
105619		137
105745	CES-AR-CR2-CH-SA-105745	85
105746	CES-AR-CR2-AH-SA-105746	84
105747	CES-AR-CL2-CH-SA-105747	85
105748	CES-AR-CL2-AH-SA-105748	84
105750	CES-AR-CR2-CH-SG-105750	85

Order no.	Item	Page	Order no.	Item	Page
105751	CES-AR-CR2-AH-SG-105751	84	111145	CES-AP-C01-AH-SB-111145	42
105752	CES-AR-CL2-CH-SG-105752	85	111233	AE-B-A1-03,0-F-111233	145
105753	CES-AR-CL2-AH-SG-105753	84	111346	CET3-AP-CRA-AH-50X-SI-111346	73
105763	CET1-AR-CRA-CH-50X-SG-105763	107	111603	C-M08F08-08X014PV20,0-ES-111603	122
105764	CET1-AR-CRA-CH-50S-SG-105764	107	111683	CET4-AR-CRA-AH-50X-SG-111683	108
105802	CET1-AR-CRA-AH-50S-SG-105802	107	111684	CET4-AR-CRA-CH-50X-SG-111684	108
106159	CET1-AR-CRA-AH-50F-SG-106159	107	111696	AC-YD-V0,2-SBB-111696	128
106172	Bolt CET-A/C/F	141	111708	CES-AP-C01-CH-SB-111708	42
106189	CES-AP-CR2-CHL10-106189	45	111725	CET3-AR-CRA-AH-50F-SH-C2312-111725	110
106190	CES-AP-CL2-CHL10-106190	45	111747	CES-AP-CL2-AH-SB-111747	44
106191	CES-AP-CR2-AH-L10-106191	44	111748	CES-AP-CR2-AH-SB-111748	44
106192	CES-AP-CL2-AH-L10-106192	44	112082	CET4-AP-CRA-AH-50X-SI-112082	73
106275	CET1-AR-CDA-AH-50X-SG-106275	107	112395	AC-YD-V1,0-SBB-112395	128
106350	Bolt CET-A/C/F C2282	141	112629	CES-EA-TC-KK08-112629	134
106550	CES-AP-CR2-CH-SB-106550	45	112992	CET3-AR-CRA-CH-50S-SG-112992	108
106551	CES-AP-CL2-CH-SB-106551	45	113022	CET1-AR-CRA-AH-50X-SH-C2290-113022	109
106552	CES-AP-CR2-AH-SB-106552	44	113023	CET3-AR-CRA-AH-50F-SH-C2353-113023	110
106553	CES-AP-CL2-AH-SB-106553	44	113024	CET3-AR-CRA-AH-50X-SH-C2290-113024	110
106616	CET1-AR-CRA-AH-50A-SG-106616	107	113081	CET4-AR-CRA-CH-50S-SG-113081	108
106671	C-M08F08-08X014PU05,0-ES-106671	122	113139	CET3-AR-CRA-AH-50X-SG-C2290-113139	108
106672	C-M08F08-08X014PU10,0-ES-106672	122	113148	CET3-AR-CRA-AH-50F-SH-113148	110
106673	C-M08F08-08X014PU20,0-ES-106673	122	113187	C-M12F05-05X025PU10,0-MA-113187	124
106694	EMP-B-CET	143	113188	C-M12F08-08X025PU10,0-MA-113188	127
106695	EMP-L-CET	143	113189	C-M12F08-08X025PU10,0-MA-113189	127
106798	CES-AP-C01-CH-SB-106798	42	113190	C-M12F05-05X025PU10,0-MA-113190	124
109015	CET1-AR-CRA-CH-50X-SG-C2290-109015	107	113255	CET1-AR-CDA-CH-50X-SH-113255	109
109044	CES-AR-CR2-CH-L05-109044	85	113609	CET4-AR-CRA-CH-50X-SG-C2355-113609	108
109045	CES-AR-CL2-CH-L05-109045	85	113620	C-M12F05-05X034PU05,0-MA-113620	124
109046	CES-AR-CR2-AH-L05-109046	84	113640	C-M12F05-05X034PU10,0-MA-113640	124
109047	CES-AR-CL2-AH-L05-109047	84	113682	C-M12F05-05X034PU20,0-MA-113682	124
109048	CES-AR-CR2-CHL10-109048	85	113739	CEM-I2-AR-M-C40-SH-113739	94
109049	CES-AR-CL2-CH-L10-109049	85	113869	A-C40-113869	54, 94
109050	CES-AR-CR2-AH-L10-109050	84	113965	CET3-AR-CRA-AH-50F-SG-113965	108
109051	CES-AR-CL2-AH-L10-109051	84	113986		137
109075	CET2-AR-CRA-AH-50S-SG-109075	107	114073	CET3-AP-CRA-AH-50F-SI-114073	73
109167	CES-AP-CL2-CH-SB-109167	45	114088	CET3-AR-CRA-AH-50X-SH-C2290-114088	110
109168	CES-AP-CR2-CH-SB-109168	45	114090	CET3-AR-CDA-CH-50F-SG-114090	108
109212		144	114091	CET-DR	146
109231	CET1-AR-CDA-CH-50X-SG-109231	107	114650	CET4-AR-CRA-CH-50F-SG-114650	108
109358		137	114712	CET4-AR-CDA-CH-50X-SG-114712	108
109401	CET3-AR-CRA-AH-50X-SG-109401	108	115112	C-M12F08-08X025PU05,0-MA-115112	127
109672	Bolt CET-A/C-C2308	141	115113	C-M12F08-08X025PU10,0-MA-115113	127
109941	CET2-AR-CRA-CH-50F-SG-C2312-109941	107	115114	C-M12F08-08X025PU20,0-MA-115114	127
110082	CET2-AR-CRA-CH-50X-SG-110082	107	115116	C-M12F08-08X025PV30,0-MA-115116	126
110103	CET3-AR-CRA-AH-50X-SH-110103	110	115150	CES-AP-U-C04-USI-115150	48
110104	CET3-AR-CRA-CH-50X-SH-110104	110	115202	CET3-AR-CRA-AH-50X-SH-C2375-115202	110
110114	CET3-AR-CRA-CH-50X-SG-C2290-110114	108	115257	C-M12F08-08X025PU30,0-MA-115257	127
110201	CET4-AR-CRA-AH-50X-SH-110201	110	115271	CES-ABBN-C04-115271	49, 89
110202	CET4-AR-CRA-CH-50X-SH-110202	110	115324	CES-AP-U-C04-SK-115324	48
110203	CET1-AR-CRA-AH-50X-SH-110203	109	115565	C-M12F05-05X025PU10,0-M12M05-115565	124
110204	CET1-AR-CRA-CH-50X-SH-110204	109	115566	C-M12F05-05X025PU10,0-M12M05-115566	124
110205	CET2-AR-CRA-AH-50X-SH-110205	109	115732		137
110206	CET2-AR-CRA-CH-50X-SH-110206	109	115792	CES-AR-CR2-CH-SA-115792	85
110240	CET2-AR-CRA-AH-50X-SG-110240	107	115793	CES-AR-CL2-CH-SA-115793	85
110241	CET1-AR-CRA-CH-50F-SG-110241	107	116049	C-M08F04-04X034PU05,0-ES-116049	121
110354		137	116050	C-M08F04-04X034PU10,0-ES-116050	121
110355		137	116051	C-M08F04-04X034PU20,0-ES-116051	121
110906	CET3-AR-CRA-CH-50X-SG-110906	108	116246		137
110907	CET3-AR-CRA-CH-50F-SG-110907	108	116285	CET4-AR-CRA-AH-50F-SH-116285	110
110933	C-M08F08-08X014PV05,0-ES-110933	122	116502	CES-AP-U-C04-USB-116502	48
110934	C-M08F08-08X014PV10,0-ES-110934	122	116503	CES-AP-U-C04-U05-116503	48
110935	C-M08F08-08X014PV15,0-ES-110935	122	116504	CES-AP-U-C04-U10-116504	48
110943	CET1-AR-CRA-AH-50F-SH-C2312-110943	109	116505	CES-AP-U-C04-U20-116505	48

<b>Order no.</b>	<b>Item</b>	<b>Page</b>
116978	M4X20-NIRO/V20	144
117323	CES-I-AP-M-C04-USI-117323	49
117324	CES-I-AP-M-C04-USB-117324	49
117325	CES-I-AP-M-C04-SK-117325	49
117328	CES-I-AP-M-C04-U05-117328	49
117329	CES-I-AP-M-C04-U10-117329	49
117330	CES-I-AP-M-C04-U20-117330	49
119106	CET3-AP-CRA-AH-50F-SH-C2312-119106	74
119469	CES-I-AR-U-C04-SG-119469	88
119470	CES-I-AR-U-C04-U05-119470	88
119471	CES-I-AR-U-C04-U10-119471	88
119472	CES-I-AR-U-C04-U20-119472	88
119473	CES-I-AR-U-C04-USA-119473	88
119474	CES-I-AR-M-C04-SG-119474	89
119475	CES-I-AR-M-C04-U05-119475	89
119476	CES-I-AR-M-C04-U10-119476	89
119477	CES-I-AR-M-C04-U20-119477	89
119479	CES-I-AR-M-C04-USA-119479	89
119690	AM-SET-PP-119690	142
119694	AM-SET-PPB-119694	142
119932	C-M12F05-05X034PU05,0-M12M05-119932	124
119947	C-M12F05-05X034PU10,0-M12M05-119947	124
119971	C-M12F05-05X034PU20,0-M12M05-119971	124
120241	C-M08F04-04X034PU50,0-ES-120241	121
120861	AC-DP-04-SAA-120861	129
120998	C-M12F08-08X025PU20,0-MA-120998	127
120999	C-M12F08-08X025PU20,0-MA-120999	127
121367	CET3-AP-CRA-AH-50X-SI-C2290-121367	73
121579	CET3-AP-CRA-CH-50X-SA-121579	74
121646		138
121917		144
122398	CET3-AP-CRA-AH-50X-SA-122389	74
122406	CET3-AP-CRA-AH-50X-SA-122406	74
122409	CET3-AP-CRA-CH-50X-SA-122409	74
122413	CET4-AP-CRA-CH-50X-SA-122413	74
122415	CET4-AP-CRA-AH-50X-SA-122415	74
122609	AE-L-CET-122609	145
122667	A-C-H-W-SST-122667	64, 101
122668	A-C-H-W-SST-122668	64, 101
122671	A-C-H-RL-LS-122671	64, 101
122672	A-C-H-RRLS-122672	64, 101
122675	A-C-H-RO-LS-122675	64, 101
122676	A-C-H-RU-LS-122676	64, 101
122677	A-C-H-G-LS-122677	140
122748	AC-TA-A1-SH-122748	134
122749	AC-TA-A2-SH-122749	134
122784	C-M12F05-05X034PU30,0-MA-122784	124
122812	CTP-L1-AR-U-HA-AZ-SAB-122812	99
122813	CTP-L1-AR-U-HA-AE-SAB-122813	99
122814	CTP-L2-AR-U-HA-AZ-SAB-122814	99
123307	CTP-L1-AR-M-HA-AZ-SAB-123307	99
123308	CTP-L1-AR-M-HA-AE-SAB-123308	99
123340	AC-SP-A1-SA-123340	129
123361	CTP-L2-AR-M-HA-AZ-SAB-123361	99
123362	CTP-L1-AR-U-HA-AZ-SH-123362	100
123363	CTP-L1-AR-M-HA-AZ-SH-123363	100
123364	CTP-L1-AP-U-HA-AZ-SH-123364	63
123365	CTP-L1-AP-M-HA-AZ-SH-123365	63
123366	CTP-L2-AR-U-HA-AZ-SH-123366	100
123369	CTP-L2-AR-M-HA-AZ-SH-123369	100
123370	CTP-L2-AP-U-HA-AZ-SH-123370	63
123371	CTP-L2-AP-M-HA-AZ-SH-123371	63
123373	CTP-L1-AR-U-HA-AE-SH-123373	100

<b>Order no.</b>	<b>Item</b>	<b>Page</b>
123374	CTP-L1-AR-M-HA-AE-SH-123374	100
123375	CTP-L1-AP-U-HA-AE-SH-123375	63
123376	CTP-L1-AP-M-HA-AE-SH-123376	63
123411	AE-L-CH-123411	145
123430	C-M12M08-08X025PV01,0-M12F08-123430	126
123431	C-M12M08-08X025PV02,0-M12F08-123431	126
123432	C-M12M08-08X025PV05,0-M12F08-123432	126
123433	C-M12M08-08X025PV10,0-M12F08-123433	126
123583		138
123625	AE-L-C40-123625	144
123653	Bolt CTP-AC	139
123655	Bolt CTP-ACF	139
123657	Bolt CTP-GFK	139
123658	Bolt CTP-GFK-F	140
123659	Bolt BTC-CTP-S-TH-00-X	139
123660	Bolt BTC-CTP-S-TH-01-F	139
123922	CES-AP-CR2-CH-SB-123922	45
124104	CET1-AR-CRA-CH-50F-SH-C2312-124104	109
124204	AY-HDL-124204	145, 146
124225	CTP-L1-AP-U-HA-AZ-SA-124225	62
124401		137
124468	CTP-L1-AP-U-HA-AZ-SII-124468	61
124516	AC-YD-V0,2-SBB-124516	134
124589	CET3-AP-CRA-AH-50X-SI-C2438-124589	73
124594	CET3-AP-CRA-AH-50F-SI-C2438-127594	73
124601	CET3-AP-CRA-AH-50F-SA-124601	74
124727	CTP-L1-AP-M-HA-AZ-SA-124727	62
124728	CTP-L2-AP-U-HA-AZ-SA-124728	62
124729	CTP-L2-AP-M-HA-AZ-SA-124729	62
124937	CEMH2-AR-U-C40-SH-124937	94
124979	AM-C-124979	146
125481	A-TI-001-125481	54, 94
125496	AC-TA-A1-SG-125496	134
125497	AC-TA-A2-SG-125497	134
126015	A-C-H-G-SST-126015	64, 101
126026	AM-P-126026	142
126230	AM-B-126230	142
126231	AM-B-126231	142
126258	CTP-L2-AP-U-HA-AZC-SA-126258	62
126398	AM-P-126398	143
126399	AM-P-126399	143
126400	AM-P-126400	143
126763	CET4-AP-CRA-AH-50X-SI-C2438-126763	73
126874	CTP-L1-AR-U-HA-AZE-SH-126874	100
126912	CTP-L1-AP-U-HA-AE-SA-126912	62
127377	AF-E-80-127377	146
127460	AC-FM-AR-127460	135
127640	CTP-L1-AP-U-HA-AE-SII-127640	61
127727	CTP-L1-AP-U-HA-AZ-SA-127727	62
127798	CTP-LBI-AP-U-HA-AZ-SA-127798	62
128103	CEMH2-AY-U-C40-SA-128103	54
128193	CET4-AR-CRA-AH-50X-SG-C2290-128193	108
128484	CTP-L1-AP-U-HA-AE-SA-128484	62
129477	CTP-L1-AP-U-HA-AZ-SII-129477	61
129478	CTP-L1-AP-U-HA-AE-SII-129478	61
129512	CTP-L1-AP-U-HA-AZ-SA-EX-129512	63
136595	CTP-L1-AP-U-HA-AEC-SA-136595	62
136675	CTP-L1-AP-U-HA-AZ-SA-EX-136675	63
136732	CTP-L1-AP-U-HA-ZZ-SA-136732	62
136826	A-C-H-G-LS-EX-136826	64
136841	CTP-L2-AP-U-HA-AE-SA-136841	62
137164	CTP-L1-AR-U-HA-AEE-SH-137164	100
137165	CTP-L2-AR-U-HA-AZE-SH-137165	100

Order no.	Item	Page
137341	CTP-L1-AR-U-HA-AZE-SH-137341	100
137342	CTP-L1-AP-U-HA-AEE-SH-137342	64
137354	Bolt CTP-AC-C2308	139
137527	CES-A-BBN-C04-EX-137527	49, 89
137528	AM-C-C04-EX-137528	144
155865	AE SET LCHN A1 155865	145
156056	CTP-L1-AP-U-HA-AZE-SH-156056	64
156064	C-M12F05-05X034PV50,0-MA-156064	123
156065	C-M12F08-08X025PV40,0-MA-156065	126
156230	CES-A-BTN-C07-156230	16, 24
156233	CES-I-BR-M-C07-SA-156233	24
156240	CTP-L1-AP-U-HA-AE-SA-EX-156240	63
156338	AY CHN A1 156338	145
156429	AE L CET 156429	145
156935	CES-A-BDA 18	42, 82
157111	CTP-L1-AP-U-HA-AZS-SA-157111	63
157112	CTP-L1-AP-U-HA-AES-SA-157112	63
157287	CET3-AP-CRA-CH-50F-SA-C2312-157287	74
157408	CET3-AP-CRA-AH-50F-SI-C2312-157408	73
157549	CEM-I2-AY-U-C40-LZ-SA-157549	54
157696	A-C-H-G-SSS-157696	64, 101
157816	CTP-L1-AR-M-HA-AES-SAB-157816	99
157913	AC-YD-SBB-157913	128
157920	CES-I-BR-U-C07-SA-157920	24
158192	AC-YD-V0,2-SBB-158192	128
158193	AC-YD-V1,0-SBB-158193	128
158210	CES-A-BDN-06-158210	16, 24
158402	CTP-L2-AP-U-HA-AZE-SH-158402	64
158436	A-C40-158436	54, 94
158631	CES-I-AP-M-C14-U20-158631	52
158632	CES-I-AP-U-C14-U20-158632	52
158875	ESM-CB-AZ-F12-BR-I0-158875	34
159080	AE-M-CET-159080	145
159112	CTP-L2-AR-U-HA-AEE-SH-159112	100
159355	C-M12F05-05X034PU1,0-M12M05-159355	124
159356	C-M12F05-05X034PU1,5-M12M05-159356	124
159357	C-M12F05-05X034PU3,0-M12M05-159357	124
159358	C-M12F05-05X034PU5,0-M12M05-159358	124
159359	C-M12F05-05X034PU8,0-M12M05-159359	124
159360	C-M12F05-05X034PU10,0-M12M05-159360	124
159361	C-M12F05-05X034PU15,0-M12M05-159361	124
159362	C-M12F05-05X034PU1,0-M12M05-159362	125
159363	C-M12F05-05X034PU1,5-M12M05-159363	125
159364	C-M12F05-05X034PU3,0-M12M05-159364	125
159365	C-M12F05-05X034PU5,0-M12M05-159365	125
159614	CTP-I-AP-U-HA-ZZE-SBB-159614	61
159919	C-M12F05-05X034PU8,0-M12M05-159919	125
159920	C-M12F05-05X034PU10,0-M12M05-159920	125
159921	C-M12F05-05X034PU15,0-M12M05-159921	125
159951	Bolt BTM-UNIP-S-TH-00-X-159951	139
160076	CES-I-BP-M-C07-SB-160076	16
160080	CES-I-BP-U-C07-SB-160080	16
160441	CES-A-BBN-C14-160441	52, 92
160832	CES-I-AP-M-C04-USI-160832	49
160862	CTP-L1-AR-U-HA-AZS-SAB-160862	99
161164		144
161178	CET4-AP-CRA-CH-50F-SA-161178	74
161320	CEM-M2-C60-PZ-SE-161320	58
161322	A-C60-A1-161322	58
161344	AM-C-SW4-V3-161344	144
161348	AM-C-SW5-V3-161348	144
161496	CTM-LBI-BR-U-ZZ-SAP-161496	28
161502	CFS-A-BRN-161502	49, 89

Order no.	Item	Page
161524	CET3-AP-CRA-AH-50X-SF-161524	74
161577	CET4-AP-CRA-AH-50X-SI-C2509-161577	73
161638	CTM-LBI-BR-U-AZ-SA-161638	28
161639	CTM-LBI-BR-U-AZ-SA-161639	28
161640	CTM-LBI-BR-U-ZZ-SA-P-161640	28
161642	A-B-A1-A1-161642	19, 29
161643	A-B-A1-A1-P-161643	19, 29
161679	CES-I-AR-F-C04-SG-161679	89
161742	CES-A-BDN-06-161742	49, 89
161909	AC-YD-UO,2-SBB-161909	135
162555	CET4-AR-CRA-AH-50X-SG-C2355-162555	108
162592	CES-I-AP-M-C04-USI-162592	49
162596	CES-I-AR-M-C14-U20-162596	92
162813	CES-I-BP-M-C07-SI-162813	16
162815	CES-I-BP-U-C07-SI-162815	16
163003	CTP-L1-AP-M-HA-AE-SA-163003	62
163252	CEM-M2-C60-KZ-SE-163252	58
163573	C-M12F05-05X034PU0,22-M12M05-163573	125
164196	Bolt BTM-UNIP-S-TH-01-F-164196	139
165049	GWY-CB-1-BR-IO-165049	32
165281	A-C60-B1-162581	58
165517	CTM-LBI-BR-M-AZ-SA-165517	28
165746	CEM-M2-C60-PZ-SE-165746	58
165895	S-B-08-A1-A1-165895	19
165896	S-B-09-A1-A1-165896	19
165897	CTM-CBI-BP-U-AZ-SA-165897	18
165914	CES-I-BR-S-C07-SA-165914	26
165928	S-C07-04-V02-165928	26
166087	CTM-LBI-BP-U-AZ-SA-166087	18
166088	CTM-LBI-BP-M-AZ-SA-166088	18
166089	CTM-LBI-BP-U-AZ-SA-166089	18
166090	CTM-LBI-BP-U-AZ-SA-166090	18
166091	CTM-LBI-BR-U-AZ-SP-166091	29
166092	CTM-LBI-BR-M-AZ-SP-166092	29
166488	S-C07-04-V03-166488	26

A series of 25 horizontal grey lines spaced evenly down the page, intended for handwritten notes.



# Representatives

## International

### Austria

EUCHNER GmbH  
Aumühleweg 17-19/Halle 1C  
2544 Leobersdorf  
Tel. +43 720 010 200  
Fax +43 720 010 200-20  
info@euchner.at

### China

EUCHNER (Shanghai)  
Trading Co., Ltd.  
No. 15 building,  
No. 68 Zhongchuang Road,  
Songjiang  
Shanghai, 201613, P.R.C  
Tel. +86 21 5774-7090  
Fax +86 21 5774-7599  
info@euchner.com.cn

### India

EUCHNER (India) Pvt. Ltd.  
401, Bremen Business Center,  
City Survey No. 2562,  
University Road  
Aundh, Pune - 411007  
Tel. +91 20 64016384  
Fax +91 20 25885148  
info@euchner.in

### Mexico

EUCHNER México S de RL de CV  
Conjunto Industrial PK Co.  
Carretera Estatal 431 km. 1+300  
Ejido El Colorado, El Marqués  
76246 Querétaro, México  
Tel. +52 442 402 1485  
Fax +52 442 402 1486  
info@euchner.mx

### Turkey

EUCHNER Endüstriyel Emniyet  
Teknolojileri Ltd. Şti.  
Hattat Bahattin Sok.  
Ceylan Apt. No. 13/A  
Göztepe Mah.  
34730 Kadıköy / İstanbul  
Tel. +90 216 359-5656  
Fax +90 216 359-5660  
info@euchner.com.tr

### Benelux

EUCHNER (BENELUX) BV  
Visschersbuurt 23  
3356 AE Papendrecht  
Tel. +31 78 615-4766  
Fax +31 78 615-4311  
info@euchner.nl

### Czech Republic

EUCHNER electric s.r.o.  
Trnkova 3069/117h  
628 00 Brno  
Tel. +420 533 443-150  
Fax +420 533 443-153  
info@euchner.cz

### Italy

TRITECNICA SpA  
Viale Lazio 26  
20135 Milano  
Tel. +39 02 541941  
Fax +39 02 55010474  
info@tritecnica.it

### Poland

EUCHNER Sp. z o.o.  
Krasinskiiego 29  
40-019 Katowice  
Tel. +48 32 252 20 15  
Fax +48 32 252 20 13  
info@euchner.pl

### United Kingdom

EUCHNER (UK) Ltd.  
Unit 2 Petre Drive,  
Sheffield  
South Yorkshire  
S4 7PZ  
Tel. +44 114 2560123  
Fax +44 114 2425333  
sales@euchner.co.uk

### Brazil

EUCHNER Com.Comp.  
Eletronicos Ltda.  
Av. Prof. Luiz Ignácio Anhaia Mello,  
no. 3878  
Vila Graciosa  
São Paulo - SP - Brasil  
CEP 03295-000  
Tel. +55 11 29182200  
Fax +55 11 23010613  
euchner@euchner.com.br

### France

EUCHNER France S.A.R.L.  
Parc d'Affaires des Bellevues  
Allée Rosa Luxemburg  
Bâtiment le Colorado  
95610 ERAGNY sur OISE  
Tel. +33 1 3909-9090  
Fax +33 1 3909-9099  
info@euchner.fr

### Japan

EUCHNER Co., Ltd.  
1269-1 Komakiharashinden,  
Komaki-shi, Aichi-ken  
485-0012, Japan  
Tel. +81 568 74 5237  
Fax +81 568 74 5238  
info@euchner.jp

### Spain

EUCHNER, S.L.  
Gurutzegi 12 - Local 1  
Polígono Belarzta  
20018 San Sebastian  
Tel. +34 943 316-760  
Fax +34 943 316-405  
info@euchner.es

### USA

EUCHNER USA Inc.  
6723 Lyons Street  
East Syracuse, NY 13057  
Tel. +1 315 701-0315  
Fax +1 315 701-0319  
info@euchner-usa.com

EUCHNER USA Inc.  
Detroit Office  
130 Hampton Circle  
Rochester Hills, MI 48307  
Tel. +1 248 537-1092  
Fax +1 248 537-1095  
info@euchner-usa.com

### Canada

EUCHNER Canada Inc.  
2105 Fasan Drive  
Oldcastle, ON N0R 1L0  
Tel. +1 519 800-8397  
Fax +1 519 737-0314  
sales@euchner.ca

### Hungary

EUCHNER Magyarország Kft.  
FSD Park 2.  
2045 Törökbalint  
Tel. +36 1 919 0855  
Fax +36 1 919 0857  
info@euchner.hu

### Korea

EUCHNER Korea Co., Ltd.  
115 Gasan Digital 2 - Ro  
(Gasan-dong, Daeryung  
Technotown 3rd Rm 810)  
153 - 803 Kunchon-Gu, Seoul  
Tel. +82 2 2107-3500  
Fax +82 2 2107-3999  
info@euchner.co.kr

### Switzerland

EUCHNER AG  
Falknistrasse 9a  
7320 Sargans  
Tel. +41 81 720-4590  
Fax +41 81 720-4599  
info@euchner.ch

## Germany

### Augsburg

EUCHNER GmbH + Co. KG  
Ingenieur- und Vertriebsbüro  
Julius-Spokojny-Weg 8  
86153 Augsburg  
Tel. +49 821 56786540  
Fax +49 821 56786541  
peter.klopfer@euchner.de

### Chemnitz

EUCHNER GmbH + Co. KG  
Ingenieur- und Vertriebsbüro  
Am Vogelherd 2  
09627 Bobritzsch-Hilbersdorf  
Tel. +49 37325 906000  
Fax +49 37325 906004  
jens.zehrtner@euchner.de

### Essen

Thomas Kreißl  
fordern - steuern - regeln  
Hackenberghang 8a  
45133 Essen  
Tel. +49 201 84266-0  
Fax +49 201 84266-66  
info@kreissl-essen.de

### Lübeck

EUCHNER GmbH + Co. KG  
Ingenieur- und Vertriebsbüro  
Am Stadtstrand 13  
23556 Lübeck  
Tel. +49 451 88048371  
Fax +49 451 88184364  
martin.pape@euchner.de

### Stuttgart

EUCHNER GmbH + Co. KG  
Ingenieur- und Vertriebsbüro  
Kohlhammerstraße 16  
70771 Leinfelden-Echterdingen  
Tel. +49 711 7597-0  
Fax +49 711 7597-303  
oliver.laier@euchner.de  
uwe.kupka@euchner.de

### Berlin

EUCHNER GmbH + Co. KG  
Ingenieur- und Vertriebsbüro  
Ulfmenstraße 115a  
12621 Berlin  
Tel. +49 30 50508214  
Fax +49 30 56582139  
alexander.walz@euchner.de

### Düsseldorf

EUCHNER GmbH + Co. KG  
Ingenieur- und Vertriebsbüro  
Tippgarten 3  
59427 Unna  
Tel. +49 2308 9337284  
Fax +49 2308 9337285  
christian.schimke@euchner.de

### Freiburg

EUCHNER GmbH + Co. KG  
Ingenieur- und Vertriebsbüro  
Steige 5  
79206 Breisach  
Tel. +49 7664 403833  
Fax +49 7664 403834  
peter.seifert@euchner.de

### Nürnberg

EUCHNER GmbH + Co. KG  
Ingenieur- und Vertriebsbüro  
Steiner Straße 22a  
90522 Oberasbach  
Tel. +49 911 6693829  
Fax +49 911 6696722  
ralf.paulus@euchner.de

### Wiesbaden

EUCHNER GmbH + Co. KG  
Ingenieur- und Vertriebsbüro  
Adolfsallee 3  
65185 Wiesbaden  
Tel. +49 611 98817644  
Fax +49 611 98895071  
giancarlo.pasquesi@euchner.de



# EUCHNER

More than safety.



#### Support hotline

You have technical questions about our products or how they can be used?  
For further questions please contact your local sales representative.



#### Comprehensive download area

You are looking for more information about our products?  
You can simply and quickly download operating instructions, CAD or ePLAN data and accompanying software for our products at [www.euchner.com](http://www.euchner.com).



#### Customer-specific solutions

You need a specific solution or have a special requirement?  
Please contact us. We can manufacture your custom product even in small quantities.



#### EUCHNER near you

You are looking for a contact at your location? Along with the headquarters in Leinfelden-Echterdingen, the worldwide sales network includes 18 subsidiaries and numerous representatives in Germany and abroad – you will definitely also find us near you.

[www.euchner.com](http://www.euchner.com)

**EUCHNER GmbH + Co. KG**

Kohlhammerstraße 16  
70771 Leinfelden-Echterdingen  
Germany  
Tel. +49 711 7597-0  
Fax +49 711 753316  
[info@euchner.de](mailto:info@euchner.de)  
[www.euchner.com](http://www.euchner.com)

**EUCHNER**

More than safety.