取扱説明書 / Instruction Manual

## FƏ

## 多機能タッチパネル Multi-function Keypad "TP-G1-J1"

Copyright © 2007-2011 Fuji Electric Co., Ltd. All rights reserved.

この取扱説明書の著作権は、富士電機株式会社にあります。 本書に掲載されている会社名や製品名は、一般に各社の商標または登録商標です。 仕様は予告無く変更することがあります。

No part of this publication may be reproduced or copied without prior written permission from Fuji Electric Co., Ltd.

All products and company names mentioned in this manual are trademarks or registered trademarks of their respective holders.

The information contained herein is subject to change without prior notice for improvement.

# 日本語

## 日本語版

#### まえがき

多機能タッチパネル(TP-G1-J1)をお買上げいただき誠にありがとうございます。

多機能タッチパネル(TP-G1-J1)はインバータ本体に装着,または遠隔操作用延長ケーブル(CB-5S, CB-3S, CB-1S) などに接続することで,本体からの操作,または盤面などの遠隔からの操作も可能です。機能的には運転・操作, 機能コード設定,モニタ,コピー(インバータの機能コードデータの読出し,他のインバータへの書込み,照合 (ベリファイ))などが行えます。

本取扱説明書はFRENIC-Eco, FRENIC-Multi, FRENIC-MEGAの操作に対して共通にご利用いただけるよう編集して いますが、インバータの機種によりサポート範囲、例えばタッチパネルのモニタ内容、アクセス可能な機能コー ドなどが異なります。多機能タッチパネルをご使用の際はインバータ本体の取扱説明書も合わせてお読みいただ き、正しくご使用ください。間違った取扱いは、正常な運転を妨げたり、寿命の低下や故障の原因になります。



#### ■ 安全上のご注意

据付け, 配線(接続), 運転, 保守点検の前に必ずこの取扱説明書を熟読し, 製品を正しく使用してください。 更に, 機器の知識, 安全に関する情報, および注意事項のすべてについても十分に習熟してください。 この取扱説明書では, 安全注意事項のランクは下記のとおり区別されています。

⚠警告	取扱いを誤った場合に危険な状況が起こる可能性があり、死亡または重傷を負う事故の発生が想 定される場合
⚠注意	取扱いを誤った場合に危険な状況が起こる可能性があり、中程度の傷害や軽傷を受ける事故また は物的損害の発生が想定される場合

なお、注意に記載した事項の範囲内でも状況によっては重大な結果に結びつく可能性があります。 いずれも重要な内容を記載していますので必ず守ってください。

#### 運転操作について



- ・必ずインバータの端子カバーまたは表面カバーを取り付けてから電源を投入してください。なお、通電中はカバーを外さないでください。
- 濡れた手で操作しないでください。

#### 感電のおそれあり

- リトライ機能を選択するとトリップにより停止した場合に、トリップ要因によっては自動再始動し、モータが回転します。再始動しても人体および周辺に対する安全性を確保できるように機械の設計を行ってください。
- ストール防止機能により、設定した加減速時間や周波数と異なった状態で運転することがあります。この時でも 安全性を確保できるように機械を設計してください。
- タッチパネルの(100)キーは、機能コード F02 でタッチパネル運転を選択した時のみ有効です。緊急停止のスイッチ は別に用意してください。STOP キー優先機能を選択しないで、外部信号端子による運転を選択した場合は、タッ チパネル上の(100)キーによる運転停止はできません。
- 運転信号が ON(入)の状態でアラームを解除すると、突然再始動します。事前に運転信号が OFF(切)になっていることを確認してください。

#### 事故のおそれあり

- ・瞬時停電再始動を動作(F14=3,4または5)に設定した場合,瞬時停電後の復帰時に、インバータが自動再始動し、 モータが回転します。再始動しても人体および周辺に対する安全性を確保できるように機械の設計を行ってくだ さい。
- ・機能コードのデータ設定を間違えたり、取扱説明書およびユーザーズマニュアルを十分理解しないで機能コードのデータ設定を行うと、機械が許容できないトルクや速度でモータが回転することがあります。

#### 事故、けがのおそれあり

・インバータに通電中は、停止中でもインバータの端子に触れないでください。

#### 感電のおそれあり

#### 配線について

 ・濡れた手でスイッチを操作しないでください。
 ・ 濡れた手でスイッチを操作しないでください。
 ・多機能タッチバネルの取付けなどのために、カバーを開ける場合は、電源を遮断し22kW以下は5分以上、30kW以上は10分以上経過後、LEDモニタおよびチャージランプの消灯を確認し、テスターなどを使用し主回路端子 P(+)-N(-)間の直流中間回路電圧が安全な電圧(DC+25V以下)に下がっていることを確認してから行ってください。
 感電のおそれあり
 ・一般的に制御信号線の被覆は強化絶縁されていませんので、制御信号線が主回路活電部に直接触れると、何らかの原因で絶縁被覆が破壊されることがあります。この場合、制御信号線に主回路の高電圧が印加される危険性がありますので、主回路活電部に制御信号線が触れないように注意してください。
 事故のおそれあり

廃棄について

⚠注意

多機能タッチパネルを廃棄する場合は、産業廃棄物として扱ってください。

けがのおそれあり

### ⚠警告

・改造は絶対しないでください。

#### 感電、けがのおそれあり

#### 一般的注意

この取扱説明書に掲載されている全ての図解は、細部を説明するためにカバーまたは安全のための遮蔽物を 取り外した状態で描かれている場合があります。製品を運転する時は必ず規定どおりのカバーや遮蔽物を元 に戻し、取扱説明書の記載に従って運転してください。

#### 本書の構成

本書の構成は、以下のとおりです。

#### 第1章 ご使用の前に

開梱時に行う点検や対象となるインバータについて説明します。

#### 第2章 取付けと接続

取付け方法、取付け上の注意事項について説明します。

#### 第3章 多機能タッチパネルから操作する

多機能タッチパネルによるインバータの基本的な操作方法,操作モード(運転モード,プログラムモード,アラ ームモード)の概要,さらに機能コードのデータ設定・確認,運転状態・メンテナンス情報・アラーム情報のモ ニタ方法,およびデータコピー機能などについて説明します。

#### 第4章 仕様

使用場所などの一般仕様、通信仕様、および伝送仕様について記載しています。

#### アイコンについて

本書では以下のアイコンを使用しています。

(注意 この表示を無視して誤った取扱いをすると、本製品が本来持つ機能を発揮できなかったり、その操作や設定が事故につながることになります。

□□ 参照先を示します。

まえがき ■ 安全上のご注意	i i
本書の構成	. iii
第1章 ご使用の前に 1.1 現品の確認 1.2 対象インバータ	. 1-1 . 1-1 . 1-1
第2章 取付けと接続 2.1 接続に必要な部品 2.2 取付け手順 2.2.1 多機能タッチパネルの設置 2.2.2 取付け手順	2–1 2–1 2–2 2–2 2–2 2–3
<ul> <li>第3章 タッチパネルから操作する</li> <li>3.1 タッチパネル各部の名称と機能</li> <li>3.2 操作モードの概要</li> <li>3.3 運転モード</li> <li>3.3.1 設定周波数, PID 指令などの設定</li> <li>3.3.2 運転・停止操作</li></ul>	. 3-1 . 3-1 . 3-4 . 3-5 5 3-11 3-12
3.3.4 ショキンク(寸動)連転 (FRENIC-Multi/MEGAで対応) 3.3.5 リモート/ローカル切換	3-14
(FRENIC-Eco/MEGA で対応) 3 3 6 軽故障表示のチェタ	3-14
0.0.0 程設厚扱がのビニッ (FRENIC-MEGA のみ対応)	3-15
3.4 プログラムモード	3-17
3.4.1 機能コードを設定する 「1 データ設定」	3-18
3.4.2 クイックセットアップで 機能コードデータを設定する	0 10
「0.クイックセットアップ」. 3.4.3 変更した機能コードを確認する	3-21
- 2. テーダ確認」 3.4.4 運転状態をモニタする	3-21
「3. 運転モニタ」 3.4.5 入出力信号状態をチェックする	3–22
「4. I/O チェック」 3 4 6 メンテナンス信報を目ろ	3–25
「5.メンテナンス」	3–29
3.4.7 アラーム情報を見る 「6.アラーム情報」	3-34
3.4.8 アラーム要因を参照する 「フーアラーム 要因」	3-38
3.4.9 データをコピーする	0 00
「8. データコピー」 3.4.10 負荷率を測定する	3-40
9. 負荷率測定」 3.4.11 クイックセットアップ対象の 機能コードを変更する	3–50
「10. ユーザ設定」 3.4.12 通信のデバッグを行う	3–54
「11.通信デバッグ」 3.5 アラームモード 3.6 その他の注意事項	3-55 3-56 3-59
3.6.2 コントラスト調整	3-99
(機能コード E47)	3-59
3.6.3 運転・操作(機能コードF02) 3.6.4 ジョギング(寸動)運転	3–59 3–59

	3.	3. 3. 7	6.5 6.6 主回	リ オ  路	+-  	ー ト ノ	トチデ	/ コン	、 - ー	 	ナン容	ルグ量	逍 測	[] [] []	运 E		•	•	 	3- 3- 3-	-59 -60 -61	) ) 1
第	4	章	仕橋	<b></b>															 	. 4	<b>I</b> -1	l
	4.	1	一般	仕材	羕.														 	. 4	<b>I</b> -1	l
	4.	2	通信	仕	羕.														 	. 4	1-2	2
	4.	3	伝送	仕相	羕.														 	. 4	1-2	2

#### 第1章 ご使用の前に

#### 1.1 現品の確認

開梱後、次の項目を確認してください。

- (1)多機能タッチパネルおよび取扱説明書(本書)が入っていることを確認してください。
- (2) 現品の破損・凹みおよび部品の脱落など輸送中の損傷がないことを確認してください。
- (3) 多機能タッチパネル裏面に形式(TP-G1-J1)が刻印されている ことを確認してください。(図1.1)

多機能タッチパネルには TP-G1-J1 と TP-G1-C1 の2種類があり, 対応する言語が異なります。

形式	対応言語							
TP-G1-J1	日本語, 英語, ドイツ語, フランス語 スペイン語, イタリア語							
TP-G1-C1	中国語,日本語,英語,韓国語							

製品にご不審な点や不具合などがありましたら,お買上げ店また は最寄りの弊社営業所までご連絡ください。



図1.1 多機能タッチパネル裏面

#### 1.2 対象インバータ

本製品は、当社インバータの下記シリーズに対応しています。

シリーズ名	インバータ形式 <sup>*</sup>	制約事項
FRENIC-Eco	FRNDDDF18-DD FRNDDDF1E-DD FRNDDDF1H-DD	多機能タッチパネルは、ROM バージョン「F1S10300」以降の インバータで使用できます。(インバータ ROM バージョンは、 プログラムモードのメニュー番号5「メンテナンス情報」の [MAIN]で確認することができます。) ROM バージョンが「F1S10300」より前のインパータで使用す る場合には、別途弊社までお問い合わせください。
FRENIC-Multi	FRNDDDE1S-DD FRNDDDE1E-DD	全てのインバータで使用できます。
FRENIC-MEGA	FRNDDDG1S-DD FRNDDDG1E-DD FRNDDDG1H-DD	多機能タッチパネルは、ROM バージョン「G1S10500」以降の インバータで使用できます。(インバータ ROM バージョンは、 プログラムモードのメニュー番号5「メンテナンス情報」の [MAIN]で確認することができます。) ROM バージョンが「G1S10500」より前のインバータで使用す る場合には、別途弊社までお問い合わせください。

\* □には形式に応じた英数字が入ります。インバータ形式の詳細は、インバータ本体の取扱説明書「1.1 現品の確認」を参照し てください。

#### 第2章 取付けと接続

#### 2.1 接続に必要な部品

多機能タッチパネルをインバータ本体以外に装着してご使用される場合には、次の部品が必要です。

部品名称	形式	備考			
遠隔操作用延長ケーブル (注1)	CB-5S, CB-3S, CB-1S	長さが3種類(5m, 3m, 1m)あります。			
多機能タッチパネル取付けねじ	M3x口 (注2)	2本必要(お客様準備)です。			

(注1) 市販のLAN ケーブルを使用する場合は、米国 ANSI/TIA/EIA-568A カテゴリ5の規格を満足する 10BASE-T/100BASE-TX 用ス トレートケーブル(20m 以内)をご使用ください。

推奨 LAN ケーブル

メーカ: サンワサプライ株式会社

形式: KB-10T5-01K (1mの場合)

KB-STP-01K (1mの場合) (シールドケーブル, EMC 指令に適合させる場合)

(注2) 盤に設置して使用する場合は、盤の厚さに合わせて適切な長さの取付けねじを使用してください。(図2.6参照)

#### 2.2 取付け手順

#### 2.2.1 多機能タッチパネルの設置

多機能タッチパネルは以下のような形態で設置が可能です。

- インバータ本体に装着する(図 2.1(a), (b)参照)(FRENIC-Eco/MEGA のみ対応)
- 盤に設置する(図2.2参照)
- ■手元で遠隔操作する(図2.3参照)



(a) FRN15F1S-2Jの場合

(b) FRN37F1S-2Jの場合

図 2.1 多機能タッチパネルをインバータ本体に装着する場合



図 2.2 多機能タッチパネルを盤に設置する場合 図 2.3 多機能タッチパネルを手元で操作する場合

#### 2.2.2 取付け手順

インバータの配線が終了してから、以下の手順で多機能タッチパネルを取り付けてください。取付けの前に、インバータの電源は遮断してください。

#### ■インパータ本体に装着する(FRENIC-Eco/MEGAのみ対応)

(1) 遠隔タッチパネルが装着されているインバータの場合は、下図のように矢印のフックを押えながら手前に引いて取り外します。



図2.4 遠隔タッチパネルの取外し

(2) 多機能タッチパネルを矢印のツメ部に挿入し、端子カバー方向(矢印①)に押えながらケースの本体にはめ 込みます(矢印②)。



図 2.5 多機能タッチパネルの取付け

#### ■ 盤に設置する場合

(1)多機能タッチパネルを取り付ける盤面に、図2.6に示すパネルカットを行ってください。また、適切な長さのねじを準備してください。



図 2.6 取付けねじ穴位置とパネルカット寸法

(単位:mm)

(2)多機能タッチパネルを、ねじ2本で盤面に取り付けます。(図2.7参照)
 (締付けトルク:0.7N・m)



図 2.7 多機能タッチパネルの取付け

(3) 遠隔タッチパネルが装着されているインバータの場合は、遠隔タッチパネルを取り外し(図2.4を参照)、多機能タッチパネルの RJ-45 コネクタとインバータ本体の RJ-45 コネクタ(モジュラージャック)に遠隔操作 用延長ケーブル(CB-5S, CB-3S, CB-1S)または市販のLAN ケーブル(ストレート)を接続します。(図2.8)



図 2.8 多機能タッチパネル・インバータ本体への延長ケーブルまたは市販の LAN ケーブルの接続

#### ■ 手元で遠隔操作する場合

「盤に設置する場合」の(3)の手順で接続してください。

#### 第3章 タッチパネルから操作する

#### 3.1 タッチパネル各部の名称と機能

タッチパネルで、運転・停止、各種データの表示、機能コードデータの設定、1/0 チェック、メンテナンス情報、 アラーム情報の表示や、データコピー、負荷率測定などができます。



表3.1 タッチパネル各部の名称と機能の概要

項目	表示部およびキー	機能の概要
データ 表示部	<b>FUN</b> FWD FRO* 3002 XX53	5桁7セグメントLED モニタです。各操作モードに応じて,以下の内容を表示 します。 ■ 運転モード時 : 運転情報(出力周波数,出力電流,出力電圧など) ■ プログラムモード時 : 同上 ■ アラームモード時 : 保護機能が動作した要因を示すアラームコード LCD(液晶)表示部です。各操作モードに応じて,以下の内容を表示します。 ■ 運転モード時 : 運転状態情報など ■ プログラムモード時 : メニュー,機能コード,機能コードデータなど ■ アラームモード時 : 保護機能が動作した要因情報など 運転モード時,LED モニタの単位表示や,運転状態を示します。 詳細は次ページ参照。
	表示部	
<b>5 7</b>	(PRG)	操作モードを切り換えます。
	SHIFT	数値設定時にカーソル桁を右に移動します。
	RESET	アラーム要因を取り除いた後、このキーを押すとアラームは解除され、運転モ ードへ切り換わります。 設定データのリセット 画面推移のリセットなどに使用します。
パネル 操作キー	$\otimes$	設定項目の選択 機能コードデータの変更などを行います。
操作キー		次の操作を行います。 ■ 運転モード時 : 運転状態のモニタ(出力周波数,出力電流,出力電 圧など)を切り換えます。 ■ プログラムモード時 : 機能コードの表示やデータの確定を行います。 ■ アラームモード時 : アラーム詳細情報の表示に切り換えます。
	FWD	モータの運転を開始します。(正転側)
	REV	モータの運転を開始します。(逆転側)
運転 操作 キー	STOP	モータの運転を停止します。
·	RES	1秒間長押しをすることによりローカルモードとリモートモードをトグル動 作で切り換えます。
LED 表示部	FWD LED O REV	インバータに運転指令が与えられている場合に点灯します。

#### インジケータ表示部の詳細

分類	項目	内容(表示内容,条件,状況)					
	Hz	出力周波数,設定周波数					
	A	出力電流					
	٧	出力電圧					
	%	トルク演算値,負荷率,速度					
	r/min	回転速度,回転速度設定值,負荷回転速度,負荷回転速度設定值					
LED モニタの 単位表示	m/min	ライン速度、ライン速度設定値					
	kW	消費電力、モータ出力					
	X10	データが 99999 を越えたとき。					
	min	定寸送り時間,定寸送り時間設定値					
	sec	タイマ					
	PID	プロセス量					
	FWD	正転運転中					
運転状態の 表示	REV	逆転運転中					
	STOP	出力周波数なし					
	REM	リモートモード					
	LOC	ローカルモード					
運転操作 指令元の表示	COMM	通信有効(RS-485-1/2, フィールドバスオプション)					
	JOG	ジョギングモード					
	HAND	タッチパネル有効(ローカルモード時にも点灯)					





#### 3.2 操作モードの概要

インバータの操作モードには、次の3つがあります。

操作モード	各モードの概要
運転モード	通常運転時に運転・停止指令を設定できます。 リアルタイムで運転状態の監視(モニタ)ができます。 軽故障が発生すると軽故障表示* (/ - 紀)に切り換わります。(FRENIC-MEGA のみ対応)
プログラムモード	機能コードデータの設定、インバータ状態やメンテナンスに関する各種情報などの確 認ができます。
アラームモード	アラーム発生時にアラームコード <sup>*</sup> を表示し, アラームに関する各種情報を確認できま す。

表 3.2 操作モード

\*アラーム要因を表すコードです。各アラームコードの詳細は、インバ

ータ本体の取扱説明書「保護機能」を参照してください。

図3.1に、これらの操作モード間の状態遷移を示します。



図 3.1(a) FRENIC-Eco/Multiの操作モード状態遷移



図 3.1(b) FRENIC-MEGA の操作モード状態遷移(軽故障が追加)

#### 3.3 運転モード

運転モードは、電源投入後自動的に入るモードで、以下の操作ができます。

- [1] 設定周波数, PID 指令などの設定
- [2] 運転·停止操作
- [3] 運転状態のモニタ(出力周波数,出力電流など)
- [4] ジョギング(寸動)運転
- [5] リモート/ローカル切換
- [6] 軽故障表示のモニタ

#### 3.3.1 設定周波数, PID 指令などの設定

設定周波数または PID 指令は、タッチパネルの(ヘ)/(シ)キーによって設定できます。

設定周波数は機能コード E48 の設定によって、負荷回転速度などの機械系に置き換えた値として表示・設定することもできます。設定周波数をモータ回転速度、負荷回転速度、速度(%)の表示で設定する場合は、表 3.8「モニタ項目」に示すように、速度モニタ選択の機能コード E48 のデータを設定する必要があります(E48=3, 4, 7)。

#### ■ 設定周波数の設定

設定周波数を<sup>(ヘ)</sup>/シキーにより設定する(F01=0(工場出荷状態),8)

- (1) 機能コード F01 のデータを"0"または"8" (タッチパネルキー操作 (
   ✓ シキー)) に設定してください。タッ チパネルがプログラムモードまたはアラームモードにあるときは、
   ✓ シキーによる周波数設定はできま せん。
   ✓ シキーによる周波数設定を可能にするには、運転モードに移行させてください。
- (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2) 
  (2)



#### 図 3.2 周波数設定中の表示例

(3) 再度へ/シキーを押すことで周波数設定を変更できます。設定された周波数設定はインバータ内部のメモリに保存することができます。

- ビント ・周波数設定データは、主電源遮断時に保存される自動保存と、しまやーを押したときのみ保存する 方法があります。機能コード E64 により選択できます。(FRENIC-Eco/MEGA のみ対応)
  - ・周波数設定などをへくシキーで設定する場合、表示の最下位桁が点滅し、最下位桁からデータが 変化し、変化する桁が順次上位の桁に移動します。
  - ・シフトキーを押すと、変更できる桁(点滅表示)が移動しますので、簡単に大きい桁のデータ変更 ができます。
  - ・機能コード C30 のデータを"0"(タッチパネルキー操作 (ヘノシキー))に設定し、周波数設定2を 選択すると、同様にヘノシキーにより設定周波数の設定が可能になります。
  - ・機能コード F01 のデータを"0"(タッチパネルキー操作 (ヘノシキー))に設定している状態で、周 波数設定として周波数設定1以外の周波数設定方法(周波数設定2,通信,多段周波数)を選択し た場合は、タッチパネルを運転モードにしてもヘノシキーによって設定周波数を変更することは できません。この場合、ヘノシキーを押すと、現在選択されている設定周波数を表示します。

  - ・周波数設定手段がデジタル設定以外の場合は、LCD表示部は下記情報を示します。



以下に利用可能な設定手段を記号で示します。

記号	設定手段	記号	設定手段	記号	設定手段
HAND	タッチパネル	MULTI	多段周波数	PID-HAND	PID タッチパネル指令
12	端子 12			PID-P1	PID 指令 1 (アナログ指令)
C1	端子 C1	RS485-1	RS-485(ポート1) *1	PID-P2	PID 指令 2 (アナログ指令)
12+01	端子 12+端子 C1	RS485-2	RS-485 (ポート 2) *2	PID-U/D	PID UP/DOWN 指令
V2	端子 V2	BUS	バスオプション	PID_LINK	PID 通信指令
U∕D	UP/DOWN 制御	LOADER	インバータ支援 ソフトウェア 「FRENIC ローダ」	PID+MULTI	PID 多段周波数指令

表3.3 利用可能な設定手段

\*1 通信ポート 1。インバータ本体にある RJ-45 コネクタを示します。

\*2 通信ポート 2。FRENIC-MEGA ではインバータ本体の端子台を示し, FRENIC-Eco/Multi ではオプションカードにある端子台を示します。

#### ■ PID 制御時(プロセス制御)の設定

PID 制御(プロセス制御)を有効にするには、機能コード J01 のデータを"1"または"2"に設定する必要があります。

PID 制御モードの場合,LED モニタの内容により 
/ シキー操作による設定・確認できる内容が切り換わります。LED モニタが速度モニタの場合はマニュアル速度指令(設定周波数),速度モニタ以外の場合は PID プロセス指令になります。

□ PID 制御の詳細は、「ユーザーズマニュアル」を参照してください。

PID プロセス指令を / シキーにより設定する

- (1) 機能コード J02 を"0" (タッチパネルキー操作 (ヘノシキー))に設定します。
- (2) タッチパネルの運転モードで LED モニタを速度モニタ(E43=0)以外に設定します。タッチパネルがプログラムモードまたはアラームモードにあるときは、(ヘンシキーによる PID プロセス指令は設定できません。(ヘンキーによる PID プロセス指令を設定可能にするには、運転モードに移行させてください。
- (3) (3) (2) キーを押すと、下図に示すように、LED モニタには PID プロセス指令が表示され、LCD 表示部には操作案内など関連情報が表示されます。



図 3.3 PID プロセス指令設定中の表示例

LED モニタが PID 指令を表示している場合は、周波数設定と区別するために、表示の最下位桁とドットが点滅します。また、PID フィードバック値を表示している場合は、表示の最下位桁のドットが点灯します。



(4) 再度 / シキーを押すことで PID プロセス指令を変更できます。設定された PID プロセス指令はインバー タ内部のメモリに保存することができます。

- ヒント ・PID プロセス指令は、主電源遮断時に保存される自動保存と、 (※)キーを押したときのみ保存する方法があります。機能コード E64 により選択できます。(FRENIC-Eco/MEGA のみ対応)
  - ・PID のプロセス指令として多段周波数でのプロセス指令が選択(『SS4, SS8』=ON) されていても, タッチパネルによるプロセス指令の設定が可能です。
  - ・機能コード JO2 のデータを"0"以外に設定した場合は、 (ヘンシキーを押すと、現在選択されている PID プロセス指令は LED モニタに表示されますが、設定変更はできません。LCD 表示部は下記の案 内を示します。



表 3.4 (ヘノー)キー操作による PID プロセス指令と必要な設定

PID 制御 (動作選択) J01	PID 制御 (リモート指令) J02	LED モニタ E43	多段周波数 『SS4, SS8』	<ul><li>〇/シキーON 時の表示</li></ul>
1または2	0	0以外	ON またけ OFF	タッチパネルによる PID プロセス指令
	0 以外			現在設定されている PID プロセス指令

#### PID 制御のとき、設定周波数を〇ノ〇キーで設定する

設定方法・表示画面は通常の周波数設定と同じです。

表3.5 (ヘ)/(マ)キー操作によるマニュアル速度指令(周波数設定)と必要な設定

周波数設定 1 (F01)	Link からの 周波数設定	多段周波数 設定	PID 制御 キャンセル	◇/◇キーでの表示
0 無効	<i>.</i>		PID有効	PID 出力(最終周波数指令)
	無効	無効	キャンセル	タッチパネルによるマニュアル速度指令 (周波数設定)
上記以外			PID 有効	PID 出力(最終周波数指令)
			キャンセル	現在選択されているマニュアル速度指令 (周波数設定)



#### ■ PID 制御時(ダンサ制御)の設定

PID 制御(ダンサ制御)を有効にするには、機能コード J01 のデータを"3"に設定する必要があります。

PID 制御モードの場合、LED モニタの内容により (◇/ ◇キー操作による設定・確認できる内容が切り換わりま す。LED モニタが速度モニタの場合は主設定(周波数設定),速度モニタ以外の場合は PID 指令(ダンサ基準位 置指令)になります。

PID 指令(ダンサ基準位置)を ヘノシキーにより設定する

(1) 機能コード J02 を"0" (タッチパネルキー操作 (ヘノンキー))に設定します。

- (2) タッチパネルの運転モードで LED モニタを速度モニタ(E43=0) 以外に設定します。タッチパネルがプログラムモードまたはアラームモードにあるときは、 (ヘノ・(シキーによる PID 指令(ダンサ基準位置)は設定できません。(ヘノ・(シキーによる PID 指令を設定可能にするには、運転モードに移行させてください。)
- (3) 
  (3) 
  (3) 
  (2) 
  (3) 
  (2) 
  (3) 
  (3) 
  (2) 
  (4) 
  (5) 
  (5) 
  (5) 
  (5) 
  (6) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7) 
  (7)



図 3.4 PID 指令(ダンサ基準位置指令)設定中の表示例

LED モニタが PID 指令を表示している場合は、周波数設定と区別するために、表示の最下位桁とドット が点滅します。また、PID フィードバック値を表示している場合は、表示の最下位桁のドットが点灯し ます。



- (4) 再度 / シキーを押すことで PID 指令(ダンサ基準位置)を変更できます。設定された PID 指令は内部で機能コード J57 として保存され、他の PID 指令設定手段に切り換えた後に、タッチパネルによる PID 指令に戻しても保存されています。また、機能コード J57 として設定することもできます。
- ・PID 指令(ダンサ基準位置)として多段周波数での指令が選択(『SS4, SS8』=ON)されていても、タ ッチパネルによる PID 指令の設定が可能です。
  - ・機能コード J02 のデータを 0 以外に設定した場合は、 (ヘン・)キーを押すと、現在選択されている PID 指令は LED モニタに表示されますが、設定変更はできません。LCD 表示部は PID プロセス制御時と同じです。

PID 制御 (動作選択) J01	PID 制御 (リモート指令) J02	LED モニタ E43	多段周波数 『SS4, SS8』	<ul><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li><li></li></ul>
3	0	0 以外	ON = t_(t	タッチパネルによる PID 指令
	0 以外	0.2011	OFF	現在設定されている PID 指令

表 3.6 (ヘ)/(シ)キーによる主設定(周波数設定)と必要な設定

■ PID 制御(ダンサ基準位置)のとき、主設定を<sup>(ヘ)</sup>/<sup>(☉)</sup>キーで設定する

機能コード F01 のデータを"0" (タッチパネルキー操作 (ヘノ シキー))に設定し,主設定として周波数設定1を 選択する条件(通信からの周波数設定無効,多段周波数設定無効)になっている場合,タッチパネルの運転モー ドで LED モニタを速度モニタに設定すると、ヘノーシキーで主設定を変更することが可能になります。タッチパ ネルがプログラムモードまたはアラームモードにあるときは、ヘノーシキーによる主設定の変更はできませんの で、運転モードに移行させてください。下図を参照してください。タッチパネルによる主設定①が最終周波数指 令②に展開される条件を、ブロック図で示しています。

設定方法は通常の周波数設定と同じです。



#### 3.3.2 運転 停止操作

工場出荷状態では、<sup>(wu)</sup>キーを押して正転運転を開始、<sup>(wu)</sup>キーを押して減速停止します。<sup>(wu)</sup>キー操作は無効で す。タッチパネルによる運転・停止操作は、運転モード・プログラムモードで有効です。

逆転運転を行う場合および可逆運転を行う場合は、機能コード F02 を変更してください。

機能コード F02 の詳細は、インバータ本体の取扱説明書「第5章」を参照してください。



図 3.5 モータ回転方向

注) IEC 規格に対応したモータの場合、モータの回転方向は上図と反対になります。

#### ■ 運転状態の表示(LCD表示)

(1)機能コード E45 (LCD モニタ(表示選択))のデータを"0"に設定すると、LCD 表示部は、運転状態、回転方向、 および操作ガイドを表示します。

(LCD 画面の上側のインジケータは LED モニタの単位を、下側のインジケータは運転状態および運転操作指令 元を表示します。)



図 3.6 運転状態の表示

運転状態、回転方向は下表のように表示します。

表 3.7 運転状態と回転方向の表示

運転モード表示項目	内容
運転状態	RUN:         運転指令有り、またはインバータ駆動中           STOP:         運転指令無し、かつインバータ停止中
回転方向	FWD: 正転中 REV: 逆転中 ブランク: 停止中

(2)機能コード E45 (LCD モニタ (表示選択))のデータを"1"に設定すると、LCD 表示部は、出力周波数、出力電流、トルク演算値をバーグラフ表示で表示します。

(LCD 画面の上側のインジケータは LED モニタの単位を、下側のインジケータは運転状態および運転操作指令 元を表示します。)



四カ周波数: 最高周波数, 出力電流: インバータ定格電流の 200%, トルク演算値: モータ発生定格トルクの 200%

図 3.7 バーグラフ表示

#### 3.3.3 運転状態のモニタ

LED モニタ項目		モニタ ま テ 例	単位	表示値の説明	機能コード E43 の	モニタ選択の ページ番号		
		敌小时			データ	Eco Multi MEGA		
速度モニタ		機能コー ます。	ド E48 に	よって、下記の表示形態を選択でき	0			
	出力周波数 (滑り補償前)	<i>50.00</i>	Hz	表示値 = 出力周波数(Hz)	(E48=0)			
	出力周波数 (滑り補償後)	50.00	Hz	表示値 = 出力周波数(Hz)	(E48=1)	0		
	設定周波数	50.00	Hz	表示値 = 出力周波数(Hz)	(E48=2)	機種により表示		
	モータ 回転速度	<i>1500</i>	r/min	表示値 = 出力周波数(Hz) × <mark>120</mark> P01	(E48=3)	できない速度モ ニ タ が あ り ま す。詳細は各々		
	負荷回転速度	300.0	r/min	表示値 = 出力周波数(Hz)×E50	(E48=4)	の取扱説明書を 参照してくださ		
	ライン速度	300.0	r/min	表示値 = 出力周波数(Hz)×E50	(E48=5)	<i>и</i> .		
	定寸送り時間	50	min	表示値 = <u> </u>	(E48=6)			
	速度(%)	<i>50.0</i>	%	表示値 = <u>出力周波数(Hz)</u> ×100 最高周波数(Hz)	(E48=7)			
出	力電流	12.34	Α	インバータ出力電流実効値	3	8		
消費電力		10.25	kW	インバータ入力電力値	9	9		
トルク演算値		50	%	モータ発生トルク(演算値)	8	10		
出力電圧		200	۷	インバータ出力電圧実効値	4	11		
モータ出力		<i>9.85</i>	kW	モータ出力 (kW)	16	12		

表 3.8 モニタ項目

表 3.8 モニタ項目(続き)

LED モニタ項目	モニタ 表示例	モニタ 表示例 単位 表示値の説明		機能コード E43 の	モニタ選択の ページ番号		
				データ	Eco	Multi	MEGA
負荷率	50	%	モータの負荷率を, 定格を 100%と する百分率で表示	15		13	
PID 指令値 (注1)	ID.DD.	_	PID 指令値または PID フィードバッ ク値を,制御対象の物理量に換算し	10		14	
PID フィードバック 値 (注1)	<i>9.00.</i>	_	て表示 機能コード E40, E41 を参照	12		15	
PID 出力 (注1)	IDD.D.	%	PID 出力を, 最高出力周波数(F03) を 100%とする百分率で表示	14		16	
アナログ入力モニ タ (注2)	82.00	-	インバータのアナログ入力を,任意 の表示に換算して表示 機能コード E40,E41 を参照	17	18	-	18
タイマ (タイマ運転) (注3)	50	S	タイマ運転有効時の残り時間	13	Ι	17	_
現在位置パルス	100	pulse	位置制御用現在位置パルスを表示	21	-	19	_
位置偏差パルス	100	pulse	位置制御用位置偏差パルスを表示	22	-	20	_
トルク電流 (注4)	48	%	トルク電流指令値またはトルク電 流計算値を表示	23	-	-	21
励磁電流 磁束指令値 (注4)	50	%	磁束指令値を表示	24	_	_	22
積算電力量	100.0	kWh	表示値 = $\frac{積算電力量(kWh)}{100}$	25	_	-	23

LED モニタが表示している内容を、LCD 画面で表示します。(図 3.8 参照) 🔤 キーを押すことにより、LED モニタ 項目を切り換えることができます。



図 3.8 LED モニタ項目の案内画面

- (注1) PID 制御を行う場合(J01=1,2または3)のみ表示します。PID 指令・PID 出力の表示の場合はLED モニタの最下 位桁のドットが点滅し、PID フィードバック値の表示の場合は点灯します。
- (注2)アナログ入力モニタは、機能コード E61~E63 の端子機能選択で表示用のアナログ入力モニタを有効にした場合のみ表示されます。
- (注3) タイマ(タイマ運転用)は、タイマ運転を有効にした場合(C21=1)のみ表示されます。
- (注4) V/f 制御時は、ゼロ(0)が表示されます。

#### 3.3.4 ジョギング (寸動) 運転 (FRENIC-Multi/MEGA で対応)

ジョギング運転を行うためには、次の操作を行ってください。

- (1) ジョギング運転が可能な状態にします。
  - 1) 操作モードを運転モードにします。(3.2 項を参照)
- ・ジョギング運転時の周波数は、機能コード C20 の設定に従います。また、ジョギング運転時の加速時間および減速時間は、それぞれ機能コード H54、H55(H55は FRENIC-MEGA のみ対応)の設定に従います。これらの機能コードはジョギング運転専用です。必要に応じて個別に設定してください。
  - ・外部入力信号『JOG』により、「通常運転状態」と「ジョギング運転が可能な状態」を切り換えることもできます。
  - ・「通常運転状態」と「ジョギング運転が可能な状態」との移行操作(100キー+(ヘキー)は停止中の み有効です。
- (2) ジョギング運転を行います。

タッチパネルの<sup>FWD</sup>キー/<sup>FED</sup>キーを押している間はジョギング運転し, <sup>FWD</sup>キー/<sup>FED</sup>キーを離すと減速停止 します。

(3) ジョギング運転が可能な状態からぬけて、通常運転状態に戻します。

「‱キー+〈◇キー」のダブルキー操作を行います。インジケータ表示部の「JOG インジケータ」は消灯し ます。

#### 3.3.5 リモート/ローカル切換 (FRENIC-Eco/MEGA で対応)

本稼動時はインバータにあらかじめ設定した運転方法で運転するリモートモードで運転し、メンテナンス時はタ ッチパネルからの指令で運転するローカルモードに切り換えることができます。ローカルモードでは、インバー タがシステムから切り離され、すべてタッチパネルからの操作に従ってインバータが運転され、メンテナンスに 必要な作業を行います。

- リモートモード: 運転指令および周波数設定の設定手段が機能コード,運転指令2/1切換機能,リンク優先 機能などの設定手段切換信号により決定されるモードです。
- ローカルモード: 機能コードの設定によらず,運転指令・周波数設定ともにタッチパネルによる設定手段が有 効になるモードで,運転指令2/1切換機能,リンク優先機能などの設定手段より優先され ます。

ローカル設定時のタッチパネルからの運転指令の設定手段を以下に示します。

機能コード F02 データ	運転指令の設定手順
0:タッチパネル運転	タッチパネルの「^ヽ」/ 「ヽ」 / `」 / `」 / `」 / `」 / `」 / `」 / `」 /
1:外部信号	
2 : タッチパネル運転 (正転)	タッチパネルの <sup>FWD</sup> / <sup>FMD</sup> キーにより運転・停止ができます。 ただし、正転運転のみで、逆転運転はできません( <sup>FED</sup> キー無効)。
3 : タッチパネル運転 (逆転)	タッチパネルの℡V/阿Pキーにより運転・停止ができます。 ただし、逆転運転のみで、正転運転はできません(『WPキー無効)。

表3.9 ローカル設定時のタッチパネルからの運転指令の設定手段

タッチパネルの<sup>®®</sup>キーを1秒以上押し続けるたびに、運転指令・周波数設定の設定手段のリモート⇔ローカル が切り換わります。 また,外部からのデジタル入力信号による切換も可能です。この切換を有効にするには,デジタル入力端子にロ ーカル (タッチパネル)指令選択『LOC』を割り付ける必要があります。(機能コード E01~E09, E98, E99 いず れかのデータを"35"に設定してください。

現在のモードがインジケータで確認できます。(REM はリモートモード, LOC はローカルモードを表します。)

リモートモードからローカルモードへの切換時は、周波数設定はリモート時の周波数設定を自動的に維持します。 また、切換時点で運転状態であった場合は、回転方法を維持するようにタッチパネルの運転指令を自動的に ON させます。ただし、ローカルモードのタッチパネルの動作設定に対し矛盾が発生する場合(逆転のリモートモー ドから正転専用のタッチパネル運転のローカルモードへの切換の場合など)は停止します。

現在のリモート/ローカル状態と、タッチパネルの切換指令、ローカル(タッチパネル)指令選択『LOC』信号の組合せによって状態の遷移は異なります。図 3.9 リモートモード/ローカルモードの状態遷移図を参照して ください。

リモートモード/ローカルモードでの運転指令、周波数設定の詳細は「ユーザーズマニュアル」の「制御 ブロック図」「運転指令部」を参照してください。



図 3.9 リモートモード/ローカルモードの状態遷移図

#### 3.3.6 軽故障表示のモニタ(FRENIC-MEGAのみ対応)

インバータの異常判断は、即時トリップさせる重故障と、警報(表示と汎用出力端子)を出力して運転を継続す る軽故障に分けられます。軽故障が発生すると、LED モニタに軽故障発生を示す *と - FL* を表示し、操作案内に「ケ イコショウ」が点滅表示します。軽故障として扱う対象は機能コード H81, H82 で設定する必要があります。汎 用出力端子(機能コード E20~E24, E27) に軽故障『LALM』(データ=98)を割り付けると、軽故障要因が発生 したとき汎用出力に軽故障『LALM』信号が出力されます。



図 3.10 軽故障の表示

□ 軽故障対象の要因は、FRENIC-MEGA 取扱説明書「第6章 故障かな?と思ったら・・・」を参照してください。

#### ■ 発生した軽故障の内容確認方法

軽故障が発生すると, *∠-只*∠ が表示されます。発生した軽故障の内容を確認したい場合は, (™)キーを押しプロ グラムモードに移行し,「メンテナンス情報」の「LALM1」にて確認します。「メンテナンス情報」での画面遷移 は,「3.4.6 メンテナンス情報を見る」を参照してください。

また、同時に過去の軽故障内容も「LALM2」(軽故障内容(1回前))~「LALM4」(軽故障内容(3回前))にて確 認できます。

■ 軽故障の解除方法

軽故障の発生を確認した後、LED モニタを *└ −S<sup>L</sup>* 表示から運転状態のモニタ (周波数の表示など)に戻す場合 は、運転モードの状態で⇔キーを押します。

軽故障の要因が取り除かれた場合は、操作案内の「ケイコショウ」の表示は消え、汎用出力『LALM』も OFF にな ります。要因が取り除かれていない場合(DC ファンロック検出など)は、LED モニタの *と −AL* は消えて通常の モニタが可能になりますが、操作案内の「ケイコショウ」は表示されたままで、汎用出力『LALM』は軽故障状態 を継続します。



#### 3.4 プログラムモード

プログラムモードは、機能コードの設定・確認やメンテナンス関係の情報、入出力(I/0)端子情報のモニタな どの機能があります。簡単に機能を選択できるようにメニュー方式を採用しています。メニューの種類を表 3.10 に示します。

メニュー 番号	メニュー	主な機能	参照
0	クイック セットアップ	あらかじめ設定した基本的な機能コードのみを表示します。	3.4.2項
1	データ設定	機能コードを選択し、そのデータを表示/変更ができます。(注)	3.4.1項
2	データ確認	機能コード, データを同一画面で確認でき, 工場出荷設定から変更 された機能コードも確認できます。 また, 機能コードデータの参照/変更もできます。	3.4.3項
3	運転モニタ	メンテナンスや試運転を行う際に必要な運転情報を表示します。	3.4.4項
4	I/0 チェック	外部とのインタフェース情報を表示します。	3.4.5項
5	メンテナンス	累積運転時間など、メンテナンス時に利用する情報を表示します。	3.4.6項
6	アラーム情報	過去4回分のアラームコードを表示し, 各アラーム発生当時の運転 情報も参照できます。	3.4.7項
7	アラーム要因	アラームの発生要因を参照できます。	3.4.8項
8	データコピー	機能コードデータの読込み,書込みおよびベリファイを行います。	3.4.9項
9	負荷率測定	出力電流最大値, 出力電流平均値, 平均ブレーキ電力を測定するこ とができます。	3. 4. 10 項
10	ユーザ設定	クイックセットアップの対象機能コードの追加・削除ができます。	3.4.11 項
11	通信デバッグ	通信専用の機能コード (S,M,W,X,Zコード) のデータを確認できま す。	3. 4. 12 項

表 3.10 プログラムモードのメニュー

(注) オプションの機能コード(oコード)は、オプションが実装された場合のみ表示します。

図 3.11 に「プログラムモード」のメニュー遷移を示します。



キー操作が約5分間なければ、インバータは自動的に運転モードに戻り、LCD表示部のバックライトが消灯しま す。

#### 3.4.1 機能コードを設定する 「1. データ設定」

プログラムモードのメニューにて「1.データ設定」を選択することで、機能コードを設定することができます。 表示される機能コードは機種によって異なります。

機能コードグループ	機能	説明
Fコード (Fundamental functions)	基本機能	基本的なモータの運転で使用される機能
Eコード (Extension terminal functions)	端子機能	制御回路端子の働きを選択する機能 LED モニタの表示に関する機能
Cコード (Control functions of frequency)	制御機能	  周波数設定に関する応用機能  
Pコード (Motor1 parameters)	モータ 1 パラメータ	第1モータの容量などの特性パラメータを設定する機能
Hコード (High performance functions)	ハイレベル機能	付加価値の高い機能や複雑な制御などに関する機能
Aコード (Motor2 parameters)	モータ2 パラメータ	第2モータの容量などの特性パラメータを設定する機能
bコード (Motor3 parameters)	モータ3 パラメータ	
r コード (Motor4 parameters)	モータ4 パラメータ	第4モータの容量などの特性パラメータを設定する機能
Jコード (Application functions 1)	アプリケーション 機能 1	PID 制御などのアプリケーションに関する機能
dコード (Application functions 2)	アプリケーション 機能2	速度制御などのアプリケーションに関する機能
yコード (Link functions)	リンク機能	通信に関する機能
oコード (Option functions)	オプション機能	オプションに関する機能(注)

表 3.11 機能コード一覧

(注) oコードは、オプションが実装された場合のみ表示します。

#### ■ ダブルキー操作が必要な機能コード

機能コード F00 (データ保護), H03 (データ初期化)および H97 (アラーム履歴クリア) のデータを変更するに は、「∞ッキー+(ヘキー」または「∞ッキー+(√)キー」のダブルキー操作が必要です。

#### ■ 運転中の機能コードデータの変更、反映、保存について

インバータ運転中にデータ変更が可能な機能コードと不可能な機能コードがあります。また、データを変更すると、変更した値が直ちにインバータの運転に反映される機能コードと、反映されない機能コードがあります。詳 しくは、インバータ本体の取扱説明書「5.1 機能コードー覧表」の運転中変更欄を参照してください。

#### 基本画面の構成

機能コードデータ設定の画面は図 3.12 のような構成になっています。(この例ではデータ設定の場合) 各画面は階層化しており「メニュー」⇒「機能コード一覧」⇒「機能コードデータ変更画面」と推移し,目的の 機能コードを変更・確認ができます。



図 3.12 データ設定の画面構成遷移

#### 機能コードデータ画面例

機能コードー覧画面は機能コード、機能コード名称、操作案内を示しています。



機能コードデータ変更画面では機能コード,機能コード名称,変更前後のデータ,範囲,操作案内を表示します。 <初期画面>

F03 <mark>サイコウ Hz</mark>	機能コード番号、名称
*	*:工場出荷値から変更された機能コート
58.0Hz	データ
25. 0~500.0	変更可能範囲
∧∨ <b>→</b> データ ヘンコウ	操作案内

<変更中の画面>

F03 <del>サ</del>		
*	58.0Hz	変更前のデータ
	58.1Hz	変更中のデータ
25.0		
∧∨ <b>→</b> テ	ータ ヘンコウ	

図 3.13 機能コードデータ画面例

#### 基本キー操作

図3.14の機能コードデータ変更手順に従って、基本キー操作を説明します。

以下の例では、最高周波数の機能コード F03 のデータを 58.0Hz から 58.1Hz に変更します。

- 電源投入で自動的に運転モードに入ります。運転モードの状態で(Pre)キーを押すとプログラムモードに入り、メニューが表示されます。
- (2) ◇/ ◇キーで→を移動し、「1. データ セッテイ」を選択した後、 ○キーを押すと、機能コード一覧が 表示されます。
- (3) 〈〉/〉キーで目的の機能コードを選択し、 (3) キーを押します。(この例では、機能コード F03 を選択) 該当する機能コードのデータ変更画面が表示されます。
- (4) 機能コードのデータを(ペンシキーで変更します。機能コードデータ変更時にシフトキーを押すと、点滅している桁が移動し、その桁でデータ変更ができます(カーソル移動)。
- (5) ((())) キーで機能コードのデータを決定します。

データはインバータ内部のメモリに保存されます。表示は機能コード一覧に戻り,次の機能コードにカー ソルは移ります。(この例では, F04 になります。)

ここで、(Septendential September)キーを押すとデータ変更をキャンセルし、表示は機能コード一覧に戻り、カ ーソルは元の機能コード(F03)に戻ります。

(6) 機能コードー覧からメニューに戻るには、(\*\*\*)キーを押します。



#### 3.4.2 クイックセットアップで機能コードデータを設定する 「O. クイックセットアップ」

プログラムモードのメニューで「0. クイックセットアップ」を選択することで、あらかじめ指定した機能コー ドのみを表示し、機能コードデータを設定することができます。クイックセットアップとして指定された機能コ ードは、工場出荷状態での機能コードに対して「10. ユーザ セッテイ」で追加・削除ができます。クイックセ ットアップ対象の機能コードはインバータ本体で情報を持っていますので、タッチパネルを別のインバータに取 り付けた場合は、そのインバータの持っているクイックセットアップ対象の機能コードが対象となります。「8. データ コピー」によるコピー機能により、クイックセットアップ対象の機能コードもコピーできます。

機能コードHO3にて初期化すると、クイックセットアップ対象の機能コードも工場出荷時の状態に戻ります。

- 工場出荷時のクイックセットアップ対象の機能コードは、インバータ本体の取扱説明書「第5章 機能コー ド」を参照してください。
- 「0. クイックセットアップ」のメニューからのLCD画面遷移は、「1. データ セッテイ」と同様です。

#### 基本キー操作

基本キー操作は「1.データ セッテイ」と同様です。

#### 3.4.3 変更した機能コードを確認する 「2.データ確認」

プログラムモードのメニューで「2.データ カクニン」を選択することで、機能コードと機能コードデータを 同時に確認できます。また、工場出荷値から変更した機能コードには\*印が付きます。機能コードを選択して() キーを押すことで、表示された機能コードのデータを参照したり、変更することもできます。

「2. データ カクニン」のメニューからのLCD画面遷移は、「1. データ セッテイ」と同様です。ただし、 機能コード一覧画面は下記のようになります。



#### 図 3.15 機能コード一覧画面

#### 基本キー操作

基本キー操作は「1.データ セッテイ」と同様です。

#### 3.4.4 運転状態をモニタする 「3. 運転モニタ」

プログラムモードのメニューで「3. ウンテン モニタ」を選択することで、インバータの運転状態を確認する ことができます。メンテナンスや試運転などで運転状態を確認する時に利用します。 確認可能な情報は機種によって異なります。

表 3.12 運転モニタ項目一覧

操作案内 のページ 番号	項目	記号	内容	Eco	Multi	MEGA
	出力周波数	Fot1	出力周波数(滑り補償前)	0	0	0
1	出力周波数	Fot2	出力周波数(滑り補償後)	×	0	0
1	出力電流	lout	出力電流	0	0	0
	出力電圧	Vout	出力電圧	0	0	0
	トルク演算値	TRQ	モータ発生トルク	0	0	0
	設定周波数	Fref	設定周波数	0	0	0
	運転方向	FWD REV (空白)	正転中 逆転中 停止中	0	0	0
	電流制限	IL	電流制限中	0	0	0
2	不足電圧・電圧制限	LU VL	不足電圧中 電圧制限中	0	0	0
	トルク制限	TL	トルク制限中	×	0	0
	速度制限	SL RL	速度制限中 回転方向制限中	×	×	0
	選択中モータ	M1~M4	モータ1~4	×	×	0
	制御方式	VF DTV VF-SC VC-SL VC-PG	V/f 制御(滑り補償なし) ダイナミックトルクベクトル制御 V/f 制御(滑り補償あり) 速度センサレスベクトル制御 速度センサ付きベクトル制御	×	×	0
	モータ回転速度	SYN	表示値=出力周波数(Hz) × <mark>120</mark> P01	0	0	0
3	負荷回転速度	LOD	表示値 = (出力周波数 Hz) × (機能コード E50)	0	0	0
	ライン速度	LIN	表示値 = (出力周波数 Hz) × (機能コード E50)	0	0	0
	周速一定制御モニタ	LSC	周速一定制御時の周速を表示します。	×	×	0
	PID 指令值	SV	PID 指令値・PID フィードバック値は、機		0	0
4	PID フィードバック値	PV	HE 1 - FL 1 43 5 4 5 4 1 00 ) - う (FID 表 示係数 A および B) を用いて制御対象の物 理量(温度または圧力など)に換算して表 示します。 表示値=(PID 指令値または PID フィード バック値) × (表示係数 A-B) + B	0	0	0
	PID 出力値	MV	PID 出力値は,最高周波数(FO3)を100% として,%表示で表示します。	0	0	0
表 3.12 運転モニタ項目一覧(続き)

操作案内 のページ 番号	項目	記号	内容	Eco	Multi	MEGA
	トルク制限値A	TLA	駆動側トルク制限値A (モータ定格トルク換算)	×	0	0
5	トルク制限値B	TLB	制動側トルク制限値B (モータ定格トルク換算)	×	0	0
	トルクバイアス値	TRQB	未使用「」と表示されます。	×	×	×
	現在位置パルス	Р	位置制御用現在位置パルスを表示します。	×	0	0
6	停止目標位置パルス	E	位置制御用目標位置パルスを表示します。	×	0	0
0	位置偏差パルス	dP	位置制御用位置偏差パルスを表示します。	×	0	0
	位置制御状態	MODE	位置制御状態を表示します。	×	0	0
	モータ温度	NTC	モータ(VG モータ)の内蔵 NTC サーミス タによる検出温度	×	×	0
7	比率設定	Rati	比率設定値 100%で 1.00 倍を表示します。	×	×	0
	磁束指令値	FLUX	磁束指令値を表示します。	×	×	0
	SY同期時偏差	SY-d	SY同期時偏差を表示します。	×	×	0
	現在位置パルス4逓倍	P4	位置制御用現在位置パルスを表示します。	×	×	0
8	停止目標位置パルス 4 逓倍	E4	位置制御用目標位置パルスを表示します。	×	×	0
	位置偏差パルス4逓倍	dP4	位置制御用位置偏差パルスを表示します。	×	×	0
	位置制御状態	MODE	位置制御状態を表示します。	×	×	0

# 基本キー操作

- (1) 電源投入で自動的に運転モードに入ります。運転モードの状態で「PRG キーを押すとプログラムモードに入り、メニューが表示されます。
- (2) <>/ <>> (2) <>/ <>> (2) <>/ (2) <>/ (2)
- (3) (※)キーで運転モニタの画面(1ページ分毎)が表示されます。
- (4) (4) (4) (4) (-) </li
- (5) メニューに戻るには、 (\*\*\*\*\*キーを押します。

図3.16に「運転モニタ」のメニューからのLCD画面例および遷移を示します。



図 3.16 「運転モニタ」の遷移

# 3.4.5 入出力信号状態をチェックする 「4.1/0 チェック」

-

プログラムモードのメニューで「4.1/0 チェック」を選択することで、インバータのデジタル入出力信号とア ナログ入出力信号を確認することができます。メンテナンスや試運転などで運転状態を確認する時に利用します。 確認可能な1/0 情報は機種によって異なります。

操作案内 のページ 番号	項目	記号	内容	Eco	Multi	MEGA
1	制御回路端子の入力信号	FWD, REV, X1-X9, EN 注)	制御回路の端子台入力の ON/OFF 情報 (短絡で反転,開放で反転無し) 注)機種になって表示される端子の数	0	0	0
			は異なります。詳細はインハーダ 本体の取扱説明書を参照してくだ さい。			
		FWD, REV, X1-X9, XE XP	通信専用機能コード SO6 の入力情報 (1で反転、0で反転無し)			
2	2 通信経由の入力信号		注)機種によって表示される端子の数 は異なります。詳細はインバータ 本体の取扱説明書を参照してくだ さい。	0	0	0
		Y1-Y4,	出力信号情報			
3 出力信号		Y5,30ABC 注)	注)機種によって表示される端子の数 は異なります。詳細はインバータ 本体の取扱説明書を参照してくだ さい。	0	0	0
		Di	制御回路端子の入力信号 (端子台入力) の 16 進表現データ	0	0	0
4	入出力信号(1 6 進表現)	Do	出力信号の 16 進表現データ	0	0	0
		LNK	通信経由の入力信号の 16 進表現デー タ	0	0	0
		12	端子 12 の入力電圧	0	0	0
5	アナログ入力信号	C1	端子 01 の入力電流	0	0	0
		V2	端子 V2 の入力電圧	0	0	0
	고누리ゲッ수들리	FMA FMA FMP FMP	端子 FMA の出力電圧 端子 FMA の出力電流 端子 FMP の平均出力電圧 端子 FMP のパルスレート	0*	0	0*
6	アナロクロカ信号 注)アナログ出力の端子 記号、出力形態は機種	FMA FMA FMI	端子 FMA の出力電圧 端子 FMA の出力電流 端子 FMI の出力電流	0*	×	×
	により異なります。		端子 FM1 の出力電圧 端子 FM1 の出力電流 端子 FM2 の出力電圧 端子 FM2 の出力電圧	×	×	0*

表 3.13 1/0 チェック項目一覧

\* 同一機種でも仕様により画面が異なる場合があります。

表 3.13 I/0 チェック項目一覧(続き)

操作案内 のページ 番号	項目	記号	内容	Eco	Multi	MEGA
デジタル入力/出カイン タフェースカードの入 7 出力信号(オプション)	Di-o	オプションカードの入力信号の 16 進 表現データ	×	0	0	
	Do-o	オプションカードの出力信号の 16 進 表現データ	×	0	0	
	パルス列入力		端子 X7 に入力されたパルス列入力の パルス数信号	×	×	0
		P1	指令(基準)側 PG の AB 相パルス数	×	0	0
Q	PGパルス数	Z1	指令(基準)側 PG の Z 相パルス数	×	0	0
0		P2	帰還(追従)側 PG の AB 相パルス数	×	0	0
		Z2	帰還(追従)側 PG の Z 相パルス数	×	0	0
		32	端子 32(オプション)の入力電圧	×	×	0
0	アナログ入出力インタ	C2	端子 C2(オプション)の入力電流	×	×	0
9	フェースカートの人田 力信号(オプション)	AO	端子 A0(オプション)の出力電圧	×	×	0
		CS	端子 CS(オプション)の出力電流	×	×	0

# 基本キー操作

- (1) 電源投入で自動的に運転モードに入ります。運転モードの状態で (PRG)キーを押すとプログラムモードに入り、 メニューが表示されます。
- (2) ヘノンキーで→を移動し、「4. Ι/Ο チェック」を選択します。
- (3) (※) キーで 1/0 チェックの画面(1ページ分毎)が表示されます。
- (4) ヘノシキーで目的のモニタ項目のページを選択し,該当モニタ項目の 1/0 チェックデータを確認してください。
- (5) メニューに戻るには、(MESETキーを押します。

図3.17 に「4. I/O チェック」のメニューからのLCD画面例および遷移を示します。



<sup>▲</sup>ページ終の了: 前ページがあることを示します。

日本語

図 3.17 「1/0 チェック」の遷移

#### 【注1】 通信経由の入力信号

通信経由の入力信号は、RS-485 および各種通信オプションから指令される入力(通信専用機能コード S06 による)を「各信号の点灯/消灯による表示」と「16 進数表現」の2通りで表示します。内容的には制御回路端子の入力表示と同様ですが、入力として(XF)、(XR)、(RST)が追加になります。ただし、通信時制御信号の入力表示は、アクティブ ON (論理反転はしない信号)で表示されます。

## 【注2】16進数表現

各入出力端子の ON/OFF 状態を管理しやすくするために、16 進数の表現で示します。各入出力端子が下記のよう に割り付けられ4桁の16進数(0~F)に換算されます。

デジタル入力端子は、FWD と REV をビット 0 とビット 1 に、X1~X9 はビット 2~10 に、EN はビット 11 に割り付けています。各ビットには各入力端子が 0N の時に"1"、0FF の時に"0"がセットされます。例えば、端子 FWD とX1 が 0N、他はすべて 0FF のときは、データは 0005H となります。

デジタル出力端子は、Y1~Y4 をビット 0~3 に割り付け、出力端子 Y1~Y4-CMY 間を短絡した時に"1"、開放した 時に"0"がセットされます。リレー出力端子 Y5A/C の状態はビット 4 に割り付けられます。出力端子 Y5A-Y5C 間 が閉じた時に"1"がセットされます。接点出力端子 30A/B/C の状態はビット 8 に割り付けられます。出力端子 30A-30C 間が閉じた時に"1"、30B-30C 間が閉じた時に"0"がセットされます。例えば、端子 Y1 が 0N で Y2~Y4 が 0FF、Y5A-Y5C 間が開で 30A-30C 間が閉のときは、データは 0101H となります。

制御回路端子の表示と同様に,デジタル入力,デジタル出力インタフェースカード(オプション)の各入出力端子の 0N/0FF 状態表示も 16 進数の表現で示します。

デジタル入力インタフェースカード(オプション)のデジタル入力端子は,11~116 をビット 0~15 に割り付け ています。各ビットには各入力端子が ON の時に"1", OFF の時に"0"がセットされます。 デジタル出力インタフェースカード(オプション)のデジタル出力端子は,01~08 をビット 0~7 に割り付けて います。

表示	データ		最上	位桁											最下	位桁	
Ľ	ジト	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
入:	力信号	(RST)*	(XR)*	(XF)*	-	EN	X9	X8	X7	X6	X5	X4	Х3	X2	X1	REV	FWD
出	力信号	I	I	I	I	I	I	I	30A/B /C	I	I	I	Y5A/C	Y4	Y3	Y2	Y1
オプシ	DI	116	115	114	113	112	111	110	19	18	17	16	15	14	13	12	11
ション	DO	-	-	-	-	-	-	-	I	08	07	06	05	04	03	02	01
例	2進数	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	1
(入 力)	16 進数 データ								000	)5H							

表 3.14 16 進数表現

---:対応制御端子なし

\* (XF), (XR), (RST)は通信用です。上記「【注1】通信経由の入力信号」を参照してください。

# 3.4.6 メンテナンス情報を見る 「5. メンテナンス」

プログラムモードのメニューで「5.メンテナンス」を選択することで、インバータのメンテナンス時に必要な 情報を表示します。

確認可能なメンテナンス情報は機種によって異なります。

表 3.15 「メンテナンス情報」の表示項目一覧

操作 案内の ページ 番号	項目	記 号	表示内容	Eco	Multi	MEGA
	累積運転時間	TIME	インバータの主電源が投入された累積時間を表示 します。 65.535時間を超えるとりに戻り、再度積算します。	0	0	0
1	直流中間回路電圧	EDC	インバータ主回路の直流中間回路の電圧を表示し ます。	0	0	0
	内気温度最大値	TMPI	インバータ内気温度の1時間毎の最大値を表示し ます。	0	×	0
	冷却フィン最高温度	TMPF	冷却フィン温度の1時間毎の最大値を表示します。	0	0	0
	最大実効電流値	lmax	インバータ出力電流の1時間毎の最大値を実効値 で表示します。	0	0	0
	主回路コンデンサ容量	CAP	現在の主回路コンデンサの容量を,工場出荷時の容 量を100%として表示します。詳細はインバータ本 体の取扱説明書「第7章 保守点検」を参照してく ださい。	0	0	0
2	モータ運転累積時間	MTIM	モータの累積稼動時間を表示します。 65,535時間 (FRENIC-Eco/Multi),99,990時間 (FRENIC-MEGA) を超えると0に戻り,再度積算し ます。	0	0	0
	メンテナンス残り時間 モータ 1 (注1) REM	REMT1	次回メンテナンスを行うまでの時間を示します。 メンテナンス設定時間(H78)からモータ累積運転 時間を引いた値を示します。	×	×	0
	プリント基板の電解 コンデンサ累積運転 時間	TCAP	プリント基板上の電解コンデンサに電圧が印加されている時間の累積に対して、周囲温度条件による 係数を乗算した時間を累積運転時間として表示します。 ())内に寿命判断の目安となる時間を表示しま す。機種などにより寿命と判断する時間が異なる場 合があります。詳細はインバータ本体の取扱説明書 「第7章 保守点検」を参照してください。	0	0	0
3	冷却ファン累積運転 時間	TFAN	<ul> <li>冷却ファンが動作した時間の累積を表示します。冷却ファンのN-OFF 制御(機能コードHO6)が有効で</li> <li>冷却ファンが停止しているときはカウントされません。</li> <li>()内に寿命判断の目安となる時間を表示します。機種などにより寿命と判断する時間が異なる場合があります。詳細はインバータ本体の取扱説明書「第7章保守点検」を参照してください。</li> </ul>	0	0	0
4	起動回数 (注1)	NST	モータの運転回数(インバータの運転指令を ON に した回数)を積算し,表示します。65,535回を超 えると0に戻り,再度積算します。	0	0	0
	積算電力量 (注2)	Wh	積算電力量を表示します。1,000,000kWhを超える と0に戻ります。	0	0	0

操作 案内の ページ 番号	項目	記号	表示内容	Eco	Multi	MEGA
	積算電力データ <sup>(注 2)</sup>	PD	積算電力データは,積算電力量(kWh)×機能コ ードE51を表示します。(表示範囲:0.001~9999, 9999 以上のデータは 9999 に制限されます。)	0	0	0
4	メンテナンス残り起動回 数モータ 1 (注1)	REMN1	次回メンテナンスを行うまでの起動回数を示し ます。メンテナンス設定起動回数(H79)から起 動回数を引いた値を示します。 表示方法は「REMT1」と同じです。	×	×	0
	RS-485 エラー回数 (通信ポート1) <sup>(注 3)</sup>	NDD 1	RS-485(通信ポート 1) で発生したエラーの回数を 累積し表示します。	0	0	0
	RS-485 エラー内容 (通信ポート1) <sup>(注 3) (注 4)</sup>	INKKI	RS-485(通信ポート1)で発生した最新のエラーを コードで表示します。	0	0	0
5	RS-485 エラー回数 (通信ポート2) <sup>(注 3)</sup>	NPP2	RS-485(通信ポート 2)で発生したエラーの回数を 累積し表示します。	0	0	0
5	RS-485 エラー内容 (通信ポート2) <sup>(注 3) (注 4)</sup>	NINNZ.	RS-485(通信ポート 2)通信で発生した最新のエラ ーをコードで表示します。	0	0	0
	オプションエラー回数	NPO	オプション装着時のオプション通信で発生した エラーの回数を累積し表示します。	0	0	×
	オプションエラーコード	NIKU	オプション通信で発生した最新のエラーをコー ドで表示します。	0	0	×
6	インバータ ROM バージョン	MAIN	インバータの ROM バージョンを4桁で表示します。	0	0	0
0	6 タッチパネル ROM バージョン	KP	タッチパネルの ROM バージョンを4桁で表示しま す。	0	0	0
	オプション1 ROM バージョン	0P1	A-portに装着されたオプションのROMバージョン を4桁で表示します。	0	0	0
7	オプション2 ROM バージョン	0P2	B-portに装着されたオプションのROMバージョン を4桁で表示します。	×	×	0
	オプション3 ROM バージョン	0P3	C-portに装着されたオプションのROMバージョン を4桁で表示します。	×	×	0
	インバータ内気温度 (リアルタイム値)	TMPIM	インバータ内部の現在温度を表示します。	×	×	0
	冷却フィン温度 (リアルタイム値)	TMPFM	インバータ内の冷却フィンの現在温度を表示し ます。	×	×	0
8	主回路コンデンサ寿命 (経過時間)	CAPEH	主回路の電解コンデンサに電圧が印加されてい る時間を累積経過時間として表示します。主電源 OFF時は主回路の電解コンデンサの容量測定を行 い、経過時間を補正します。 表示方法は「TCAP」と同じです。	×	×	0
	主回路コンデンサ寿命 (残存時間)	CAPRH	主回路の電解コンデンサの寿命までの残存時間 を表示します。寿命時間(10年)から経過時間を 引き算した値です。 表示方法は「TCAP」と同じです。	×	×	0
9	モータ累積運転時間 1	MT I M1	第1モータ稼動時間の累積時間を表示します。 99,990時間を超えると0に戻り,積算を継続しま す。	×	×	0

操作 案内の ページ 番号	項目	記号	表示内容	Eco	Multi	MEGA
	モータ累積運転時間2	MTIM2	第2モータのモータ稼動時間の累積時間を表示し ます。表示方法は「MTIM1」と同じです。	×	×	0
9	モータ累積運転時間3	MT I M3	第3モータのモータ稼動時間の累積時間を表示し ます。表示方法は「MTIM1」と同じです。	×	×	0
	モータ累積運転時間4	MTIM4	第4モータのモータ稼動時間の累積時間を表示し ます。表示方法は「MTIM1」と同じです。	×	×	0
	起動回数	NST1	第1モータの運転回数(インバータの運転指令を ONにした回数)を積算し,表示します。 計測範囲:0~65,535回 65,535回を超えると0に戻り,積算を継続します。	×	×	0
10	モータ起動回数2	NST2	第2モータの運転回数(インパータの運転指令を ONにした回数)を積算し、表示します。 表示方法は「NST1」と同じです。	×	×	0
-	モータ起動回数3	NST3	第3モータの運転回数(インバータの運転指令を ON にした回数)を積算し、表示します。 表示方法は「NST1」と同じです。	×	×	0
	モータ起動回数4	NST4	第4モータの運転回数(インバータの運転指令を ON にした回数)を積算し,表示します。 表示方法は「NST1」と同じです。	×	×	0
	軽故障最新	LALM1	最新の発生した軽故障の内容をコードで示します。 コードの詳細は,インバータ本体の取扱説明書「6.1 保護機能」を参照してください。	×	×	0
11	軽故障1回前	LALM2	1回前に発生した軽故障の内容をコードで示しま す。コードの詳細は、インバータ本体の取扱説明書 「6.1 保護機能」を参照してください。	×	×	0
	軽故障2回前	LALM3	2回前に発生した軽故障の内容をコードで示しま す。コードの詳細は、インバータ本体の取扱説明書 「6.1 保護機能」を参照してください。	×	×	0
	軽故障3回前	LALM4	3回前に発生した軽故障の内容をコードで示しま す。コードの詳細は、インバータ本体の取扱説明書 「6.1 保護機能」を参照してください。	×	×	0
	オプション1 通信エラー回数		A-port に装着されたオプションで発生したエラー の回数を表示します。	×	×	0
	オプション1 通信エラーコード	NINOA	A-port に装着されたオプションで発生したエラー コードを表示します。	×	×	0
10	オプション2 通信エラー回数		B-port に装着されたオプションで発生したエラー の回数を表示します。	×	×	0
12	オプション2 通信エラーコード	MINUD	B-portに装着されたオプションで発生したエラー コードを表示します。	×	×	0
	オプション3 通信エラー回数	NDOO	C-port に装着されたオプションで発生したエラー の回数を表示します。	×	×	0
	オプション3 通信エラーコード	NKUU	C-port に装着されたオプションで発生したエラー コードを表示します。	×	×	0

(注1) モータ切換機能がある場合は、第1モータに限定した機能です。

 <sup>(</sup>注 2) 機能コード E51 を 70.000 とすることで積算電力量・積算電力データをリセットできます。
 (注 3) 通信ポート 1 はインバータ本体の RJ-45 コネクタを示し、通信ポート 2 は FRENIC-MEGA ではインバータ本体の端子台, FRENIC-Eco/Multiではオプションカードにある端子台を示します。

<sup>(</sup>注 4) エラー内容については、「RS-485 通信ユーザーズマニュアル」を参照してください。

## 基本キー操作

- (1) 電源投入で自動的に運転モードに入ります。運転モードの状態でPPiのキーを押すとプログラムモードに入り、メニューが表示されます。
- (2) (ヘノ(シキーで→を移動し,「5.メンテナンス」を選択します。
- (3) (いの)キーでメンテナンスの画面(1ページ分毎)が表示されます。
- (4) ペノシキーで目的のモニタ項目のページを選択し、該当モニタ項目のメンテナンスデータを確認してください。
- (5) メニューに戻るには、 (\*\*\*\*)キーを押します。

図3.18に「5.メンテナンス」のメニューからのLCD画面例および遷移を示します。



## 3.4.7 アラーム情報を見る 「6.アラーム情報」

プログラムモードのメニューで「6.アラーム ジョウホウ」を選択することで、過去4回どのような保護機能 が動作したかをアラームコードと連続発生回数で表示します。また、各アラームが発生した時点のインバータの 状態を示すアラーム情報の表示ができます。アラーム情報として確認できる情報は機種により異なります。

## 基本画面の構成

アラーム情報の確認画面は図3.19のような構成になっています。

各画面は階層化されており「メニュー」⇒「アラーム一覧画面」⇒「アラーム詳細画面」と推移します。「アラ ーム一覧画面」では発生したアラームと過去のアラームの履歴が確認でき、「アラーム詳細画面」では各アラー ムが発生した時点のインバータの状態を示すアラーム情報を確認することができます。



図 3.19 アラーム情報一覧の画面構成

## <u>アラーム一覧画面例</u>

アラームー覧画面は発生したアラームと過去のアラームの履歴を示しています。

記号	アラー	-ムコード	連続発生回	数
↓	¥			
0/1= -1= -2= -3= アラーム	OH2 Er2 OC1 OC2 ジョウ:	0 1 20 30 ホウ	最新要因, 前回要因, 前々回要因, 前々々回要因,	連続発生回数 連続発生回数 連続発生回数 連続発生回数

操作案内の ページ番号	項目	記号	内容	Eco	Multi	MEGA
	最新アラーム	0/1	アラームコードと連続発生回数	0	0	0
	前回アラーム	-1	アラームコードと連続発生回数	0	0	0
	前々回アラーム	-2	アラームコードと連続発生回数	0	0	0
	前々々回アラーム	-3	アラームコードと連続発生回数	0	0	0

アラーム詳細画面ではアラーム発生時の各種データを確認することができます。表 3.16 に「アラーム情報」の 詳細内容一覧を示します。

表 3.16 「アラーム情報」の表示内容一覧

操作案内の ページ番号	項目	記号	内容	Eco	Multi	MEGA
	出力周波数	Fot1	出力周波数(滑り補償前)	0	0	0
1	出力電流	lout	出力電流	0	0	0
I	出力電圧	Vout	出力電圧	0	0	0
	トルク演算値	TRQ	モータ発生トルク	0	0	0
	設定周波数	Fref	設定周波数	0	0	0
	運転方向	FWD REV (空白)	正転中 逆転中 停止中	0	0	0
	電流制限	IL	電流制限中	0	0	0
	不足電圧・電圧制限	LU VL	不足電圧中 電圧制限中	0	0	0
	トルク制限	TL		×	0	0
2	累積運転時間	TIME	インバータの主電源投入時間の累積を 表示します。65,535 時間を超えると 0 に戻り,再度積算します。	0	0	0
	速度制限	SL RL	速度制限中 回転方向制限中	×	×	0
	選択中モータ	M1~M4	モータ1~4	×	×	0
	制御方式	VF DTV VF-SC VC-SL VC-PG	V/f 制御(滑り補償なし) ダイナミックトルクベクトル制御 V/f 制御(滑り補償あり) 速度センサレスベクトル制御 速度センサ付きベクトル制御	×	×	0
	起動回数	NST	モータの運転回数(インパータの運転 指令をONにした回数)を積算し,表示 します。65,535回を超えると0に戻り, 再度積算します。	0	0	0
3	直流中間回路電圧	EDC	インバータ主回路の直流中間回路の電 圧を表示します。	0	0	0
	内気温度	TMPI	内気温度を表示します。	0	×	0
	冷却フィン温度	TMPF	冷却フィン温度を表示します。	0	0	0
4		TRM	<ul> <li>制御回路の端子台入力の ON/OFF 情報 FWD, REV, X1-X9, EN (短絡で反転,開放で反転無し)</li> <li>注)機種によって表示される端子の数 は異なります。詳細はインパータ 本体の取扱説明書を参照してくだ さい。</li> </ul>	0	0	0
5	通信経由の 入力信号	LNK	<ul> <li>通信専用機能コード S06 の入力情報</li> <li>FWD, REV, X1-X9, XF, XR, RST</li> <li>(1で反転, 0で反転無し)</li> <li>注) 機種によって表示される端子の数 は異なります。詳細はインバータ 本体の取扱説明書を参照してくだ さい。</li> </ul>	0	0	0

操作案内の ページ番号	項目	記号	内容	Eco	Multi	MEGA
6	出力信号	_	出力信号情報 Y1-Y4, Y5A/C, 30A/B/C 注)機種によって表示される端子の数 は異なります。詳細はインバータ本 体の取扱説明書を参照してくださ い。	0	0	0
	多重アラーム 1	3	同時に発生したアラームコード(第1) (アラームが発生しなかった場合, 「」表示)	0	0	0
7	多重アラーム2	2	同時に発生したアラームコード(第2) (アラームが発生しなかった場合、 「 」表示)	0	0	0
	アラームサブコード	SUB	アラーム要因の補助的コードです。	0	0	0
	検出速度	SPEED	速度検出値を表示します。	×	×	0

表 3.16 「アラーム情報」の表示内容一覧(続き)

注意 最初のアラーム発生時の各種情報が、前回アラーム(記号:-1)の詳細情報として保存され、最後のアラ ーム発生時の各種情報が最新アラーム(記号:0/1)の詳細情報として保持されます。

## <u>基本キー操作</u>

- 電源投入で自動的に運転モードに入ります。運転モードの状態で(PRo)キーを押すとプログラムモードに入り、機能選択メニューが表示されます。
- (2) (ヘノ(シ)キーで→を移動し、「6. アラーム ジョウホウ」を選択します。
- (3) (3) キーでアラーム一覧画面を表示します。アラーム一覧画面では、アラーム履歴として過去4回のアラーム情報(コードと連続発生回数)が表示されます。
- (4) (ヘ)/(シキーでカーソルを移動し,詳細情報を見たいアラームを選択します。
- (5) (か)キーでLEDモニタにアラームコードを表示し、該当アラームのアラーム発生時の各種詳細データの画面(1ページ分毎)が表示されます。
- (6) ペノンキーで目的のモニタ項目のページを選択し,該当モニタ項目のアラーム発生時の詳細データを確認してください。
- (7) アラーム一覧画面に戻るには、(\*\*\*\*)キーを押します。メニューに戻るには、さらに(\*\*\*)キーを押します。

図 3.20 に「6. アラーム ジョウホウ」のメニューからのLCD画面例および遷移を示します。



## 3.4.8 アラーム要因を参照する 「7. アラーム 要因」

プログラムモードのメニューで「7.アラーム ヨウイン」を選択することで,過去4回どのような保護機能が 動作したかをアラームコードと連続発生回数で表示します。また,各アラームの発生要因の表示ができます。

## 基本画面の構成

アラーム要因の確認画面は図3.21のような構成になっています。

各画面は階層化されており「メニュー」⇒「アラームー覧画面」⇒「アラーム要因詳細画面」と推移し、各アラ ームが発生した時点のアラーム要因を確認することができます。

アラーム一覧の画面はアラーム情報の画面と同様です。



図 3.21 アラーム要因一覧の画面構成

# 基本キー操作

- (1) 電源投入で自動的に運転モードに入ります。運転モードの状態で(Pro)キーを押すとプログラムモードに入り、機能選択メニューが表示されます。
- (2) ヘノーマ→を移動し、「7. アラーム ヨウイン」を選択します。
- (4) (ヘ)/(シキーでカーソルを移動し,詳細情報を見たいアラームを選択します。
- (5) (5) キーでLEDモニタにアラームコードを表示し、該当アラームのアラーム要因(発生原因など)を示した画面(複数ページのアラームもあります。)が表示されます。
- (6) (ヘノ(シ)キーで前のページ/次のページを表示できます。
- (7) アラームー覧画面に戻るには、(\*\*\*\*)キーを押します。メニューに戻るには、さらに(\*\*\*\*)キーを押します。

図 3.22 に「7.アラーム ヨウイン」のメニューからのLCD画面例および遷移を示します。





## 3.4.9 データをコピーする 「8. データコピー」

プログラムモードのメニューで「8. データ コピー」を選択することで、さまざまなコピー機能を使用することができます。

多機能タッチパネルには、インバータ3台分の機能コードデータを保存できるメモリを搭載しています。リード・ライト・ベリファイ機能などがあり、以下の使い方ができます。

- (a) すでに機能コードを設定してあるインバータから機能コードデータを読み出し,別のインバータに機能コ ードデータを書き込む。
- (b) インバータに書き込まれている機能コードをバックアップとしてタッチパネルにコピーしておく。
- (c) 多機能タッチパネルをデータ管理のマスターとして使用する。多機能タッチパネルに複数の機能コードデ ータを保存しておき、機械毎に適した機能コードをインバータに書き込む。



多機能タッチパネルのコピー機能詳細を下表に示します。

機能	機能の詳細
リード:データ読出し	インバータの機能コードデータを読み出し,タッチパネルのメモリに保存しま す。
ライト:データ書込み	タッチパネルのメモリに保存されているデータをインバータへ書き込みます。
ベリファイ:照合	タッチパネルのメモリに保存されているデータとインバータの機能コードデー タの照合(ベリファイ)を行います。
カクニン:データ確認	タッチパネルに保存されている3セットのデータの機種情報(形式)と、各機 能コード・データが確認できます。
プロテクト:データ保護	タッチパネルのメモリに保存されている機能コードデータを保護します。イン バータの機能コードデータを誤ってタッチパネルのメモリに上書き保存するこ とを防ぎます。

表 3.17 データコピー機能一覧

また、コピー機能の対象は、

・機能コードデータ

・クイックセットアップの対象機能コード

・デジタル周波数設定・PID 指令

です。

## 基本画面の構成

データコピー機能の画面は図 3.23のような構成になっています。

各画面は階層化されており「メニュー」から「コピー機能一覧画面」に入り、機能を選択します。機能を選択後 は「データ選択画面」へ推移し、操作の対象となるタッチパネル内のメモリおよびデータを選択し、それぞれの 機能画面へと推移し、各機能を実行します。





(1) リード (読出し) 操作



図 3.24 リードの遷移

リード ソウサチュウシ TPデータ 1 ← INV TPデータ 2 TPデータ 3 ■■■	読み出し実行中に <sup>(mg)</sup> キーまたは <sup>(wg)</sup> キーを押すと,実行中の操作はキャンセルされ,操作中止画面が表示されます <sup>(注意)</sup> 。キャンセルされると、タッチパネルのメモリに保存されているデータは全てクリアされます。
リード エラー TPデータ1←INV TPデータ2 TPデータ3 データコピー RESET→	読み出し実行中に、タッチパネルとインバータ間で通信エラー が発生すると、リード エラー画面が表示されます。

図 3.25 リード異常時の画面

(注意 操作中止画面, エラー画面, バージョン不一致画面が表示された場合は, (\*\*\*\*)キーを押して解除してくだ さい。RESET後は、コピー機能一覧に戻ります。



図 3.26 ライトの遷移

ライト ソウサチュウシ **TPデータ1** TPデータ2→INV TPデータ3 

データ書込み実行中に (PBGキー, (WBF)キーを押すと, 実行中の操作 はキャンセルされ, 操作中止画面が表示され(注意), データ書込 みは途中で強制終了されます。インバータの機能コードデータは 強制終了される以前のデータが不完全に変更された状態です。こ の状態でインバータを運転しないでください。改めてデータ書込 みや初期化を実施してください。

ライト エラー TPデータ1 TPデータ2→INV TPデータ3 データコピー RESET→

以下の条件では安全のため、エラーとします。

- タッチパネルのメモリに保存しているデータがない。(出荷時から一度もデータ読出しをしていない,またはデータ読出し中にキャンセルした場合)
- タッチパネルのメモリに保存しているデータに異常がある。
- インバータの機種が異なる。
- ・ インバータ運転中にデータ書込みが実行された。
- インバータがデータ保護中。
- 編集許可指令『WE-KP』が OFF。



タッチパネルに保存している機能コードとインバータの機能コー ドに互換性がありません(非標準、または互換性のないバージョ ンアップの可能性があります。弊社までお問い合わせください)。

#### 図 3.27 ライト異常時の画面

(注意 操作中止画面, エラー画面, バージョン不一致画面が表示された場合は, (\*\*\*)キーを押して解除してく ださい。RESET後は、コピー機能一覧に戻ります。





図 3.28 ベリファイの遷移



図 3.29 ベリファイ異常時の画面

(注意 操作中止画面, エラー画面, バージョン不一致画面が表示された場合は, <sup>™™</sup>キーを押して解除してく ださい。RESET後は、コピー機能一覧に戻ります。



図 3.30 データコピー確認操作の遷移

カクニン エラー TPデータ1 TPデータ2	タッチパネルに保存データがない場合は, カクニン になります。 <sup>(注意)</sup>	エラー画面
TPデータ3		
データコピー RESET→		

図 3.31 データコピー異常時の画面

「注意 カクニン エラー画面が表示された場合は, 
 『
 SER キーを押して解除してください。RESET 後は、コピー
 機能一覧に戻ります。

## (5) プロテクト (データ保護) 操作



- (注意) プロテクトを解除する場合は、上記と同様の操作で、 (\*\*\*)キーを5秒以上押すことで、元の解除状態(非 反転表示状態)に戻ります。
  - 図 3.32 プロテクト(データ保護)の遷移



コピー機能のリード(データ読出し)操作で、プロテクト中のデータ を選択してででキーを押した場合、プロテクト中によりコピー不可 を表す「Protected」を表示した後、通常形式表示に戻ります。

図 3.33 プロテクト中にデータ選択をした時の警告画面

3-49

#### 3.4.10 負荷率を測定する 「9. 負荷率測定」

プログラムモードのメニューで「9.フカリツ ソクテイ」を選択することで、出力電流最大値、出力電流平均 値、平均ブレーキ電力を測定することができます。測定モードは下表のとおりです。

測定モード	内容	
一定時間測定モード	測定時間を設定して一定時間測定するモード	
運転~停止測定モード	運転開始から運転停止までを測定するモード	

表 3.18 測定モード

(注意) 運転から停止までの間測定するモードの場合,運転中にこのモードに入ると,停止までの間測定します。 停止中にこのモードに入ると、以後の運転開始から停止までの間測定します。

#### (1) 一定時間測定モード

## 基本キー操作

- (1) 電源投入で自動的に運転モードに入ります。運転モードの状態で(PRG)キーを押すとプログラムモードに入り、メニューが表示されます。
- (2) (ヘノ(▽)キーで→を移動し、「9. フカリツ ソクテイ」を選択します。
- (3) (この)キーで測定モード選択画面を表示します。
- (4) 〈/ 〈シキーでカーソルを移動し、測定モード「ジカンセッテイ」を選択します。(この例では一定時間測定する場合)
- (6) ((()) キーで測定を開始します。
- (7) 操作終了後、メニューに戻るには、(\*\*\*\*)キーを押します。

図3.34 に「9. フカリツ ソクテイ」のメニューからのLCD画面例および遷移を示します。



図 3.34 一定時間測定モードの遷移

## (2) 運転~停止測定モード

## 基本キー操作

- (1) 電源投入で自動的に運転モードに入ります。運転モードの状態で(Pro)キーを押すとプログラムモードに入り、メニューが表示されます。
- (2) 〈∧∕ ◇ キーで → を移動し,「9. フカリツ ソクテイ」を選択します。
- (3) (※)キーで測定モード選択画面を表示します。
- (4) 
  (4) 
  (4) 
  (4) 
  (4) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-) 
  (-)
- (5) (いの)キーで測定モードを確定します。運転指令入力が必要です。詳細は下図を参照してください。
- (6) 操作終了後、メニューに戻るには、 (\*\*\*)キーを押します。
- 図 3.35 に「9. フカリツ ソクテイ」のメニューからのLCD画面例および遷移を示します。



ソクテイチュウ Imax = 0.00A Iave = 0.00A BPave = 0.0% フカリツソクテイ	<b>測定中</b> 運転停止するまで、測定を継続します。 測定中に感受キーを押すと、強制的に測定を完了させます。		
STOP PATE	・ <sup>®®®</sup> または <sup>®®</sup> キーで測定を完了させます。		
ソクテイカンリョウ Imax =289.4A Iave =182.2A BPave= 24.0% フカリツソクテイ	<b>測定終了</b> 出力電流最大値 出力電流平均値 平均ブレーキ消費電力	(測定が終了すると、測定 結果を表示します。)	

図 3.35 運転~停止測定モードの遷移

# (ヒント 運転モードへの復帰

負荷率測定中に「PRGキーで運転モードに移行します。(PRGF)キーで測定モード選択画面に移行します。) この場合、負荷率測定は継続されます。 再度、「9.フカリツ ソクテイ」をメニューで選択し、測定モード選択画面で、測定中か確認でき ます。 測定完了時は、測定モード選択画面で「SRGF)キーを押して測定結果を確認できます。

測定中の画面





インバータの電源を OFF すると、測定結果はクリアされますので、ご注意ください。

#### 3.4.11 クイックセットアップ対象の機能コードを変更する 「10.ユーザ設定」

プログラムモードのメニューで「10. ユーザ セッテイ」を選択し、クイックセットアップ対象機能コードを変 更することができます。

#### 基本キー操作

- 電源投入で自動的に運転モードに入ります。運転モードの状態で<sup>(Pro)</sup>キーを押すとプログラムモードに入り、 メニューが表示されます。
- (2) (ヘ)/(▽)キーで→を移動し、「10. ユーザ セッテイ」を選択します。
- (3) (か)キーで機能コード一覧を表示します。
- (4) (ヘノーシーでカーソルを移動し, 追加・削除する機能コードを選択します。
- (5) (※) キーで追加・削除します。
- (6) 操作終了後、メニューに戻るには、(\*\*\*\*)キーを押します。
- 図3.36に「10.ユーザ セッテイ」のメニューからのLCD画面例および遷移を示します。



図 3.36 クイックセットアップ対象の変更遷移

#### 3.4.12 通信のデバッグを行う 「11.通信デバッグ」

プログラムモードのメニューで「11. ツウシン デバッグ」を選択し、通信専用の機能コード(S, M, W, X, Zコード)のデータを確認し、上位系のプログラムのデバッグに利用できます。

## 基本キー操作

- (1) 電源投入で自動的に運転モードに入ります。運転モードの状態で(PRG)キーを押すとプログラムモードに入り、メニューが表示されます。
- (2) 〈∧∕ ◇ キーで → を移動し,「11. ツウシン デバッグ」を選択します。
- (3) (まの)キーで通信専用機能コード一覧を表示します。
- (4) (ヘノシキーでカーソルを移動し,機能コードを選択します。
- (5) (ま)キーで変更・確認します。
- (6) 操作終了後、メニューに戻るには、(\*\*\*\*)キーを押します。
- 図 3.37 に「11. ツウシン デバッグ」のメニューからのLCD画面例および遷移を示します。



図 3.37 通信関係デバッグ遷移

## 3.5 アラームモード

保護機能が動作しアラームが発生すると、自動的にアラームモードに移行し、発生したアラームコードを LED モニタに表示し、LCD 表示部に以下のように表示します。



図 3.38 多重アラーム発生なしの場合

同時に複数のアラーム(多重アラーム)が発生すると、以下のような表示となり、同時発生のアラームを確認す ることができます。



多重アラームが発生している場合,最新要因は「0=アラームコード」ではなく,「1=アラームコード」と表示されます。

#### 図 3.39 多重アラーム発生ありの場合

また、過去のアラーム履歴の確認も可能です。

現在のアラームに加えて,過去3回分のアラーム,多重アラームがある場合はその多重アラームも表示すること ができます。現在のアラームが表示されている状態で<<p>ペキーまたは
シキーを押すと,過去・多重のアラームが表示されます。



図 3.40 アラーム履歴の表示切換

アラーム発生時の運転情報の表示【注1】

アラームコードが表示されている状態でした・アラーム発生時の出力周波数や出力電流など各種運転情報を確認できます。各種運転情報の内容は、プログラムモードの「6.アラーム情報」の内容と同一です。

過去のアラーム画面からも、過去のアラーム発生時の運転情報を確認することが出来ます。 運転情報を表示しているときに<sup>PRG</sup>キー, <sup>(ESEI</sup>キーを押すとアラームコードの表示に戻ります。

■ プログラムモードへの移行【注2】

アラームの原因調査やアラーム要因解除のために機能コードを変更する場合は、アラームが表示されている状態で(PRG)キーを押してください。プログラムモードに移行し、機能コードデータの修正はじめ、各種機能を使用することができます。

■ アラームの解除【注3】

アラーム要因を取り除き、(\*\*\*\*)キーを押すとアラームを解除し、運転モードに戻ります。



図 3.41 「アラームモード」の遷移
### 3.6 その他の注意事項

多機能タッチパネルの言語選択,コントラスト調整は機能コードで設定します(3.6.1項,3.6.2項参照)。

また,タッチパネルには,多機能タッチパネル(TP-G1-□□)以外に遠隔タッチパネルがあります。以下の点で動 作が異なりますのでご注意ください(3.6.3項~3.6.6項参照)。

#### 3.6.1 言語選択(機能コードE46)

多機能タッチパネルの表示言語の設定ができます。

E46 データ	表示	言語
L40 ) — y	TP-G1-J1	TP-G1-C1
0	日本語	中国語
1	英語	英語
2	ドイツ語	日本語
3	フランス語	韓国語
4	スペイン語	_
5	イタリア語	_

## 3.6.2 コントラスト調整(機能コードE47)

多機能タッチパネルの LCD のコントラスト調整ができます。

E47 データ	0, 1, 2,		8	, 9, 10
0	淡い	•		濃い

## 3.6.3 運転・操作(機能コードF02)

遠隔タッチパネルの運転操作のキーは、<sup>RUN</sup>/<sup>SOOP</sup>キーです。多機能タッチパネルは<sup>RUN</sup>/<sup>SOOP</sup>キーですので、 回転方向指令が必要ありません。

F02 データ	運転指令の設定手段
0:タッチパネル運転	タッチパネルのFWD/FEV/STOPキーにより運転・停止ができます。
1: 外部信号	端子 FWD, REV で運転・停止が可能です。
2:タッチパネル運転(正転)	タッチパネルの <sup>PMD</sup> /® <sup>DD</sup> キーにより運転・停止ができます。ただし、正転 運転のみで、逆転運転はできません。
3:タッチパネル運転(逆転)	タッチパネルの <sup>(NEV)</sup> / <sup>STOP</sup> キーにより運転・停止ができます。ただし、逆転 運転のみで、正転運転はできません。

## 3.6.4 ジョギング (寸動) 運転

ジョギング運転を可能な状態にすると、遠隔タッチパネルはLED モニタに しっし 表示します。多機能タッチパネ ルでは、インジケータ表示部の「JOG インジケータ」が点灯しますが、LED モニタに しっし 表示はしません。

□□ 詳細は「3.3.4 ジョギング(寸動)運転」を参照してください。

#### 3.6.5 リモート/ローカル運転

詳細は「3.3.5 リモート/ローカル切換」を参照してください。

#### 3.6.6 オートチューニング

インバータの性能を正しく発揮させるには、オートチューニングが必要です。オートチューニングは停止のまま 行なうチューニング、回転して行なうチューニング、制御方式により必要とされるチューニングなどがあります。 チューニングの選択は、インバータ本体の取扱説明書を参照して正しく選択してください。

#### チューニング実行手順

機能コード P04 に 1,2 または 3 を設定し, 🔛 キーを押してください。



図 3.42 オートチューニング画面遷移

- (注1) 工場出荷設定値では、タッチパネルの「MDキーによる正転運転です。逆転運転にする場合は、機能コード F02 を 変更してください。
- (注2)・モータを回転するチューニング(P04=2)の場合、ベース周波数の 50%程度まで加速し、チューニング開始、 測定終了後減速停止します。
  - モータを回転するチューニング(P04=3)の場合、ベース周波数の 50%程度まで加速し、チューニング開始、 減速停止します。更にもう一度同じ運転を繰り返しチューニングを行ないます。自動的に再加速しますので、 ご注意ください。
     チューニングの時間は P04 で選択したチューニング方法、およびモータ容量によって異なります(モータ容量 によっては最大数分かかる場合もあります)。詳細はインバータ本体の取扱説明書「4.1 試運転」を参照して ください。

## 3.7 主回路コンデンサの容量測定

インバータに使用されている部品には、寿命を持った部品があります。その寿命は周囲の環境や使用条件によっ て異なります。

寿命を判断するインバータ機能のひとつとして、主回路コンデンサの容量を測定し、工場出荷時のコンデンサ容 量と比べ, 85%以下になると寿命と判断し、警報を出すことができます。主回路コンデンサの容量は電源 0FF 時 に主回路コンデンサの放電時間を測定し「主回路コンデンサの容量」を計算します。

主回路コンデンサの放電時間は、インバータのオプションの有無や、デジタル入出力信号の ON/OFF 状態などの インバータ内部の負荷状態により、大きく左右されます。比較対照の初期値の負荷条件と異なる場合は測定の精 度が得られないので、測定を実施しません。詳細はインバータ本体の取扱説明書「第7章 保守点検」を参照し てください。

インバータは通常出荷時,遠隔タッチパネルと組み合わせて主回路コンデンサの放電時間を測定し,基準値とし ています。多機能タッチパネルと組み合わせて寿命予報を使用する場合は,以下の手順で基準値を再設定してく ださい。

- 測定手順 ----

- 1)機能コード H98 の主回路コンデンサ寿命判断基準をユーザ設定(bit3=1)に変更してください。
- インバータを停止状態にしてください。
- 3) インバータを通常稼動状態での電源遮断時と同じ状態にしてください。
- 4) 機能コード H42 (主回路コンデンサ測定値), H47 (主回路コンデンサ初期値) をそれぞれ"0000"に設定して ください。
- 5) インバータの電源を遮断してください(以下の動作は、電源遮断時に自動的に実行されます)。 主回路コンデンサの放電時間を測定し、機能コードH47(主回路コンデンサ初期値)に保存します。 主回路コンデンサ測定条件を自動的に検知し、条件を保存します。 測定中のLEDの表示は、「...」と表示します。
- 6) インバータの電源を再投入してください。 機能コード H42(主回路コンデンサ測定値), H47(主回路コンデンサ初期値)が適正か確認してください。 プログラムモードのメニュー番号5「メンテナンス情報」に移行して、主回路コンデンサの静電容量の比率 (%)が100%になっていることを確認します。

(注意) 測定に失敗した時は,機能コードH42(主回路コンデンサ測定値),H47(主回路コンデンサ初期値)に それぞれ"0001"が設定されます。失敗の要因をなくし再測定してください。

以後の電源遮断時には、上記の条件に合致した場合は、自動的に主回路コンデンサの放電時間を測定します。定 期的にプログラムモードのメニュー番号5「メンテナンス情報」に移行し、主回路コンデンサの静電容量の比率 (%)を確認してください。

注意 上記の測定方法では測定誤差が大きくなる場合があります。このモードで寿命予報が出た場合は、 機能コード H98 の主回路コンデンサ寿命判断基準を工場出荷値に戻し、工場出荷時の条件で再測定 して、確認してください。

<sup>(</sup>注意 多機能タッチパネルの場合は工場出荷状態と異なるため、自動測定は行いません。)

## 第4章 仕様

## 4.1 一般仕様

表 4.1 一般仕様

項目	仕様	備考
保護構造	盤面側: IP40, 裏面(取付け面)側: IP20	
使用場所	屋内、腐食性ガス、引火性ガス、塵埃・直射日光のないこと	
周囲温度	-10~+50°C	
周囲湿度	5~95%RH (結露のないこと)	
標高	1000m 以下	
振動	3mm(振幅):2~9Hz 未満,9.8m/s²:9~20Hz 未満 2m/s²:20~55Hz 未満,1m/s²:55~200Hz 未満	
保存周囲温度	-25~+65°C	
保存周囲湿度	5~95%RH (結露のないこと)	
外形寸法	下図参照	
質量	129g	

■ 外形寸法図







(単位:mm)

## 4.2 通信仕様

え 4.2 ハートウェア仕様		
項目	仕様	備考
接続台数	インバータ1台に対し多機能タッチパネル1台	
接続ケーブル	EIA568 に準拠したケーブル (10BASE-T/100BASE-TX 用ストレート)	遠隔操作用延長ケーブル (CB-5S)など
最大通信距離	20m	
接続端子	RJ-45 コネクタ	表 4.3 参照

表 4.2 ハードウェア仕様

## 表 4.3 コネクタピン配列

ピン番号	信号名	内容	備考
1, 8	Vcc	多機能タッチパネル用電源(5V)	
2, 7	GND	基準電位(GND)	
3, 6	NC	空き端子	
4	DX-	RS-485 通信データ(一)	
5	DX+	RS-485 通信データ(+)	
			多機能タッチパネル裏面

(注意 インバータ本体 RS-485 通信ポート側の終端抵抗用 SW3 は 0FF にしてください。

## 4.3 伝送仕様

## 表 4.4 伝送仕様

項目	仕様	備考
局番	指定不要	RS-485 通信設定用の機能コード
通信プロトコル	Modbus-RTU	y01 から y10 までの設定は無視されますので,設定の必要はありま
同期方式	調歩同期	せん。
通信方式	半二重方式	
通信速度	19200bps	
パリティ	偶数パリティ	
ストップビット長	1ビット	
エラーチェック方式	CRC-16	

## MEMO

# English Version

Thank you for purchasing our multi-function keypad "TP-G1-J1."

By mounting the multi-function keypad directly on your inverter as an attached keypad or connecting them together using an optional remote operation extension cable (CB-5S, CB-3S, or CB-1S), you can operate the inverter locally or remotely. In either mode, you can, in the same way as with a built-in keypad, run and stop the motor, monitor the running status, and set the function codes. In addition, you can perform "data copying" (Reading function code data from an inverter, writing it into another inverter, and verifying it).

This manual describes the multi-function keypad. It is edited to be commonly used for the FRENIC-Eco, FRENIC-Multi and FRENIC-MEGA series of inverters. Note that the monitor items, accessible function codes, and other support ranges are inverter-model dependent.

Before using the multi-function keypad, read through this manual in conjunction with the inverter's instruction manual and familiarize yourself with its proper use. Improper use may prevent normal operation or cause a failure or reduced life of the inverter.

## 

- This product is designed to remotely control our inverters. Read through this instruction manual and be familiar with the handling procedure for correct use.
- · Improper handling blocks correct operation or causes a short life or failure.
- Deliver this manual to the end user of the product. Keep this manual in a safe place until the multi-function keypad is discarded.

## Safety precautions

Read this manual thoroughly before proceeding with installation, connections (wiring), operation, or maintenance and inspection. Ensure you have sound knowledge of the device and familiarize yourself with all safety information and precautions before proceeding to operate the inverter.

Safety precautions are classified into the following two categories in this manual.

Failure to heed the information indicated by this symbol may lead to dangerous conditions, possibly resulting in death or serious bodily injuries.
Failure to heed the information indicated by this symbol may lead to dangerous conditions, possibly resulting in minor or light bodily injuries and/or substantial property damage.

Failure to heed the information contained under the CAUTION title can also result in serious consequences. These safety precautions are of utmost importance and must be observed at all times.

## Operation

## 

Be sure to install the terminal cover or the front cover before turning the power ON. Do not remove the covers while power is applied.

## Otherwise electric shock could occur.

- Do not operate switches/buttons with wet hands. Doing so could cause electric shock.
- If the retry function has been selected, the inverter may automatically restart and drive the motor depending on the cause of tripping.

(Design the machinery or equipment so that human safety is ensured after restarting.)

• If the stall prevention function has been selected, the inverter may operate at an acceleration/ deceleration time or frequency different from the set ones. Design the machine so that safety is ensured even in such cases.

## Otherwise an accident could occur.

- The <sup>(m)</sup> key on the keypad is enabled only when "RUN/STOP keys on keypad" is selected with function code F02. Prepare an emergency stop switch separately. If you disable the STOP key priority function and enable operation by external commands, the inverter cannot be emergency-stopped by the <sup>(m)</sup> key on the keypad.
- If an alarm state is reset with the run signal being turned ON, a sudden start will occur. Ensure that the run signal is turned OFF beforehand.

#### Otherwise an accident could occur.

- If the "Restart mode after momentary power failure" is set to "Continue to run or Restart" (Function code F14 = 3, 4, or 5), then the inverter automatically restarts running the motor when the power is recovered.
   (Design the machinery or equipment so that human safety is ensured after restarting.)
- If you set the function codes wrongly or without completely understanding the related instruction manuals and user's manual, the motor may rotate with a torque or at a speed not permitted for the machine.

### An accident or injuries could occur.

• Never touch the inverter terminals while the power is applied to the inverter even if the inverter stops. **Doing so could cause electric shock.** 

## Wiring

## 

· Do not operate the switches/buttons with wet hands.

## Doing so could cause electric shock.

Before opening the cover of the inverter to mount the multi-functional keypad, turn OFF the inverter and
wait for at least five minutes for models of 22 kW or below, or ten minutes for models of 30 kW or above.
Further, make sure that the LED monitor is turned OFF, the charger indicator is OFF, and the DC link
bus voltage between the terminals P (+) and N (-) has dropped below the safe voltage level (+25 VDC),
using a circuit tester or another appropriate instrument.

## Otherwise electric shock could occur.

 In general, sheaths of the control signal wires are not specifically designed to withstand a high voltage (i.e., reinforced insulation is not applied). Therefore, if a control signal wire comes into direct contact with a live conductor of the main circuit, the insulation of the sheath might break down, which would expose the signal wire to a high voltage of the main circuit. Make sure that the control signal wires will not come into contact with live conductors of the main circuit.

#### Otherwise, an accident or electric shock could occur.

## Disposal

· For disposal, treat the multi-function keypad as industrial waste. Otherwise injuries could occur.

## Others

## WARNING

· Never attempt to modify the multi-function keypad or inverter.

Doing so could cause electric shock or injuries.

## **GENERAL PRECAUTIONS**

Drawings in this manual may be illustrated without covers or safety shields for explanation of detail parts. Restore the covers and shields in the original state and observe the instructions given in the manual before starting operation.

## How this manual is organized

This manual is made up of chapters 1 through 4.

## Chapter 1 BEFORE USING THE MULTI-FUNCTION KEYPAD

This chapter describes the points to check upon delivery and lists the inverters the multi-function keypad is designed to interface with.

#### Chapter 2 INSTALLATION AND INTERCONNECTION

This chapter describes how to install the multi-function keypad and how to interconnect it with an inverter.

#### Chapter 3 OPERATION USING THE MULTI-FUNCTION KEYPAD

This chapter describes the operation of the inverter using the multi-function keypad. More specifically, this chapter gives an overview of the inverter's three operation modes (Running, Programming, and Alarm modes) and describes how to run and stop the inverter/motor, set function code data, monitor running status, view maintenance information and alarm data, and perform data copying.

## Chapter 4 SPECIFICATIONS

This chapter lists the general specifications such as operating environments, communication specifications and transmission specifications.

#### Icons

The following icons are used throughout this manual.



- This icon indicates information which, if not heeded, can result in the product not operating to full efficiency, as well as information concerning incorrect operations and settings which can result in accidents.
- m This icon indicates a reference to more detailed information

## **Table of Contents**

Preface ■ Safety pre How this ma	icautionsi nual is organizedii
Chapter 1 I	BEFORE USING THE MULTI-FUNCTION KEYPAD
1.1 Acce 1.2 Inver Interf	ptance Inspection
Chapter 2 I 2.1 Acce	NSTALLATION AND INTERCONNECTION 2-1 ssories and Parts Required for
2.2 Mour 2.2.1 2.2.2	connection       2-1         ting the Multi-function Keypad.       2-2         Three ways of installation/use       2-2         Mounting the multi-function keypad.       2-3
Chapter 3	OPERATION USING THE MULTI-FUNCTION
3.1 LED 3.2 Over 3.3 Runn 3.3.1	Violation CCD Monitor, and Keys
3.3.2 3.3.3	Running or stopping the motor
3.3.4	Jogging (inching) the motor (Available in FRENIC-Multi/MEGA)
3.3.5	Switching between the remote and local modes (Available in FRENIC-Eco/MEGA) 3-14
3.3.6	Monitoring light alarms (Available only in FRENIC-MEGA)
3.4 Progi 3.4 1	ramming Mode
3.4.2	Menu #1 "Data Setting"
3.4.3	Quick Setup Menu #0 "Quick Setup" 3-21 Checking changed function codes
3.4.4	Menu #2 "Data Checking"
3.4.5	Menu #3 "Drive Monitoring"
3.4.6	Menu #4 "I/O Checking" 3-26 Reading maintenance information
3.4.7	Menu #5 "Maintenance Information" 3-31 Reading alarm information
3.4.8	Menu #6 "Alarm Information"
3.4.9	Data copying Menu #8 "Data Copying" 3-44
3.4.10	Measuring load factor Menu #9 "Load Factor Measurement" 3-54
3.4.11	Changing function codes covered by Quick setup Menu #10 "User Setting" 3-58
3.4.12	Performing communication debugging Menu #11 "Communication Debugging"3-59
3.5 Alarn	n Mode
3.6 Othe	r Notes
3.6.1	Language selection (Function code E46) 3-63
3.0.2	Contrast aujustment (Function code E47)3-63
3.0.3	Jording operation 2.63
3.6.5	Remote and local modes
3.6.6	Auto-tuning
3.7 Meas capa	suring the capacitance of DC link bus citor

- 4.1
   General Specifications
   4-1

   4.2
   Communication Specifications
   4-2

## Chapter 1 BEFORE USING THE MULTI-FUNCTION KEYPAD

## 1.1 Acceptance Inspection

Unpack the package and check the following:

- (1) The package contains a multi-function keypad and its instruction manual (this book).
- (2) There have been no problems during transportation. In particular, no parts are damaged or have fallen out of place nor are there any dents on the body.
- (3) The model name "TP-G1-J1" is inscribed on the back of the multi-function keypad as shown in Figure 1.1.

The multi-function keypad is available in two models--"TP-G1-J1" and "TP-G1-C1." The languages supported by those models differ as listed below.

Model	Language
TP-G1-J1	English, Japanese, German, French, Spanish, and Italian
TP-G1-C1	Chinese, Japanese, English, and Korean

If you suspect the product is not working properly or if you have any questions about your product, contact your Fuji Electric representative.

Model name



## 1.2 Inverters with which the Multi-function Keypad Interfaces

The multi-function keypad "TP-G1-J1" interfaces with the following Fuji inverters:

FRENIC series	Type of inverter *	Remarks
FRENIC-Eco	FRN000F1S-00 FRN000F1E-00 FRN000F1H-00	The multi-function keypad is fully supported by inverters with a ROM version F1S10300 or later. (You can check the inverter's ROM version with [MAIN] in Menu #5 "Maintenance Information" in Programming Mode.) There are restrictions on the support for the multi-function keypad by inverters with a ROM version earlier than F1S10300. For details, consult your Fuji Electric representative.
FRENIC-Multi	FRNDDDE1S-DD FRNDDDE1E-DD	The multi-function keypad is fully supported by all of the FRENIC-Multi series of inverters.
FRENIC-MEGA	FRNDDDG1S-DD FRNDDDG1E-DD FRNDDDG1H-DD	The multi-function keypad is fully supported by inverters with a ROM version G1S10500 or later. (You can check the inverter's ROM version with [MAIN] in Menu #5 "Maintenance Information" in Programming Mode.) There are restrictions on the support for the multi-function keypad by inverters with a ROM version earlier than G1S10500. For details, consult your Fuji Electric representative.

\* A box (□) replaces an alphanumeric character. For the details of the inverter type identification, refer to the inverter's instruction manual, Chapter 1, Section 1.1 "Acceptance Inspection."

## Chapter 2 INSTALLATION AND INTERCONNECTION

## 2.1 Accessories and Parts Required for Interconnection

To mount the multi-function keypad on the panel or any other device instead of an inverter, you need the following accessories and parts.

Accessories/Parts	Type or Specifications	Remarks
Remote operation extension cable (Note 1)	CB-5S, CB-3S, or CB-1S	Choice of three lengths: 5 m, 3 m, and 1 m
Screws (for mounting the multi-function keypad)	M3 × 🗖 (Note 2)	Two screws required (to be provided by the customer)

(Note 1) Alternatively, you can use an off-the-shelf 10BASE-T/100BASE-TX LAN cable (straight type) that meets the ANSI/TIA/EIA-568A Category 5 standard (maximum length: 20 m).

(Note 2) Use the screws of the length just right for the panel. (See Figure 2.6.)

## 2.2 Mounting the Multi-function Keypad

## 2.2.1 Three ways of installation/use

You can install and/or use the multi-function keypad in one of the following three ways:

- Mounting it directly on the inverter (see Figure 2.1). (For FRENIC-Eco/MEGA only.)
- Mounting it on the panel (see Figure 2.2).
- Using it remotely in your hand (see Figure 2.3).



Figure 2.1 Mounting the Multi-function Keypad Directly on the Inverter



## 2.2.2 Mounting the multi-function keypad

After completion of interconnection, mount the multi-function keypad using the following procedure. Be sure to turn the inverter power OFF beforehand.

## Mounting the multi-function keypad directly on the inverter (For FRENIC-Eco/MEGA only)

(1) If a remote keypad is mounted on the inverter, remove it by pulling it toward you with the hook held down as directed by the arrows in Figure 2.4.



Figure 2.4 Removing the Remote Keypad

(2) Put the multi-function keypad in the original slot while engaging its bottom latches with the holes (as shown below), and push it onto the case of the inverter (arrow ②) while holding it downward (against the terminal block cover) (arrow ①).



Figure 2.5 Mounting the Multi-function Keypad

#### Mounting the multi-function keypad on the panel

(1) Cut the panel out for a single square area and perforate two screw holes on the panel wall as shown in Figure 2.6.



Figure 2.6 Location of Screw Holes and Dimension of Panel Cutout

(2) Mount the multi-function keypad on the panel wall with 2 screws as shown below. (Recommended tightening torque: 0.7 N•m)



Figure 2.7 Mounting the Multi-function Keypad

(3) If a remote keypad is mounted on the inverter, remove it (see Figure 2.4) and, using a remote operation extension cable or a LAN cable, interconnect the multi-function keypad and the inverter (insert one end of the cable into the RS-485 port with RJ-45 connector on the multi-function keypad and the other end into that on the inverter) (See Figure 2.8).



Figure 2.8 Connecting the Multi-function Keypad to the Inverter with Remote Operation Extension Cable or an Off-the-shelf LAN Cable

#### ■ Using the multi-function keypad remotely in hand

Follow step (3) of "Mounting the multi-function keypad on the panel" above.

## Chapter 3 OPERATION USING THE MULTI-FUNCTION KEYPAD

## 3.1 LED Monitor, LCD Monitor, and Keys

The keypad allows you to start and stop the motor, view various data including maintenance information and alarm information, set function codes, monitor I/O signal status, copy data, and calculate the load factor.



Table 3.1	Overview of Keypad Functions
-----------	------------------------------

Item	Monitors and Keys	Functions				
Monitors	60.00	Five-digit, 7-segment LED m operation modes: In Running mode: In Programming mode: In Alarm mode:	nonitor which displays the following according to the Running status information (e.g., output frequency, current, and voltage) same as above Alarm code, which identifies the cause of alarm if the protective function is activated.			
	RUN FWD PRG=>PRG MENU F/D=>LED SHIFT	<ul> <li>In Running mode:</li> <li>In Programming mode:</li> <li>In Alarm mode:</li> </ul>	Running status information Menus, function codes and their data Alarm code, which identifies the cause of an alarm if the protective function is activated.			
	Indicator indexes	n Running mode, these indexes show the unit of the number displayed on the 7-segment LED monitor and the running status information on the LCD monitor. For details, see the next page.				
	PRG	Switches the operation mode	es of the inverter.			
	SHIFT	Shifts the cursor to the right	when entering a number.			
	RESET	Pressing this key after removing the cause of an alarm will switch the inverter to Running mode. This key is used to reset settings or screen transition.				
Program-	$\bigcirc$ and $\bigcirc$	UP and DOWN keys. These keys are used to select the setting items or change the function code data.				
ming keys	(UNC) DATA	<ul> <li>Function/Data key. This key switches the operation mode as follows:</li> <li>In Running mode: Pressing this key switches the information to be displayed concerning the status of the inverter (of frequency (Hz), output current (A), output voltage etc.).</li> <li>In Programming mode: Pressing this key displays the function code and establishes the newly entered data.</li> <li>In Alarm mode: Pressing this key displays the details of the probindicated by the alarm code that has appeared or LED monitor.</li> </ul>				
	FWD	Starts running the motor (forw	vard rotation).			
	REV	Starts running the motor (reve	erse rotation).			
Operation keys	STOP	Stops the motor.				
	REM	Holding down this key for more than 1 second toggles between local and remote modes.				
LED lamp	(FWD) LED (REV)	Lights while a run command i	is supplied to the inverter.			

Indicator Index details

Туре	Item	Description (information, condition, status)			
	Hz	Output frequency and frequency command			
	А	Output current			
	V	Output voltage			
	%	Calculated torque, load factor, and speed			
	r/min	Preset and actual motor speeds and preset and actual load shaft speeds			
Unit of number on LED monitor	m/min	Preset and actual line speeds			
	kW	Input power and motor output			
	X10	Data exceeding 99,999			
	min	Preset and actual constant feeding rate times			
	sec	Timer			
	PID	PID process value			
	FWD	Running in forward rotation			
Running status	REV	Running in reverse rotation			
	STOP	No output frequency			
	REM	Remote mode			
	LOC	Local mode			
Run command source	COMM	Via communication (RS-485 (standard, optional), field bus option)			
	JOG	Jogging mode			
	HAND	Via keypad (This item lights also in local mode.)			





## 3.2 Overview of Operation Modes

The FRENIC series of inverters feature three operation modes listed in Table 3.2.

Mode	Description
Running Mode	This mode allows you to enter run/stop commands in regular operation. You can also monitor the running status in real time. If a light alarm occurs, the $L - R_L^2 *$ appears on the LED monitor. (Only in FRENIC-MEGA)
Programming Mode	This mode allows you to set function code data and check a variety of information relating to the inverter status and maintenance.
Alarm Mode	If an alarm condition arises, the inverter automatically enters the Alarm mode. In this mode, you can view the corresponding alarm code* and its related information on the LED and LCD monitors.

Table 3.2	Operation	Modes
-----------	-----------	-------

\* Codes that represent the causes of alarms that have been triggered by the protective function. For details, refer to "Protective Functions" in the inverter's instruction manual.

Figures 3.1 (a) and (b) show the status transition of the inverter between these three operation modes.



Figure 3.1 (a) Status Transition between Operation Modes in FRENIC-Eco/Multi



Figure 3.1 (b) Status Transition between Operation Modes in FRENIC-MEGA (With light alarm added.)

## 3.3 Running Mode

When the inverter is turned ON, it automatically enters Running mode in which you can:

- [1] Configure the frequency command and PID commands
- [2] Run or stop the motor,
- [3] Monitor the running status (e.g., output frequency, output current),
- [4] Jog (inch) the motor,
- [5] Switch between the remote and local modes, and
- [6] Monitor light alarms.

## 3.3.1 Configuring the frequency command and PID commands

You can configure the frequency command and PID commands with the  $\oslash$  and  $\oslash$  keys on the keypad.

Tip It is possible to display or configure the reference frequency as load shaft speed and other converted values of the mechanical system with function code E48. To configure the reference frequency while monitoring the motor speed, load shaft speed, or speed (%), set the E48 data to 3, 4, or 7, respectively, as listed in Table 3.8 "Items Monitored."

## Configuring the frequency command

Using 🔿 and 🔗 keys (F01 = 0 (factory default) or 8)

- (1) Set function code F01 at "0" or "8" ( ∀ v weys on keypad). This cannot be done when the keypad is in Programming mode or Alarm mode. To enable frequency setting using the A and weys, first place the keypad in Running mode.
- (2) Press the ⊗ or ⊗ key. The 7-segment LED monitor displays the frequency command and the LCD monitor displays the related information including the operation guide, as shown in Figure 3.2.



Figure 3.2 Example of Frequency Command Configuring Screen

(3) To change the frequency command, press the or we key again. The new setting can be saved into the inverter's internal memory.

- The frequency command setting will be saved either automatically by turning the main power OFF or only by pressing the key. You can choose either way using function code E64. (Available in FRENIC-Eco/MEGA)
  - When you start accessing the frequency command or any other parameter with the  $\bigcirc$  and  $\bigcirc$  keys, the lowest digit on the display will blink and start changing. As you are holding down the key, blinking will gradually move to the upper digit places and the upper digits will be changeable.
  - Pressing the () key moves the changeable digit place (blinking) and thus allows you to change upper digits easily.
  - By setting function code C30 at "0" (Enable <> / 
     / 
     > keys on the keypad) and selecting frequency command 2 as a frequency command source, you can also access the frequency command in the same manner using the <> and 
     > keys.
  - If you have set function code F01 at "0" (
     / 
     / 
     keys on keypad) but have selected a frequency command source other than frequency 1 (i.e., frequency 2, via communications, or as a multi-frequency), then you cannot use the 
     or 
     key for changing the frequency command even if the keypad is in Running mode. Pressing either of these keys will just display the currently selected frequency command.
  - Setting function code F01 at "8" (⊘ / ⊘ keys on keypad) enables the balanceless-bumpless switching. When the frequency command source is switched to the keypad from any other source, the inverter inherits the current frequency that has applied before switching, providing smooth switching and shockless running. (Available in FRENIC-MEGA)
  - When the frequency command source is other than the digital reference setting, the LCD monitor displays the following.



Table 3.3 lists the available command sources and their symbols.

Symbol	Command source	Symbol	Command source	Symbol	Command source
HAND	Keypad	MULTI	Multi-frequency	PID-HAND	PID keypad command
12	Terminal [12]			PID-P1	PID command 1 (Analog command)
C1	Terminal [C1]	RS485-1	RS-485 (Port 1) * <sup>1</sup>	PID-P2	PID command 2 (Analog command)
12 + C1	Terminal [12] + Terminal [C1]	RS485-2	RS-485 (Port 2) *2	PID-U/D	PID UP/DOWN command
V2	Terminal [V2]	BUS	Bus option	PID_LINK	PID communications command
U/D	UP/DOWN control	LOADER	Inverter support software "FRENIC loader"	PID+MULTI	PID multi-frequency command

\*1 Refers to COM port 1 which is the RJ-45 connector on the inverter.

\*2 Refers to COM port 2 which is on the terminal block of the inverter (FRENIC-MEGA) or on that of the option card (FRENIC-Eco/Multi).

#### Make settings under PID process control

To enable PID process control, you need to set function code J01 at "1" or "2."

Under the PID control, the items that can be accessed with the  $\bigcirc$  and  $\bigcirc$  keys are different from those under regular frequency control, depending upon the current LED monitor setting. If the LED monitor is set to the speed monitor, the item accessible is a manual speed command (frequency command); if it is set to any other data, the item accessible is a PID process command.

Refer to the inverter's user's manual for details on the PID control.

## Configuring the PID process command with the $\odot$ and $\odot$ keys

- (1) Set function code J02 at "0" ( / keys on keypad).
- (2) Set the LED monitor to something other than the speed monitor (E43 = 0) while the keypad is in Running mode. You cannot modify the PID process command with the and keys while the keypad is in Programming mode or Alarm mode. To enable the modification of the command with the and keys, first switch to Running mode.
- (3) Press the or or key. The 7-segment LED monitor displays the PID process command and the LCD monitor displays the related information including the operation guide, as shown in Figure 3.3.



Figure 3.3 Example of PID Process Command Configuring Screen

Tip On the LED monitor, the decimal point of the lowest digit is used to characterize what is displayed. The decimal point of the lowest digit blinks when a PID process command is displayed; the decimal point lights when a PID feedback amount is displayed.



(4) To change the PID process command, press the or or key again. The new setting can be saved into the inverter's internal memory.

- The PID process command will be saved either automatically by turning the main power OFF or only by pressing the explored key. You can choose either way using function code E64. (Available in FRENIC-Eco/MEGA)
  - Even if multi-frequency is selected as a PID process command (*SS4* or *SS8* = ON), you still can set the process command using the keypad.
  - When function code J02 is set to any value other than "0," pressing the or key displays, on the LED monitor, the PID process command currently selected, while you cannot change the setting. The LCD monitor displays the following.



Table 3.4 PID Process Command Manually Set with 🔿 and 🛇 Keys and Requirements

PID control (Mode selection) J01	PID control (Remote command SV) J02	LED Monitor E43	Multi- frequency <b>SS4</b> , <b>SS8</b>	With $\bigotimes$ and $\bigotimes$ keys	
1 or 2	0	Other than 0		PID process command by keypad	
1012	Other than 0		UN OF OFF	PID process command currently selected	

## Configuring the frequency command with the $\odot$ and $\odot$ keys under PID control.

When function code F01 is set at "0" ( $\bigotimes / \bigotimes$  keys on keypad) and frequency command 1 (Frequency setting via communications link: Disabled; Multi-frequency setting: Disabled; PID control: Disabled) is selected as a manual speed command, you can modify the frequency setting using the  $\bigotimes$  and  $\bigotimes$  keys if you specify the LED monitor as the speed monitor while the keypad is in Running mode.

Note that you cannot modify the frequency setting using the  $\triangle$  and  $\bigcirc$  keys while the keypad is in Programming mode or Alarm mode. To enable the modification of the frequency setting using the  $\triangle$  and  $\bigcirc$  keys, first switch to Running mode. These conditions are summarized in Table 3.5 and the figure below. Table 3.5 shows the combinations of the parameters, while the figure below illustrates how the manual speed command ① entered via the keypad is translated to the final frequency command ②.

The setting and viewing procedures are the same as those for usual frequency setting.

Table 3.5 Speed (Frequency) Command Manually Specified with ightarrow and ightarrow Keys and Requirements

Frequency command 1 (F01)	Frequency setting via communications link	Multi-frequency setting	PID control disabled	Display during $\oslash$ / $\bigotimes$ key operation	
		Disabled	PID enabled	PID output (as final frequency command)	
0	Disabled		Disabled	Manual speed command <u>by keypad</u> (frequency setting)	
Other than the above			PID enabled	PID output (as final frequency command)	
			Disabled	Manual speed command <u>currently selected</u> (frequency setting)	



#### Make settings under PID dancer control

To enable the PID dancer control, you need to set function code J01 at "3."

Under the PID control, the items that can be accessed with the  $\bigcirc$  and  $\bigcirc$  keys are different from those under the regular frequency control, depending upon the current LED monitor setting. If the LED monitor is set to the speed monitor, the item accessible is a primary frequency command; if it is set to any other data, the item accessible is a PID dancer position command.

Configuring the PID dancer position command with the 🔗 and 🔗 keys

- (1) Set function code J02 at "0" ( $\bigcirc$  /  $\bigcirc$  keys on keypad).
- (2) Set the LED monitor to something other than the speed monitor (E43 = 0) when the inverter is in Running mode. You cannot modify the PID dancer position command with the and keys while the keypad is in Programming mode or Alarm mode. To enable the modification of the command, first switch to Running mode.
- (3) Press the ⊘ or ⊗ key. The 7-segment LED monitor displays the PID dancer position command and the LCD monitor displays the related information including the operation guide, as shown in Figure 3.4.



Figure 3.4 Example of PID Dancer Position Command Configuring Screen

Tip On the LED monitor, the decimal point of the lowest digit is used to characterize what is displayed. The decimal point of the lowest digit blinks when a PID dancer position command is displayed; the decimal point lights when a PID feedback amount is displayed.



- (4) To change the PID dancer position command, press the or vert key again. The new setting can be saved into the inverter's internal memory as function code J57 data. It is retained even if you temporarily switch to another PID command source and then go back to the via-keypad PID command. Furthermore, you can directly configure the command with function code J57.
  - Even if multi-frequency is selected as a PID dancer position command (SS4 or SS8 = ON), you still can set the command using the keypad.

Table 3.6	Primary Frequency Command Specified with	(	and	Y	Keys and Requirements
-----------	--	---	-----	---	-----------------------

	PID control (Mode selection) J01	PID control (Remote command SV) J02	rol LED Monitor Multi-frequency SX4, SS8		With $\oslash$ and $\oslash$ keys
	3	0	0 Other than 0		PID command by keypad
		Other than 0			PID command currently selected

## ■ Configuring the primary frequency command with the 🔗 and 🛇 keys under PID dancer control

When function code F01 is set at "0" ( $\bigotimes$  /  $\bigotimes$  keys on keypad) and frequency command 1 (Frequency setting via communications link: Disabled; Multi-frequency setting: Disabled) is selected as a primary frequency command, you can modify the primary frequency command using the  $\bigotimes$  and  $\bigotimes$  keys if you specify the LED monitor as the speed monitor while the keypad is in Running mode.

Note that you cannot modify the primary frequency command using the  $\bigcirc$  and  $\bigcirc$  keys while the keypad is in Programming mode or Alarm mode. To enable the modification of the frequency setting, first switch to Running mode. The figure below shows how the primary frequency command ① entered via the keypad is translated to the final frequency command ②.

The setting procedure is the same as that for usual frequency setting.

Tip



## 3.3.2 Running or stopping the motor

By factory default, pressing the every key starts running the motor in the forward direction and pressing the every key decelerates the motor to stop. The every key is disabled. You can run or stop the motor using the keypad only in Running mode and Programming mode.

To run the motor in reverse direction or to run the motor in reversible mode, change the setting of function code F02.

Given For details of function code F02, refer to the inverter's instruction manual, Chapter 5 "FUNCTION CODES."



Figure 3.5 Rotational Direction of Motor

Note) The rotational direction of IEC-compliant motor is opposite to the one shown above.

## Displaying the running status on the LCD monitor

#### (1) When function code E45 (LCD monitor item selection) is set at "0"

The LCD monitor displays the running status, the rotational direction, and the operation guide.

(The lower indicators show the running status and run command source. For the upper ones, see Section 3.3.3.)



#### Figure 3.6 Display of Running Status

The running status and the rotational direction are displayed as listed in Table 3.7.

Table 3.7	Punning Status	and Potational	Direction
Table 5.7	Running Status	s anu Rotational	Direction

Status/Direction	Display	Meaning	
Running status	RUN STOP	A run command is present or the inverter is driving the motor. A run command is not present and the inverter is stopped.	
FWD         Forward rotation being comm           Rotational direction         REV         Reverse rotation being comm           Blank         The inverter is stopped.		Forward rotation being commanded. Reverse rotation being commanded. The inverter is stopped.	

(2) When function code E45 (LCD monitor item selection) is set at "1"

The LCD monitor displays the output frequency, output current, and calculated torque in a bar chart.

(The lower indicators show the running status and run command source. For the upper ones, see Section 3.3.3.)



The full scale (maximum value) for each parameter is as follows:

 Output frequency:
 Maximum frequency

 Output current:
 200% of inverter's rated current

 Calculated torque:
 200% of rated torque generated by motor

Figure 3.7 Bar Chart

## 3.3.3 Monitoring the running status on the LED monitor

The items listed below can be monitored on the 7-segment LED monitor. Immediately after the power is turned ON, the monitor item specified by function code E43 is displayed.

Pressing the (we) key in Running mode switches between monitor items in the sequence shown in Table 3.8. The "Monitor page #" column shows the monitor page of items supported by each inverter model.

Monitored Items on the LED Monitor		Example	Lloit	Meaning of Displayed Value	Function	Monitor page #				
		Example	Unit	weating of Displayed value	code E43	Eco	Multi	MEGA		
Sp	peed Monitor Function code E48 specifies what to be displayed.		48 specifies what to be displayed.	0						
	Output frequency (before slip compensation)	50.00	Hz	Frequency actually being output (Hz)	(E48=0)	0 Some items are not displayed depending on the inverter model. For details, refer to the inverter's instruction manual.				
	Output frequency (after slip compensation)	50.00	Hz	Frequency actually being output (Hz)	(E48=1)					
	Reference frequency	<i>50.00</i>	Hz	Frequency actually being output (Hz)	(E48=2)			re not		
	Motor speed	<i>ISOO</i>	r/min	Output frequency (Hz)× $\frac{120}{P01}$	(E48=3)					
	Load shaft speed	300.0	r/min	Output frequency (Hz) x E50	(E48=4)			inual.		
	Line speed	300.0	r/min	Output frequency (Hz) x E50	(E48=5)					
	Constant feeding rate time	50	min	E50 Output frequency (Hz) x E39	(E48=6)					
	Speed (%)	50.0	%	Output frequency (Hz) Maximum frequency (Hz)	(E48=7)					
Output current $\frac{1}{2}$		Output of the inverter in current in rms	3		8					
In	put Power	10.25	kW	Input power to the inverter	9	9				
Ca	alculated torque	50	%	Motor output torque in % (Calculated value)	8	10				

Table 3.8	Items Monitored
-----------	-----------------

Table 3.8	Items Monitored	(Continued)	
		· /	

Monitored Items on	Example	Unit	Meaning of Displayed Value	Function code E43	Monitor page #		
the LED Monitor	Lvample				Eco	Multi	MEGA
Output voltage	200	V	Output of the inverter in voltage in rms	4	11		
Motor output	<i>9.85</i>	kW	Motor output in kW	16		12	
Load factor	50	%	Load rate of the motor in % with the rated output being at 100%	15	13		
PID command (Note 1)	ID.DD.	-	PID command/feedback amount transformed to that of physical value of the object to be controlled.	10	14		
PID feedback amount (Note 1)	<i>9.00.</i>	-	Refer to the function codes E40 and E41 for details.	12	2 15		
PID output (Note 1)	IDD.D.	%	PID output in % with the maximum output frequency (F03) being at 100%	14	4 16		
Analog input monitor (Note 2)	82.00	-	Analog input to the inverter converted per E40 and E41 Refer to the function codes E40 and E41 for details.	17	18	-	18
Timer (for timer operation) (Note 3)	50	s	Remaining time when the timer operation is enabled	13	-	17	-
Current position pulse	נסו	pulse	Dulse Current position pulse for use under positioning control		-	19	-
Position deviation pulse	נסו	pulse	ulse Position deviation pulse for use under 22		-	20	-
Torque current (Note 4)	48	%	Torque current command value or calculated torque current	23	-	-	21
Exciting current magnetic flux command (Note 4)	50	% Magnetic flux command value		24	-	-	22
Input watt-hour	100.0	kWh	Input watt - hour (kWh) 100	25	25		23

**ENGLISH** 

The LCD monitor (given below) shows information related to the item shown on the LED monitor. The monitor item on the LED monitor can be switched by pressing the  $\frac{2}{440}$  key.



Figure 3.8 LCD Monitor Sample Detailed for the LED Monitor Item

- (Note 1) These PID related items appear only when the inverter drives the motor under the PID control specified by function code J01 (= 1, 2 or 3). When a PID command or PID output is displayed, the dot at the lowest digit on the LED monitor blinks; when a PID feedback amount is displayed, it is lit.
- (Note 2) This item appears only when the analog input monitor is enabled by any of function codes E61 to E63 (Select terminal function).
- (Note 3) This item appears only when the timer operation is enabled by function code C21 (data = 1).
- (Note 4) If the V/f control is selected, a zero (0) is displayed.

## 3.3.4 Jogging (inching) the motor (Available in FRENIC-Multi/MEGA)

To start jogging operation, perform the following procedure.

(1) Make the inverter ready to jog with the steps below.

- 1) Switch the inverter to Running mode (see Section 3.2).
- 2) Press the "we + 🔿 keys" simultaneously. The lower indicator above the "JOG" index comes ON.



- Function code C20 specifies the jogging frequency. H54 and H55 (H55 is available only in FRENIC-MEGA) specify the acceleration and deceleration times, respectively. These three function codes are exclusive to jogging operation. Specify each function code data, if needed.
  - Using the input terminal command "Ready for jogging" *JOG* switches between the normal operation state and ready-to-jog state.
  - Switching between the normal operation state and ready-to-jog state with the "for + (A) keys" is possible only when the inverter is stopped.
- (2) Jog the motor.

While the  $e^{m}$  or  $e^{m}$  key is held down, the motor continues jogging. Releasing the key decelerates the motor to stop.

(3) Make the inverter exit from the ready-to-jog state and return to the normal operation state.

Press the "for + (A keys" simultaneously. The lower indicator above the "JOG" index goes OFF.

#### 3.3.5 Switching between the remote and local modes (Available in FRENIC-Eco/MEGA)

The inverter can be operated either in remote mode or in local mode. In remote mode, which applies to normal operation, the inverter is driven under the control of the data settings held in it, whereas in local mode, which applies to maintenance operation, it is separated from the system and is driven manually under the control of the keypad.

- Remote mode: The run and speed command sources are determined by source switching signals including function codes, run command 2/1 switching signal, and communications link operation signal. The keypad cannot be used as a command source.
- Local mode: The keypad is enabled as a run and speed command source, regardless of the settings specified by function codes. The keypad takes precedence over run command 2/1 switching signal, communications link operation signal or other command sources.

The table below lists the run command sources using the keypad in the local mode.

Data for F02	Run command sources	
0: Keypad	You can run or stop the motor using the ${}_{\mathfrak{W}}$ , ${}_{\mathfrak{W}}$ , and ${}_{\mathfrak{W}}$ keys on the keypad.	
1: External signal		
2: Keypad (forward)	You can run or stop the motor using the five and fire keys on the keypad. You can run the motor in forward direction only. (The fire key is disabled.)	
3: Keypad (reverse)	You can run or stop the motor using the $f(Rev)$ and $f(Rev)$ keys on the keypad. You can run the motor in reverse direction only. (The $f(Rev)$ key is disabled.)	

Table 3.9 Run Commands from the Keypad in the Local Mode

Holding down the (100) key for at least one second switches between the remote and local modes.

The mode can be switched also by an external digital input signal. To enable the switching, you need to assign *LOC* to one of the digital input terminals, which means that the commands from the keypad are given precedence (one of function codes E01 to E09, E98, or E99 must be set to "35").

You can confirm the current mode on the indicators (REM: Remote mode; LOC: Local mode).

When the mode is switched from Remote to Local, the frequency settings in the remote mode are automatically inherited. Further, if the inverter is in Running mode at the time of the switching from Remote to Local, the run command is automatically turned ON so that all the necessary data settings will be carried over. If, however, there is a discrepancy between the settings on the keypad and those in the inverter itself (e.g., switching from reverse rotation in the remote mode to forward rotation in the local mode using the keypad that is for forward rotation only), the inverter automatically stops.

The paths of transition between remote and local modes depend on the current mode and the value (ON/OFF) of *LOC*, the signal giving precedence to the commands from the keypad, as shown in the state transition diagram shown in Figure 3.9.

For further details on how to set run commands and frequency commands in remote and local modes, refer to the drive command related section in the inverter's user's manual, "BLOCK DIAGRAMS FOR CONTROL LOGIC."



Figure 3.9 Transition between Remote and Local Modes

## 3.3.6 Monitoring light alarms (Available only in FRENIC-MEGA)

The FRENIC-MEGA identifies abnormal states in two categories--Heavy alarm and Light alarm. If the former occurs, the inverter immediately trips; if the latter occurs, the inverter shows the  $\angle - \frac{1}{2}$  on the LED monitor and blinks the "L-ALARM" indication in the operation guide area on the LCD monitor but it continues to run without tripping.

Which abnormal states are categorized as a light alarm ("Light alarm" object) should be defined with function codes H81 and H82 beforehand.

Assigning the *LALM* signal to any one of the digital output terminals with any of function codes E20 to E24 and E27 (data = 98) enables the inverter to output the *LALM* signal on that terminal upon occurrence of a light alarm.





For details of the light alarm factors, refer to the FRENIC-MEGA Instruction Manual, Chapter 6 "TROUBLESHOOTING."

#### How to check a light alarm factor

If a light alarm occurs,  $\angle \neg \beta \angle$  appears on the LED monitor. To check the current light alarm factor, enter Programming mode by pressing the end key and select LALM1 on Menu #5 "Maintenance Information." For details of the menu transition of the maintenance information, refer to Section 3.4.6 "Reading maintenance information."

It is also possible to check the factors of the last three light alarms by selecting LALM2 (last) to LALM4 (3rd last).

#### How to remove the current light alarm

After checking the current light alarm factor, to switch the LED monitor from the  $\angle \neg \beta \angle$  indication state back to the running status display (e.g., output frequency), press the  $\bigotimes$  key in Running mode.

If the light alarm factor has been removed, the "L-ALARM" disappears and the **LALM** output signal turns OFF. If not (e.g. DC fan lock), the  $\angle \neg \neg \angle$  on the LED monitor disappears (normal monitoring becomes available), the "L-ALARM" remains displayed on the LCD monitor, and the **LALM** output signal remains ON.



## 3.4 Programming Mode

Programming mode allows you to set and check function code data and monitor maintenance information and input/output (I/O) signal status. The functions can be easily selected with a menu-driven system. Table 3.10 lists menus available in Programming mode.

Menu #	Menu	Main functions	
0	Quick Setup	Displays only basic function codes pre-selected.	
1	Data Setting Allows you to view and change the setting of the function code you select. (Note)		3.4.1
2	Data Checking	Allows you to view and change a function code and its setting (data) on the same screen. Also this allows you to check the function codes that have been changed from their factory defaults.	3.4.3
3	Drive Monitoring	Displays the running information required for maintenance or test running.	3.4.4
4	I/O Checking	Displays external interface information.	3.4.5
5	Maintenance Information	Displays maintenance information including cumulative run time.	3.4.6
6	Alarm Information	Displays four latest alarm codes. Also this allows you to view the information on the running status at the time the alarm occurred.	3.4.7
7	Alarm Cause	Displays the cause of the alarm.	3.4.8
8	Data Copying	Allows you to read or write function code data, as well as verifying it.	3.4.9
9	Load Factor Measurement	Allows you to measure the maximum output current, average output current, and average braking power.	3.4.10
10	User Setting	Allows you to add or delete function codes covered by Quick Setup.	3.4.11
11	Communication Debugging	Allows you to confirm the data of function codes for communication (S, M, W, X, and Z codes).	3.4.12

Table 3 10	Menus Available in Programming Mode
	Menus Available in Liogramming Mode

(Note) The o codes for options appear only when the corresponding option(s) is mounted on the inverter.

Figure 3.11 shows the transitions between menus in Programming mode.





If no key is pressed for approx. 5 minutes, the inverter automatically goes back to Running mode and turns the backlight OFF.

## 3.4.1 Setting function codes -- Menu #1 "Data Setting" --

Menu #1 "Data Setting" in Programming mode allows you to set function codes for making the inverter functions match your needs.

The function codes available differ depending upon the inverter model.

Function Code Group	Function	Description
F code (Fundamental functions)	Fundamental functions	Functions concerning basic motor running
E code (Extension terminal functions)	Terminal functions	Functions concerning the selection of operation of the control circuit terminals; Functions concerning the display on the LED monitor
C code (Control functions of frequency)	Control functions	Functions associated with frequency settings
P code (Motor 1 parameters)	Motor 1 parameters	Functions for setting up characteristics parameters (such as capacity) of the 1st motor
H code (High performance functions)	High-level functions	Highly added-value functions; Functions for sophisticated control
A code (Motor 2 parameters)	Motor 2 parameters	Functions for setting up characteristics parameters (such as capacity) of the 2nd motor
b code (Motor 3 parameters)	Motor 3 parameters	Functions for setting up characteristics parameters (such as capacity) of the 3rd motor
r code (Motor 4 parameters)	Motor 4 parameters	Functions for setting up characteristics parameters (such as capacity) of the 4th motor
J code (Application functions 1)	Application functions 1	Functions for applications such as PID control
J code (Application functions 2)	Application functions 2	Functions for applications such as speed control
y code (Link functions)	Link functions	Functions for controlling communications
o code (Option functions)	Optional functions	Functions for optional features (Note)

Table 3.11 Function Code List

(Note) The o codes appear only when the corresponding option(s) is mounted on the inverter.

## Function codes requiring simultaneous keying

To modify the data for function code F00 (data protection), H03 (data initialization), or H97 (clear alarm data), simultaneous keying of 100 + 100 keys or 100 + 100 keys is required.

## Changing, validating, and saving function code data when the invert is running

Some function codes can be modified while the inverter is running, whereas others cannot. Further, depending on the function code, modifications may or may not become effective immediately. For details, refer to the "Change when running" column in Section 5.1 "Function Code Tables" in Chapter 5 of the inverter's instruction manual.
## Basic configuration of screens

Figure 3.12 shows the LCD screen transition for Menu #1 "Data Setting."

A hierarchy exists among those screens that are shifted in the order of "menu screen," "function code list screen," and "function code data modification screens."

On the modification screen of the target function code, you can modify or check its data.



Figure 3.12 Configuration of Screens for "DATA SET"

#### Screen samples for changing function code data

The "function code list screen" shows function codes, their names, and operation guides.



The "function code data modification screen" shows the function code, its name, its data (before and after change), allowable entry range, and operation guides.

<Before change>

F03MAX Hz	
*	
58.0Hz	
25. 0~500. 0	
AV⇒DATA ADJUS	

Function code #, name \*: Function code that has been changed from factory default Data Allowable entry range Operation guide

<Changing data>

F03 <mark>MAX Hz</mark>
* 58.0Hz
58.1Hz
25. 0~500. 0
AV⇒DATA ADJUS

Data before change Data being changed

Figure 3.13 Screen Samples for Changing Function Code Data

## Basic key operation

This section will give a description of the basic key operation, following the example of the function code data changing procedure shown in Figure 3.14.

This example shows you how to change function code F03 data (maximum frequency) from 58.0 Hz to 58.1 Hz.

- (1) When the inverter is powered ON, it automatically enters Running mode. In Running mode, press the end key to enter Programming mode. The menu for function selection will be displayed.

- (4) Change the function code data by using the And keys. Pressing the key causes the blinking digit place to shift (cursor shifting) (The blinking digit can be changed).
- (5) Press the key to establish the function code data.

The data will be saved in the memory inside the inverter. The display will return to the function code list, then move to the next function code (in this example, F04).

If you press the 📾 key before the 📾 key, the change made to data of the function code is cancelled. The data reverts to the previous value, the screen returns to the function code list, and the function code (F03) reappears.

(6) Press the (REF) key to go back to the menu from the function code list.



## 3.4.2 Setting up function codes quickly using Quick Setup -- Menu #0 "Quick Setup" --

Menu #0 "QUICK SET" in Programming mode allows you to quickly set up a fundamental set of function codes that you specify beforehand. Whereas at shipment from factory, only a set of function codes predetermined as quick setup items is registered, you can add or delete some function codes using "10. USER SET." The set of function codes covered by Quick Setup is held in the inverter (not the keypad). Therefore, if you mount your keypad onto another inverter, the set of function codes held in the new inverter is subject to Quick Setup. If necessary, you may copy the set of function codes subject to Quick Setup using the copy function (Menu #8 "Data Copying").

If you perform data initialization (function code H03), the set of function codes subject to Quick Setup will be reset to the factory default.

For the list of function codes subject to Quick Setup by factory default, refer to the inverter's instruction manual, Chapter 5 "FUNCTION CODES."

The LCD screen transition from Menu #0 is the same as with Menu #1 "Data Setting."

#### Basic key operation

Same as the basic key operation for Menu #1 "Data Setting."

#### 3.4.3 Checking changed function codes -- Menu #2 "Data Checking" --

Menu #2 "Data Checking" in Programming mode allows you to check function codes (together with their data) that have been changed. The function codes whose data have been changed from factory defaults are marked with **\***. By selecting a function code and pressing the (e) key, you can view or change its data.

The LCD screen transition from Menu #2 is the same as with Menu #1 "Data Setting," except for the different screen listing function codes as shown below.



Figure 3.15 Function Code List Screen

#### Basic key operation

Same as the basic key operation for Menu #1 "Data Setting."

## 3.4.4 Monitoring the running status -- Menu #3 "Drive Monitoring" --

Menu #3 "Drive Monitoring" in Programming mode allows you to check the running status during maintenance and test running.

Available function codes differ depending on the inverter model.

Table 3.12 Drive Monitoring Display Items

Page # in ope. guide	Item	Symbol	Description	Eco	Multi	MEGA
	Output frequency	Fot1	Output frequency (before slip compensation)	$\checkmark$	$\checkmark$	$\checkmark$
1	Output frequency	Fot2	Output frequency (after slip compensation)	-	$\checkmark$	$\checkmark$
	Output current	lout	Output current	$\checkmark$	$\checkmark$	$\checkmark$
	Output voltage	Vout	Output voltage	$\checkmark$	$\checkmark$	$\checkmark$
	Calculated torque	TRQ	Calculated output torque generated by motor	$\checkmark$	$\checkmark$	$\checkmark$
	Frequency command	Fref	Frequency command	$\checkmark$	$\checkmark$	$\checkmark$
	Running direction	FWD REV (Blank)	Forward Reverse Stopped	$\checkmark$	$\checkmark$	$\checkmark$
	Current limit	IL	Current limiting	$\checkmark$	$\checkmark$	$\checkmark$
2	Undervoltage Voltage limit	LU VL	Undervoltage detected Voltage limiting	V	V	$\checkmark$
2	Torque limit	TL	Torque limiting	-	$\checkmark$	$\checkmark$
-	Speed limit	SL RL	Speed limiting Rotation direction limiting	-	-	$\checkmark$
	Motor selected	M1-M4	Motor 1 to 4	-	-	$\checkmark$
	Drive control	VF DTV VF-SC VC-SL VC-PG	V/f control without slip compensation Dynamic torque vector control V/f control with slip compensation Vector control without speed sensor Vector control with speed sensor	-	-	V
	Motor speed	SYN	(Output frequency Hz) × $\frac{120}{P01}$	V	$\checkmark$	$\checkmark$
2	Load shaft speed	LOD	Output frequency (Hz) $\times$ Function code E50	$\checkmark$	$\checkmark$	$\checkmark$
5	Line speed	LIN	Output frequency (Hz) $\times$ Function code E50	$\checkmark$		$\checkmark$
	Constant peripheral speed control monitor	LSC	Actual peripheral speed under constant peripheral speed control	-	-	$\checkmark$
	PID command	SV	The PID command and PID feedback amount	$\checkmark$	$\checkmark$	$\checkmark$
4	PID feedback amount	PV	are displayed atter conversion to the virtual physical values (e.g., temperature or pressure) of the object to be controlled using the function code E40 and E41 data (PID display coefficients A and B). Display value = (PID command or feedback amount) × (Coefficient A - B) + B	V	$\checkmark$	$\checkmark$
	PID output value	MV	PID output value, displayed in % (assuming the maximum frequency (F03) as 100%).	$\checkmark$	$\checkmark$	$\checkmark$

Table 3.12	Drive Monitoring	Display	Items	(Continued)
------------	------------------	---------	-------	-------------

Page # in ope. guide	Item	Symbol	Description	Eco	Multi	MEGA
	Torque limit value A	TLA	Driving torque limit value A (based on motor rated torque)	-	$\checkmark$	$\checkmark$
5	Torque limit value B	TLB	Driving torque limit value B (based on motor rated torque)	-	$\checkmark$	$\checkmark$
	Reference torque bias	TRQB	Reserved ("" appears.)	-	-	-
	Current position pulse	Р	Current position pulse for positioning control	-	$\checkmark$	$\checkmark$
<u> </u>	Stop position target pulse	E	Stop position target pulse for positioning control	-	$\checkmark$	$\checkmark$
ю	Position deviation pulse	dP	Position deviation pulse for positioning control	-	$\checkmark$	$\checkmark$
	Positioning control status	MODE	Positioning control status	-	$\checkmark$	$\checkmark$
_	Motor temperature	NTC	Temperature detected by the NTC thermistor built in the motor (VG motor)	-	-	$\checkmark$
	Ratio setting	Rati	When this setting is 100%, the LED monitor shows 1.00.	-	-	$\checkmark$
1	Magnetic flux command value	FLUX	Flux command value in %.	-	-	$\checkmark$
	Deviation in SY synchronous operation	SY-d	Deviation in SY synchronous operation	-	-	$\checkmark$
	4-multiplied current position pulse	P4	Current position pulse for positioning control	-	-	$\checkmark$
8	4-multiplied stop position target pulse	E4	Stop position target pulse for positioning control	-	-	$\checkmark$
	4-multiplied position deviation pulse	dP4	Position deviation pulse for positioning control	-	-	$\checkmark$
	Positioning control status	MODE	Positioning control status	-	-	

#### **Basic key operation**

- (1) When the inverter is powered ON, it automatically enters Running mode. In Running mode, press the key to enter Programming mode. The menu for function selection will be displayed.
- (2) Select "3. OPR MNTR" by moving the pointer  $\rightarrow$  with the  $\bigotimes$  and  $\bigotimes$  keys.
- (3) Press the () key to display the screen (by one page) for Operation Monitor.
- (4) Select the page for the desired item by using the ⊗ and ⊗ keys and confirm the running status information for the desired item.
- (5) Press the REFT key to go back to the menu.

Figure 3.16 shows an example of the LCD screen transition starting from Menu #3 "Drive Monitoring."





Motor temperature Ratio setting Magnetic flux command value Deviation in SY synchronous operation

4-multiplied current position pulse
4-multiplied stop position target pulse
4-multiplied position deviation pulse
4-multiplied positioning control status
▲: End of page

Common operation items

To access the target data, switch to the desired page using the  $\triangle$  and  $\bigcirc$  keys.

- ▼: This page continues to the next page.
- •: This page is continued from the previous page and continues to the next page.
- ▲: This page is continued from the previous page.

Figure 3.16 Screen Transition for "OPR MNTR"

# 3.4.5 Checking I/O signal status -- Menu #4 "I/O Checking" --

Menu #4 "I/O CHECK" in Programming mode allows you to check the digital and analog input/output signals coming in/out of the inverter. This menu is used to check the running status during maintenance or test run. Available function codes differ depending on the inverter model.

Page # in ope. guide	Item	Symbol	Description	Eco	Multi	MEGA
1	Input signals at the control circuit terminal block	FWD, REV, X1 - X9, EN Note)	Shows the ON/OFF state of the input signals at the control circuit terminal block. (Highlighted when short-circuited; normal when open) Note) The number of applicable terminals differs depending on the inverter model. For details, refer to the inverter's instruction manual.	$\checkmark$	$\checkmark$	$\checkmark$
2	Input signals via communications link	FWD, REV, X1 - X9, XF, XR, RST Note)	Input information for function code S06 (communication) (Highlighted when 1; normal when 0) Note) The number of applicable terminals differs depending on the inverter model. For details, refer to the inverter's instruction manual.	$\checkmark$	V	V
3	Output signals	Y1 - Y4, Y5, 30ABC Note)	Output signal information Note) The number of applicable terminals differs depending on the inverter model. For details, refer to the inverter's instruction manual.	$\checkmark$	$\checkmark$	$\checkmark$
		Di	Input signal at the control circuit terminal block (in hexadecimal)	$\checkmark$		$\checkmark$
4	4 I/O signals (hexadecimal)	Do	Output signal (in hexadecimal)			$\checkmark$
		LNK	Input signal via communications link (hexadecimal)	$\checkmark$	$\checkmark$	$\checkmark$
		12	Input voltage at terminal [12]	$\checkmark$		$\checkmark$
5	Analog input signals	C1	Input current at terminal [C1]	$\checkmark$	$\checkmark$	$\checkmark$
		V2	Input voltage at terminal [V2]	$\checkmark$		$\checkmark$
	Analog output signals	FMA FMA FMP FMP	Output voltage at terminal [FMA] Output current at terminal [FMA] Average output voltage at terminal [FMP] Pulse rate at terminal [FMP]	√*	V	√*
6	Note) Symbols and output formats differ depending on the invotor model	FMA FMA FMI	Output voltage at terminal [FMA] Output current at terminal [FMA] Output current at terminal [FMI]	√*	-	-
		FM1 FM1 FM2 FM2	Output voltage at terminal [FM1] Output current at terminal [FM1] Output voltage at terminal [FM2] Output current at terminal [FM2]	-	-	√*
	I/O signals of digital input	Di-o	Input signal of option card in hexadecimal	-	$\checkmark$	$\checkmark$
7	and output interface cards (option)	Do-o	Output signal of option card in hexadecimal	-	$\checkmark$	$\checkmark$
	Pulse train input	X7	Pulse count signal of pulse train input at terminal [X7]	-	-	$\checkmark$

Table 3.13 I/O Check Items

\* Some screens differ depending upon the specifications even on the same inverter models.

Table 3.13	I/O Check Items	(Continued)	,

Page # in ope. guide	Item	Symbol	Description	Eco	Multi	MEGA
	PG pulse rate	P1	Pulse rate (p/s) of the A/B phase signal fed back from the reference PG	-	$\checkmark$	$\checkmark$
0		Z1	Pulse rate (p/s) of the Z phase signal fed back from the reference PG	-	$\checkmark$	$\checkmark$
8		P2	Pulse rate (p/s) of the A/B phase signal fed back from the slave PG	-	$\checkmark$	$\checkmark$
		Z2	Pulse rate (p/s) of the Z phase signal fed back from the slave PG	-	$\checkmark$	$\checkmark$
		32	Input voltage at terminal [32] (option)	-	-	
0	I/O signals of analog input/output interface	C2	Input current at terminal [C2] (option)	-	-	$\checkmark$
9	cards (ontion)	A0	Output voltage at terminal [A0] (option)	-	-	$\checkmark$
	(option)	CS	Output current at terminal [CS] (option)	-	-	$\checkmark$

#### Basic key operation

- (1) When the inverter is powered ON, it automatically enters Running mode. In Running mode, press the may key to enter Programming mode. The menu for function selection will be displayed.
- (2) Select "4. I/O CHECK" by moving  $\rightarrow$  with the  $\bigcirc$  and  $\bigcirc$  keys.
- (3) Press the (WK) key to display the screen (by one page) for I/O Checking.
- (5) Press the (RESET) key to go back to the menu.

Figure 3.17 shows an example of the LCD screen transition starting from Menu #4 "I/O Checking."



Select the desired menu by moving the pointer with  $\bigcirc$  /  $\bigcirc$  key.

Press key to establish the desired menu.

## Input signals at the control circuit terminal block

Highlighted when short-circuited Normal when open

Note: The number of applicable terminals differs depending on the inverter model.

Input signals via communications link (See Note 1 on page 3-30.)

Highlighted when 1 Normal when 0

Note: The number of applicable terminals differs depending on the inverter model.

# **Output signals**

Highlighted when ON Normal when OFF

Note: The number of applicable terminals differs depending on the inverter model.

I/O signals (hexadecimal) (See Note 2 on page 3-30.)

Input signals at the control circuit terminal block Output signal Input signals via communications link (See Note 1 on page 3-30.)

# Analog input signals

Input voltage at terminal [12] Input current at terminal [C1] Input voltage at terminal [V2]

# Analog output signals\*

Output voltage at terminal [FMA] Output current at terminal [FMA] Average output voltage at terminal [FMP] Pulse rate at terminal [FMP]

\* Some screens differ depending upon the specifications even on the same inverter models. (See Table 3.13.)



# I/O signals (option) (in hex.)

(See Note 2 on the next page.) Input signal Output signal Pulse rate signal

# PG pulse rate (option)

A/B phase signal from reference PG Z phase signal from reference PG A/B phase signal from slave PG Z phase signal from slave PG

# Analog I/O signals (option)

Input voltage at terminal [32] Input current at terminal [C2] Output voltage at terminal [A0] Output current at terminal [CS]

Common operation items

To access the target data, switch to the desired page using the  $\triangle$  and  $\bigcirc$  keys.

- ▼: This page continues to the next page.
- •: This page is continued from the previous page and continues to the next page.
- ▲: This page is continued from the previous page.

Figure 3.17 Screen Transition for "I/O CHECK"

## Note 1 Input status at terminals via communications link

Input commands sent via RS-485 communications or other communications options can be displayed in two ways depending on setting of the function code S06: "Display with ON/OFF of the LED segment" or "In hexadecimal format." The content to be displayed is basically the same as that for the control I/O signal terminal status display; however, (XF), (XR), and (RST) are added as inputs. Note that under communications control, I/O display is in normal logic (Active-ON) (using the original signals that are not inverted).

# Note 2 I/O status (hexadecimal)

Each I/O terminal is assigned to one of the 16 binary bits (bit 0 through bit 15). The bit to which no I/O terminal is assigned is considered to have a value of "0." The I/O status is thus collectively expressed as a four-digit, hexadecimal number (0 through F) as shown in Table 3.14.

Digital input terminals [FWD] and [[REV] are assigned to bits 0 and 1, [X1] through [X9] to bits 2 through 10, and [EN] to bit 11, respectively. Each bit assumes a value of "1" when the corresponding signal is ON and a value of "0" when it is OFF. For example, when signals [FWD] and [X1] are ON while all the other signals are OFF, the status is expressed as "0005H."

Digital output terminals [Y1] through [Y4] are assigned to bits 0 through 3. Each is given a value of "1" when it is short-circuited to [CMY], or a value of "0" when its circuit to [CMY] is open. The status of relay output terminal [Y5A/C] is assigned to bit 4, which assumes a value of "1" when the contact between [Y5A] and [Y5C] is closed. The status of relay output terminal [30A/B/C] is assigned to bit 8, which assumes a value of "1" when the contact between [Y5A] and [Y5C] is closed. The status of relay output terminal [30A/B/C] is assigned to bit 8, which assumes a value of "1" when the contact between [30A] and [30C] is closed or "0" when the contact between [30B] and [30C] is closed. For example, when terminal [Y1] is ON, terminals [Y2] through [Y4]] are OFF, the contact between [Y5A] and [Y5C] is opened, and the link between 30A and 30C is closed, the status is expressed as "0101H."

As in the control I/O signal terminal status display, the ON/OFF status of each input/output terminal signal of a digital input and output interface cards (option) is expressed in hexadecimal notation.

Digital input terminals [11] through [16] on a digital input interface card (option) are assigned to 16 binary bits (bit 0 through bit 15). Each bit assumes a value of "1" when the corresponding signal is ON and a value of "0" when it is OFF. Digital output terminals [O1] through [O8] on a digital output interface card (option) are assigned to eight binary bits (bit 0 through bit 7).

Dis	Data played		Highe	st digit											Lowes	st digit	
	Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Inpu	t signal	(RST) <sup>*</sup>	$(XR)^{^{\star}}$	$(XF)^{^{\star}}$	-	[EN]	[X9]	[X8]	[X7]	[X6]	[X5]	[X4]	[X3]	[X2]	[X1]	[REV]	[FWD]
Outp	ut signal	-	-	-	-	-	-	-	[30A/B /C]	-	-	-	[Y5A /C]	[Y4]	[Y3]	[Y2]	[Y1]
tion	DI	[116]	[115]	[114]	[113]	[112]	[111]	[I10]	[19]	[18]	[17]	[16]	[15]	[ 4]	[13]	[12]	[11]
Opi	DO	-	-	-	-	-	-	-	-	[08]	[07]	[O6]	[O5]	[04]	[O3]	[02]	[01]
) ele	Binary	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0	1
Examp (input	Hex								000	95H							
															-	unas	sianed

Table 3.14 Hexadecimal Notation

\* (XF), (XR), (RST) are for communications.

Refer to "Note 1 Input status at terminals via communications link" above.

## 3.4.6 Reading maintenance information -- Menu #5 "Maintenance Information" --

Menu #5 "MAINTENANC" in Programming mode allows you to view information necessary for performing maintenance on the inverter.

Available function codes differ depending on the inverter model.

Table 3.15 Display items for Maintenance	Table 3.15	Display	Items fo	r Maintenance
--	------------	---------	----------	---------------

Page # in ope. guide	Item	Symbol	Description	Eco	Multi	MEGA
	Cumulative run time	TIME	Shows the cumulative run time during which the inverter was powered ON. When the total time exceeds 65,535 hours, the counter will be reset to 0 and the count will start again.	$\checkmark$	$\checkmark$	$\checkmark$
1	DC link bus voltage	EDC	Shows the DC link bus voltage of the inverter's main circuit.	$\checkmark$	$\checkmark$	$\checkmark$
	Max. temperature inside the inverter	TMPI	Shows a maximum temperature inside the inerter every hour.	$\checkmark$	-	$\checkmark$
	Max. temperature of heat sink	TMPF	Shows the maximum temperature of the heat sink every hour.	$\checkmark$	$\checkmark$	$\checkmark$
	Max. effective current	Imax	Shows the maximum current in rms every hour.	$\checkmark$	$\checkmark$	
	Capacitance of the DC link bus capacitor	CAP	Shows the current capacitance of the DC link bus capacitor as % of the capacitance at factory shipment. Refer to the inverter's instruction manual, Chapter 7 "MAINTENANCE AND INSPECTION" for details.	$\checkmark$	$\checkmark$	V
2	Cumulative motor run time	MTIM	Shows the cumulative run time of the motor. When the count exceeds 65,535 hours (FRENIC-Eco/Multi) or 99,990 hours (FRENIC-MEGA), the counter will be reset to 0 and the count will start again.	~	$\checkmark$	$\checkmark$
	Remaining time before the next maintenance for motor 1 Note 1)	REMT1	Shows the time remaining before the next maintenance, which is estimated by subtracting the cumulative run time of motor 1 from the maintenance interval specified by H78.	-	-	V
	Cumulative run time of electrolytic capacitor on the printed circuit board	TCAP	Shows the product of the cumulative time of voltage being applied to the electrolytic capacitor on the printed circuit board and a coefficient determined by the environmental condition. A time to be used as a guide for replacement timing of the capacitor is indicated in brackets. For details, refer to the inverter's instruction manual, Chapter 7 "MAINTENANCE INSPECTION."	$\checkmark$	$\checkmark$	$\checkmark$
3	Cumulative run time of the cooling fan	TFAN	Shows the cumulative run time of the cooling fan. This counter does not work when the cooling fan ON/OFF control (function code H06) is enabled and the fan stops. A time to be used as a guide for replacement timing of the cooling fan is indicated in brackets. For details, refer to the inverter's instruction manual, Chapter 7 "MAINTENANCE INSPECTION."	Å	V	$\checkmark$
4	Count of startups Note 1)	NST	Shows the total count of startups of the motor (count of times when the run command for the inverter was turned ON). When the total time exceeds 65,535 hours, the counter will be reset to 0 and the count will start again.	V	V	V
	Input watt-hour Note 2)	Wh	Shows the input watt-hours of the inverter. Upon exceeding 1,000,000 kWh, the count goes back to 0.	$\checkmark$	$\checkmark$	$\checkmark$

Page # in ope. guide	Item	Symbol	Description	Eco	Multi	MEGA
	Input watt-hour data Note 2)	PD	Shows the input watt-hour data as input watt-hour (kWh) x function code E51. (The range of display is 0.001 to 9,999. Values exceeding 9,999 are expressed as 9,999.)	$\checkmark$	$\checkmark$	$\checkmark$
4	Remaining startup times before the next maintenance for motor 1 Note 1)	REMN1	Shows the start-up times remaining before the next maintenance, which is estimated by subtracting the number of start-ups from the preset start-up count for maintenance specified by H79. The display method is the same as for REMT1	-	-	$\checkmark$
	Count of RS-485 errors (COM port 1) Note 3)		above. Shows the total number of errors that have occurred in RS-485 communication (COM port 1) since first power ON.	V	V	V
	RS-485 error content (COM port 1) Note 3), Note 4)	NRR1	Shows the latest error that has occurred in RS-485 communication (COM port 1) in a code.	$\checkmark$	$\checkmark$	$\checkmark$
5	Count of RS-485 errors (COM port 2) Note 3)	NDD2	Shows the total number of errors that have occurred in RS-485 communication (COM port 2) since first power ON.	$\checkmark$	$\checkmark$	V
	RS-485 error content (COM port 2) Note 3), Note 4)	NKK2	Shows the latest error that has occurred in RS-485 communication (COM port 2) in a code.	$\checkmark$	$\checkmark$	V
	Count of option errors	NRO	Shows the cumulative count of errors detected during optional communication with option installed.	$\checkmark$	$\checkmark$	-
	Option error code		Shows the latest error that has been detected during optional communication in a code.	$\checkmark$	$\checkmark$	-
6	ROM version of the inverter	MAIN	Shows the ROM version of the inverter as a 4-digit code.	$\checkmark$	$\checkmark$	$\checkmark$
Ŭ	ROM version of the keypad	KP	Shows the ROM version of the keypad as a 4-digit code.	$\checkmark$	$\checkmark$	$\checkmark$
	ROM version of option 1	OP1	Shows the ROM version of the option connected to the A-port as a 4-digit code.	$\checkmark$	$\checkmark$	$\checkmark$
7	ROM version of option 2	OP2	Shows the ROM version of the option connected to the B-port as a 4-digit code.	-	-	$\checkmark$
	ROM version of option 3	OP3	Shows the ROM version of the option connected to the C-port as a 4-digit code.	-	-	$\checkmark$
	Temperature inside the inverter (real-time value)	TMPIM	Shows the current temperature inside the inverter.	-	-	$\checkmark$
	Temperature of heat sink (real-time value)	TMPFM	Shows the current temperature of the heat sink inside the inverter.	-	-	$\checkmark$
8	Lifetime of DC link bus capacitor (elapsed hours)	CAPEH	Shows the cumulative time during which a voltage is applied to the DC link bus capacitor. When the main power is shut down, the inverter automatically measures the discharging time of the DC link bus capacitor and corrects the elapsed time. The display method is the same as that for TCAP above.	-	-	$\checkmark$
	Lifetime of DC link bus capacitor (remaining hours)	CAPRH	Shows the remaining lifetime of the DC link bus capacitor, which is estimated by subtracting the elapsed time from the lifetime (10 years). The display method is the same as that for TCAP above.	-	-	$\checkmark$

Page # in ope. guide	Item	Symbol	Description	Eco	Multi	MEGA
	Cumulative run time of motor 1	MTIM1	Shows the content of the cumulative power-ON time counter of the 1st motor. When the count exceeds 99,990, the counter will be reset to "0" and start over again.	-	-	$\checkmark$
9	Cumulative run time of motor 2	MTIM2	Shows the content of the cumulative power-ON time counter of the 2nd motor. The display method is the same as that for MTIM1 above.	-	-	
	Cumulative run time of motor 3	MTIM3	Shows the content of the cumulative power-ON time counter of the 3rd motor. The display method is the same as that for MTIM1 above	-	-	
	Cumulative run time of motor 4	MTIM4	Shows the content of the cumulative power-ON time counter of the 4th motor. The display method is the same as that for MTIM1 above.	-	-	
	Number of startups	NST1	Shows the content of the 1st motor startup counter (i.e., the number of run commands issued). Counter range: 0 to 65,535 times When the count exceeds 65,535, the counter will be reset to "0" and start over again.	-	-	V
10	Number of startups 2	NST2	Shows the content of the 2nd motor startup counter (i.e., the number of run commands issued). The display method is the same as for NST1 above.	-	-	$\checkmark$
	Number of startups 3	NST3	Shows the content of the 3rd motor startup counter (i.e., the number of run commands issued). The display method is the same as for NST1 above.	-	-	
	Number of startups 4	NST4	Shows the content of the 4th motor startup counter (i.e., the number of run commands issued). The display method is the same as for NST1 above	-	-	$\checkmark$
	Light alarm (Latest)	LALM1	Shows the factor of the latest light alarm as an alarm code. For details, refer to the inverter's instruction manual, Chapter 6, Section 6.1 "Protective Functions."	-	-	$\checkmark$
14	Light alarm (Last)	LALM2	Shows the factor of the last light alarm as an alarm code. For details, refer to the inverter's instruction manual, Chapter 6, Section 6.1 "Protective Functions."	-	-	V
	Light alarm (2nd last)	LALM3	Shows the factor of the 2nd last light alarm as an alarm code. For details, refer to the inverter's instruction manual, Chapter 6, Section 6.1 "Protective Functions."	-	-	$\checkmark$
	Light alarm (3rd last)	LALM4	Shows the factor of the 3rd last light alarm as an alarm code. For details, refer to the inverter's instruction manual, Chapter 6, Section 6.1 "Protective Functions."	-	-	$\checkmark$

Table 3.15 Display Items for Maintenance (Continued)

Page # in ope. guide	Item	Symbol	Description	Eco	Multi	MEGA
	Count of option 1 communications errors		Shows the total number of errors that have occurred in the option connected to the A-port.	-	-	$\checkmark$
	Option 1 communications error code	NIXOA	Shows the code of the error that has occurred in the option connected to the A-port.	-	-	$\checkmark$
10	Count of option 2 communications errors	Shows the total number of errors that have occurred in the option connected to the B-port.	-	-	$\checkmark$	
12	Option 2 communications error code	NKOB	Shows the code of the error that has occurred in the option connected to the B-port.	-	-	$\checkmark$
	Count of option 3 communications errors	NROC	Shows the total number of errors that have occurred in the option connected to the C-port.	-	-	$\checkmark$
	Option 3 communications error code	NKOC	Shows the code of the error that has occurred in the option connected to the C-port.	-	-	$\checkmark$

Note 1) Available for the 1st motor only even if the inverter has the motor switching function.

- Note 2) To reset the input watt-hour and input watt-hour data to 0, set function code E51 to "0.000."
- Note 3) "COM port 1" is on the inverter; "COM port 2" is on the terminal block (FRENIC-MEGA) or on the option card (FRENIC-Eco/Multi).
- Note 4) For details of error contents, refer to the RS-485 Communication User's Manual.

#### Basic key operation

- (1) When the inverter is powered ON, it automatically enters Running mode. In Running mode, press the end key to enter Programming mode. The menu for function selection will be displayed.
- (2) Select "5. MAINTENANC" by moving the pointer  $\rightarrow$  with the  $\bigcirc$  and  $\bigcirc$  keys.
- (3) Press the  $\frac{f(MC)}{pARP}$  key to display the screen (by one page) for Maintenance.
- (4) Select the page for the desired item by using the A and keys and confirm the Maintenance data for the desired item.
- (5) Press the RESET key to go back to the menu.

Figure 3.18 shows an example of the LCD screen transition starting from Menu #5 "MAINTENANC."





### Common operation items

To access the target data, switch to the desired page using the  $\bigotimes$  and  $\bigotimes$  keys.

- ▼: This page continues to the next page.
- •: This page is continued from the previous page and continues to the next page.
- ▲: This page is continued from the previous page.

Figure 3.18 Screen Transition for "MAINTENANC"

## 3.4.7 Reading alarm information -- Menu #6 "Alarm Information" --

Menu #6 "ALM INF" in Programming mode allows you to view the information on the four most recent alarm conditions that triggered protective functions (in alarm code and the number of occurrences). It also shows the status of the inverter when the alarm condition arose.

Available alarm information differs depending on the inverter model.

## Basic configuration of screens

Figure 3.19 shows the LCD screen transition for Menu #6 "Alarm Information."

A hierarchy exists among those screens that are shifted in the order of "menu screen," "alarm list screen," and "Detailed alarm info screens."

On the "alarm list screen," you can view the current alarm and alarm history; on the "detailed alarm info screen," the information on the inverter running status at the time the alarm occurred.



Figure 3.19 Configuration of Screens for "ALM INF"

# Screen samples for viewing alarm info

The alarm list screen shows the current alarm and alarm history.



Cause use (latest) & No. of occurrences Cause (last) & No. of occurrences Cause (2nd last) & No. of occurrences Cause (3rd last) & No. of occurrences

Page # in ope. guide	Item	Symbol	Description	Eco	Multi	MEGA
	Alarm history (latest)	0/1	Alarm code and the number of occurrences	$\checkmark$	$\checkmark$	$\checkmark$
	Alarm history (last)	-1	Alarm code and the number of occurrences	$\checkmark$	$\checkmark$	$\checkmark$
_	Alarm history (2nd last)	-2	Alarm code and the number of occurrences	$\checkmark$	$\checkmark$	$\checkmark$
	Alarm history (3rd last)	-3	Alarm code and the number of occurrences	$\checkmark$	$\checkmark$	$\checkmark$

On the "detailed alarm info screen," you can view the information on the inverter running status at the time an alarm occurred. Table 3.16 lists the alarm information displayed on the LCD monitor for "ALM INF."

Table 3.16	Alarm	Information	Displayed
------------	-------	-------------	-----------

Page # in ope. guide	Item	Symbol	Description	Eco	Multi	MEGA
	Output frequency	Fot1	Output frequency (before slip compensation)	$\checkmark$	$\checkmark$	$\checkmark$
1	Output current	lout	Output current	$\checkmark$	$\checkmark$	$\checkmark$
	Output voltage	Vout	Output voltage	$\checkmark$	$\checkmark$	$\checkmark$
	Calculated torque	TRQ	Motor output torque	$\checkmark$	$\checkmark$	$\checkmark$
	Frequency command	Fref	Frequency command	$\checkmark$	$\checkmark$	$\checkmark$
	Running direction	FWD REV (Blank)	Forward Reverse Stopped	V	V	$\checkmark$
	Current limit	IL	Current limiting	$\checkmark$	$\checkmark$	$\checkmark$
	Undervoltage Voltage limit	LU VL	Undervoltage detected Voltage limiting	V	V	V
	Torque limit	TL	Torque limiting	-	$\checkmark$	$\checkmark$
2	Cumulative run time	TIME	Shows the cumulative power-ON time of the inverter. When the total time exceeds 65,535 hours, the display will be reset to 0 and the count will start again.	V	V	V
	Speed limit	SL RL	Speed limiting Rotation direction limiting	-	-	$\checkmark$
	Motor selected	M1-M4	Motor 1 to 4	-	-	$\checkmark$
	Drive control	VF DTV VF-SC VF-SL VC-PG	V/f control without slip compensation Dynamic torque vector control V/f control with slip compensation Vector control without speed sensor Vector control with speed sensor	-	-	$\checkmark$
	Number of startups	NST	Shows the cumulative count of times the motor has been started (the inverter run command has been issued). When the total count exceeds 65,535, the display will be reset to 0 and the count will start again.	V	$\checkmark$	$\checkmark$
3	DC link bus voltage	EDC	Shows the DC link bus voltage of the inverter's main circuit.	V	$\checkmark$	$\checkmark$
	Temperature inside the inverter	TMPI	Shows the temperature inside the inverter.		-	$\checkmark$
	Max. temperature of heat sink	TMPF	Shows the maximum temperature of the heat sink.	V	$\checkmark$	$\checkmark$
4	Input signals at the control circuit terminal block	TRM	ON/OFF status of input signals of the terminals [FWD], [REV], [X1] to [X9], [EN] (Highlighted when short-circuited; normal when open) Note) The number of applicable terminals differs depending on the inverter model. For detail, refer to the inverter's instruction manual.	$\checkmark$	V	$\checkmark$

Table 3.16	Alarm	Information	Displayed (	(Continued)	)
------------	-------	-------------	-------------	-------------	---

Page # in ope. guide	Item	Symbol	Description	Eco	Multi	MEGA
5 Input signals via communications link	LNK	ON/OFF status of input signals for function code S06 (Communication). [FWD], [REV], [X1] to [X9], (XF), (XR), (RST) (Highlighted when 1; normal when o)	$\checkmark$	$\checkmark$	$\checkmark$	
			differs depending on the inverter model. For details refer to the inverter's instruction manual.			
			Output signals to the terminals [Y1] to [Y4], [Y5A/C], [30A/B/C]			
6	Output signals	-	Note) The number of applicable terminals differs depending on the inverter model. For details, refer to the inverter's instruction manual.	V	$\checkmark$	V
	Overlapping alarm 1	3	Simultaneously occurring alarm codes (1) ("" is displayed if no alarms have occurred.)	$\checkmark$	$\checkmark$	$\checkmark$
7	Overlapping alarm 1	2	Simultaneously occurring alarm codes (2) ("" is displayed if no alarms have occurred.)	$\checkmark$	$\checkmark$	$\checkmark$
	Error sub-code	SUB	Secondary error code for the alarm.	$\checkmark$	$\checkmark$	$\checkmark$
	Detected speed	SPEED	Detected speed	-	-	$\checkmark$

Note The information of the first alarm is saved as "Alarm history (last)" (Symbol: -1), and that of the latest alarm is retained as " Alarm history (latest)" (Symbol: 0/1).

#### Basic key operation

- (1) When the inverter is powered ON, it automatically enters Running mode. In Running mode, press the end key to enter Programming mode. The menu for function selection will be displayed.
- (2) Select "6. ALM INF" by moving the pointer  $\rightarrow$  with the  $\bigcirc$  and  $\bigcirc$  keys.
- (3) Press the key to get the Alarm list screen, which displays information on the four most recent alarm conditions (alarm code and the number of occurrences for each alarm condition).
- (4) Select the alarm condition to be displayed, by using the  $\triangle$  and  $\bigcirc$  keys.
- (5) Press the est key to display the alarm code on the LED Monitor and the screen (by one page) for the status data at the time of the alarm on the LCD Monitor.
- (6) Select the page for the desired item by using the A and keys and confirm the status data for the desired item.
- (7) Press the est key to go back to the alarm list. Press the est key again to go back to the menu.

Figure 3.20 shows an example of the LCD screen transition starting from Menu #6 "Alarm Information."



Figure 3.20 Screen Transition for "ALM INF"



#### Input signals at the control circuit terminal block

Highlighted when short-circuited; Normal when opened

Note: The number of applicable terminals differs depending on the inverter model.

## Input signals via communications link

Highlighted when 1; Normal when 0

Note: The number of applicable terminals differs depending on the inverter model.

# Output signals

Highlighted when ON; Normal when OFF

Note: The number of applicable terminals differs depending on the inverter model.

Overlapping alarm 2 Overlapping alarm 1 Error sub-code Detected speed

Common operation items

To access the target data, switch to the desired page using the  $\bigcirc$  and  $\bigcirc$  keys.

- ▼: This page continues to the next page.
- •: This page is continued from the previous page and continues to the next page.
- ▲: This page is continued from the previous page.

Figure 3.20 Screen Transition for "ALM INF" (Continued)

#### 3.4.8 Viewing cause of alarm -- Menu #7 "Alarm Cause" --

Menu #7 "ALM CAUSE" in Programming mode allows you to view the information on the four most recent alarm conditions that triggered protective functions (in alarm code and the number of occurrences). It also shows the cause of each alarm.

#### Basic configuration of screens

Figure 3.21 shows the LCD screen transition for Menu #7 "Alarm Cause."

A hierarchy exists among those screens that are shifted in the order of "menu screen," "alarm list screen," and "detailed alarm code screens."

On the "detailed alarm code screen" of the target function code, you can view the cause of alarms.

The alarm list screen is the same as that for Menu #6 "Alarm Information."



Figure 3.21 Configuration of Screens for "ALM CAUSE"

#### Basic key operation

- (1) When the inverter is powered ON, it automatically enters Running mode. In Running mode, press the end key to enter Programming mode. The menu for function selection will be displayed.
- (2) Select "7. ALM CAUSEF" by moving the pointer  $\rightarrow$  with the  $\bigcirc$  and  $\bigcirc$  keys.
- (3) Press the expression (3) Press the expr
- (4) Select the alarm condition to be displayed, by using the  $\triangle$  and  $\bigcirc$  keys.
- (5) Press the key to display the alarm code on the LED Monitor and the screen for the cause of the alarm (can be more than 1 page) on the LCD Monitor.
- (6) Press the  $\bigcirc$  or  $\bigcirc$  key to view the previous or next page.
- (7) Press the 📾 key to go back to the alarm list. Press the 📾 key again to go back to the menu.

Figure 3.22 shows the LCD screen transition starting from Menu #7 "Alarm Cause."



Common operation items

To access the target data, switch to the desired page using the  $\triangle$  and  $\bigcirc$  keys.

- ▼: This page continues to the next page.
- •: This page is continued from the previous page and continues to the next page.
- ▲: This page is continued from the previous page.

Figure 3.22 Screen Transition for "ALM CAUSE"

## 3.4.9 Data copying -- Menu #8 "Data Copying" --

Menu #8 "Data Copying" in Programming mode provides various copy functions.

The multi-function keypad can hold three sets of function code data in its internal memory so that it can be used with three different inverters. The copy function includes "Read," "Write," and "Verify" functions, which can be used as follows.

- (a) Reading function code data out of an inverter for which function codes are already configured and then writing such function code data altogether into another inverter.
- (b) Copying the function code data saved in the inverter memory into the keypad memory for backup.
- (c) Saving function code data in the multi-function keypad as master data--saving more than one set of function code data in the multi-function keypad and writing a set of data suited to the machinery into the target inverter.



Table 3.17 lists the menu of copy function by the multi-function keypad.

Table 3.17	List of DATA COPY Operations
------------	------------------------------

Operation	Description
Read: Read data	Reads out function code data from the inverter and stores it into the internal memory of the keypad.
Write: Write data	Writes the data held in the selected memory area of the keypad into the inverter.
Verify: Verify data	Verifies the data held in the keypad's internal memory against the function code data in the inverter.
Check: Check data	Checks the model information (format) and function code data held in the three memory areas of the keypad.
Protect: Protect data	Protects the function code data saved in the internal memory of the keypad, preventing the data from overwrite.

Items that can be copied by this function are:

- Function code data
- Function code items subject to quick setup, and
- Digital frequency command and PID commands.

## **Basic configuration of screens**

Figure 3.23 shows the LCD screen transition for Menu #8 "Data Copying."

A hierarchy exists among those screens that are shifted in the order of "menu screen," "copy function list screen," and "data selection screen."

On the "data selection screen," you can select the target memory in the multi-function keypad and the desired copy function to proceed.



Figure 3.23 Configuration of Screens for "DATA COPY"

#### (1) Read operation



Select the desired menu by moving the pointer  $\rightarrow$  with  $\wedge$  /  $\vee$ 

Press key to establish the desired menu.

Select the desired operation by moving the cursor with  $\oslash$  /  $\oslash$ 

Press key to establish the desired operation.

Select the desired data by moving the cursor with  $\oslash$  /  $\oslash$ 

To go back to List of data copy operations, press (REET) key.

Press key to establish the desired data.

If "Read" is actually performed, the data read out from the inverter will overwrite the data held in this memory area in the

To go back to Data selection screen, press (HEEF) key.

Press (MR) key to start Read operation.

A bar indicating progress appears in the bottom.

Upon completion, Completion screen automatically appears.

Indicates that Read operation has completed successfully. To go back to List of data copy operations, press (REET) key.



ERROR
DATA1
DATA2
DATA3
EPPOP

RES

DATA1€INV DATA2 DATA3 DATA COPY If you press (m) / (c) key during Read operation, the operation under way will be aborted, and this Error screen will appear. (Note) Once aborted, all the data held in the keypad's memory would be deleted.

If a communication error is detected between the keypad and the inverter, this Error screen will appear.



Note If an ERROR screen or an ERROR Ver. Screen appears during operation, press the environment of the error condition. When Reset is complete, the screen will go back to List of data copy operations.

#### (2) Write operation



ERROR
DATA1
DATA2→INV
DATA3

ERROR DATA1 DATA2→INV DATA3 DATA COPY RES If you press (m) or (c) key during Write operation, the operation under way will be aborted, and this Error screen will appear. (Note) Updating of the function code data in the inverter is incomplete, with some of it remaining old. Do not run the inverter in this state. Before running the inverter, redo the writing or perform initialization.

For safety considerations, the following situations are treated as an error:

- No valid data is found in the keypad's memory. (No Read operation has been performed since factory shipment; or, a Read operation has been cancelled or aborted.)
- The data held in the keypad's memory has an error.
- There is a mismatch in inverter's model number.
- A Write operation has been performed while the inverter is running.
- The inverter is data-protected.
- The Write enable for keypad command WE-KP is OFF.

The function code data held in the keypad is incompatible with that in the inverter. (Either data may be non-standard; or a version upgrade performed in the past may have made the keypad or the inverter incompatible. Contact your Fuji Electric representative.)

Figure 3.27 Error Screens for "WRITE"

Note If an ERROR screen or an ERROR Ver. Screen appears during operation, press the error condition. When Reset is complete, the screen will go back to List of data copy operations.



#### (3) Verify operation



VERIFYING DATA1⇔INV DATA2 DATA3	<b>"In progress" screen</b> A bar indicating progress appears in the bottom.
•	Upon completion, Completion screen automatically appears.
VERIFYING END DATA1⇔INV DATA2 DATA3 DATA COPY RES	<b>Completion screen</b> Indicates that Verify operation has completed successfully. To go back to List of data copy operations, press (()) key.



ERROR DATA1⇔INV DATA2 DATA3 ■■■	If you press 🙉 / 🤅 operation under way w appear. (Note)
ERROR DATA1⇔INV DATA2 DATA3 DATA COPY RES	If the keypad does not will appear. <sup>(Note)</sup>

key during Verify operation, the ill be aborted, and this Error screen will

have any valid data, this Error screen

ERROR Ver.	
DATA1⇔INV	
DATA2	
DATA 3	
DATA COPY	RES

The function code data held in the keypad is incompatible with that in the inverter. (Either data may be non-standard; or a version upgrade performed in the past may have made the keypad or the inverter incompatible. Contact your Fuji Electric representative.)

Figure 3.29 Error Screen for "VERIFY"

Note If an ERROR screen or an ERROR Ver. Screen appears during operation, press the 📾 key to reset the error factor. When Reset is complete, the screen will go back to List of data copy operations.

#### (4) Check operation



Figure 3.30 Screen Transition for "DATA CHECK"

ERROR	
DATA1	
DATA2	
DATA3	
DATA COPY	RES

If no valid data is found in the keypad, this Error screen will appear. (Note)

Figure 3.31 Error Screen for "DATA COPY"



Note If an ERROR screen appears during operation, press the 📾 key to reset the error factor. When Reset is complete, the screen will go back to List of data copy operations.

## (5) Data protect operation

Perform the operation for function code protection on the "KP←INV READ" screen.



(Note) To release the data protection, press the (\*) key for more than five seconds in the same procedure shown above. The screen returns to the normal state (not highlighted), which indicates the selected data is not protected.

Figure 3.32 Screen Transition for "DATA PROTECT"



In the process of DATA READ operation, selecting protected data and pressing the (a) causes the screen to display the "Protected" (indicating that the data cannot be copied) and return to the normal state.

Figure 3.33 Warning Against Selecting Protected Data

#### 3.4.10 Measuring load factor -- Menu #9 "Load Factor Measurement" --

Menu #9 "LOAD FCTR" in Programming mode allows you to measure the maximum output current, the average output current, and the average braking power. There are two types of measurement modes as listed below.

Table 3.18	Measurement	Modes

Measurement Mode	Description
Limited duration measurement mode	Measuring load factors for a limited duration (hours).
Start-to-stop measurement mode	Measuring load factors from the start to stop of running.

Note If the "start to stop" mode is entered while the inverter is running, the measurement takes place until it is stopped. If the "start to stop" mode is entered while the inverter is stopped, the measurement will take place from the next start of running until it is stopped.

#### (1) Limited duration measurement mode

#### Basic key operation

- (1) When the inverter is powered ON, it automatically enters Running mode. In Running mode, press the end key to enter Programming mode. The menu for function selection will be displayed.
- (2) Select "9. LOAD FCTR" by moving the pointer  $\rightarrow$  with the  $\bigcirc$  and  $\bigcirc$  keys.
- (3) Press the (R) key to get the measurement mode selection screen.
- (4) Select the "HOURS SET" mode by moving the pointer  $\rightarrow$  with the  $\bigcirc$  and  $\bigcirc$  keys.
- (5) Press the establish the measurement mode. Then specify the measurement duration (default: 1 hour). For details, refer to the screen transition in Figure 3.34.
- (6) Press the key to start the measurement.
- (7) Press the (HISET) key to go back to the menu.

Figure 3.34 shows an example of the LCD screen transition starting from Menu #9 "Load Factor Measurement."


Figure 3.34 Screen Transition for "LOAD FCTR" (Limited duration measurement mode)

#### (2) Start-to-stop measurement mode

### Basic key operation

- (1) When the inverter is powered ON, it automatically enters Running mode. In Running mode, press the end key to enter Programming mode. The menu for function selection will be displayed.
- (2) Select "9. LOAD FCTR" by moving the pointer  $\rightarrow$  with the  $\bigcirc$  and  $\bigcirc$  keys.
- (3) Press the (Region key to get the measurement mode selection screen.
- (4) Select the "START  $\rightarrow$  STOP" mode by moving the pointer  $\rightarrow$  with the  $\bigotimes$  and  $\bigotimes$  keys.
- (5) Press the entry of a run command. For details, refer to the screen transition in Figure 3.35.
- (7) Press the est key to go back to the menu.

Figure 3.35 shows an example of the LCD screen transition starting from Menu #9 "Load Factor Measurement."



EXECUTING Imax = 0.00A Iave = 0.00A BPave = 0.0% LOAD FACTOR
STOP / (EUNC)
END
Imax = 289.4A
Iave = 182.2A
BPave= 24.0%
LOAD FACTOR

# Measurement in progress

The measurement will continue until the inverter is stopped. To discontinue the measurement, press 🛞 key.

Pressing the (TOP) / (TAR) key stops the measurement.

Measurement complete Max. output current Average output current Average braking power

(When the measurement completes, the results are displayed.)

To go back to Mode selection, press (RESET) key.





# Going back to Running mode

While the measurement of the load factor is in progress, you can go back to the running mode by pressing the (m) key (or, to the Mode selection screen by pressing the (m) key).

In these cases, the measurement of the load factor will continue. You can go back to "9. LOAD FCTR" and confirm, on the Mode selection screen, that the measurement is in progress.

After the measurement has ended, you can view the results of the measurement by pressing the key on the Mode selection screen.

Screen when the measurement is in progress





Note The results of the measurement will be deleted when the inverter is powered OFF.

## 3.4.11 Changing function codes covered by Quick setup -- Menu #10 "User Setting" --

Menu #10 "USER SET" in Programming mode allows you to change the set of function codes that are covered by Quick setup.

## Basic key operation

- (1) When the inverter is powered ON, it automatically enters Running mode. In Running mode, press the end key to enter Programming mode. The menu for function selection will be displayed.
- (2) Select "10. USER SET" by moving the pointer  $\rightarrow$  with the  $\bigcirc$  and  $\bigcirc$  keys.
- (3) Press the key to get the list of function codes.
- (4) Select the function codes to be added or deleted, by moving the pointer  $\ge$  with the  $\bigcirc$  and  $\bigcirc$  keys.
- (5) Press the key to perform the addition or deletion.
- (6) Press the est key to go back to the menu.

Figure 3.36 shows the LCD screen transition starting from the "10. USER SET" menu.





## 3.4.12 Performing communication debugging -- Menu #11 "Communication Debugging" --

Menu #11 "Communication Debugging" in Programming mode allows you to view the data of communication-related function codes (S, M, W, X, and Z codes) to help debug programs for communication with host equipment.

## Basic key operation

- (1) When the inverter is powered ON, it automatically enters Running mode. In Running mode, press the end key to enter Programming mode. The menu for function selection will be displayed.
- (2) Select "11. COMM DEBUG" by moving the pointer  $\rightarrow$  with the  $\bigcirc$  and  $\bigcirc$  keys.
- (3) Press the (2000) key to get the list of communication-related function codes.
- (4) Select the function code, by moving the pointer  $\rightarrow$  with the  $\bigcirc$  and  $\bigcirc$  keys.
- (5) Press the key to check or change the function code.
- (6) Press the (RESET) key to go back to the menu.

Figure 3.37 shows the LCD screen transition starting from the "11. COMM DEBUG" menu.



Figure 3.37 Screen Transition for Communication Debugging

# 3.5 Alarm Mode

When a protective function is triggered, resulting in an alarm, the inverter automatically enters the alarm mode, displaying the alarm code on the LED Monitor and the details of the alarm on the LCD Monitor as shown below.



Figure 3.38 Without Non-overlapping Alarm

If more than one alarm (overlapping alarm) occurs, the display appears as shown below. You can check the overlapping alarms.



If overlapping alarms occur, the most recent cause appears as "1 = alarm code," not as "0 = alarm code."

Figure 3.39 With Overlapping Alarm

Also, you can view the alarm history.

In addition to the most recent (current) alarm, you can view three recent alarms and any overlapping alarms by using the  $\bigotimes$  and  $\bigotimes$  keys while the most recent one is being displayed.



Figure 3.40 Switching of Display of Overlapping Alarm History

## Display of running status information at the time of alarm (Note 1 in Figure 3.41)

By pressing the 🛞 key while an alarm code is displayed, you can view the output frequency, output current, and other data concerning the running status. The data you can view is the same as with "6. ALM INF." Use the  $\bigotimes$  and  $\bigotimes$  keys for scrolling pages within the menu.

Also, while a past alarm code is displayed, you can view the inverter running status at the occurrence of the displayed alarm.

Pressing the model key or the with the running status information being displayed will switch back to the display of the alarm code.

#### ■ Transition to Programming mode (Note 2 in Figure 3.41)

To change function code data for investigating alarm causes or removing alarm factors, press the (ma) key while alarm information is displayed. Then the inverter enters the Programming mode, in which you can use a variety of features including function code data change.

#### Resetting alarm (Note 3 in Figure 3.41)

When you remove the cause of the alarm and press the end key, the alarm condition will be reset, and the inverter will go back to the Running mode.



Figure 3.41 Screen Transition in/from Alarm Mode

# 3.6 Other Notes

The language selection and contrast adjustment of the multi-function keypad can be made with function codes, as detailed in Sections 3.6.1 and 3.6.2, respectively.

The keypad is available in two types--multi-function keypad (TP-G1-DD) and remote keypad, which differ in the points given in Sections 3.6.3 through 3.6.6.

# 3.6.1 Language selection (Function code E46)

Function code E46 selects the language of the multi-function keypad as listed below.

Data for E46	Language	
	TP-G1-J1	TP-G1-C1
0	Japanese	Chinese
1	English	English
2	German	Japanese
3	French	Korean
4	Spanish	_
5	Italian	-

## 3.6.2 Contrast adjustment (Function code E47)

Function code E47 adjusts the contrast of the multi-function keypad as listed below.

Data for E47	0, 1, 2, 8, 9, 10	
0	Low 🔶 High	

## 3.6.3 Run command source (Function code F02)

The multi-function keypad has the (w), (n), and (w) keys and requires no rotational direction command, while the remote keypad has only the (w) and (w) keys.

Data for F02	Run command sources
0: RUN / STOP keys on keypad	Pressing the (FWD) / (FEV) / (STOP) key runs or stops the motor.
1: Terminal command (Digital external signal)	The terminal command <i>FWD</i> or <i>REV</i> runs or stops the motor.
2: Will / Stop keys on keypad (forward)	The $field field$ or $field field$ key runs the motor in the forward direction or stops it, but does not run it in the reverse direction.
3: Run / Stop keys on keypad (reverse)	The $(REV)$ or $(STOP)$ key runs the motor in the reverse direction or stops it, but does not run it in the forward direction.

## 3.6.4 Jogging operation

If the jogging operation is enabled, the remote keypad displays  $\Box \Box \Box$  on the LED monitor. However, the multi-function keypad does not display it but lights the lower indicator above the "JOG" index.

For details, refer to Section 3.3.4 "Jogging (inching) the motor."

# 3.6.5 Remote and local modes

The multi-function keypad has the (integration with the switch between the remote and local modes.

For details, refer to Section 3.3.5 "Switching between the remote and local modes."

## 3.6.6 Auto-tuning

To get the most out of the performance built into the inverter, auto-tuning the motor is required. There are the following types of auto-tuning—"tuning with the motor stopped," "tuning while the motor is running," and "tuning required depending on the drive mode." Select the proper auto-tuning type referring to the inverter's instruction manual.

### Auto-tuning procedure







<sup>(</sup>Note 1) The factory default is "Run forward" for the (wo) key on the keypad. To tune the motor parameters in the reverse direction, change setting of the function code F02.

- (Note 2) In tuning while the motor is running (P04 = 2), the inverter accelerates the motor up to around 50% of the base frequency, starts tuning of motor parameters, and decelerates to stop the motor after the end of tuning.
  - In tuning while the motor is running (P04 = 3), the inverter accelerates the motor up to around 50% of the base frequency, starts tuning of motor parameters, and decelerates to stop the motor. Then it performs the same operation again for the second round of tuning. Be careful, at that time, that the inverter automatically accelerates.

Time required for auto-tuning differs depending on the tuning method specified by P04 and the motor capacity. For details, refer to the inverter's instruction manual, Section 4.1 "Running the Motor for a Test."

## 3.7 Measuring the capacitance of DC link bus capacitor

Each part of the inverter has its own service life that will vary according to the environmental and operating conditions.

As a function to judge the service life of parts, the inverter can measure the capacitance of the DC link bus capacitor, and issue an alarm when the measured value is 85% or lower of the initial capacitance at shipment. The inverter obtains the capacitance of DC link bus capacitor by measuring the discharging time of the capacitor and calculating the capacitance value based on the measured value.

The discharging time of the DC link bus capacitor depends largely on the inverter's internal load conditions, e.g. options attached or ON/OFF of digital I/O signals. If actual load conditions are so different from the ones at which the initial/reference capacitance is measured that the measurement result falls out of the accuracy level required, then the inverter does not perform measuring. For details, refer to the inverter's instruction manual, Chapter 7 "MAINTENANCE AND INSPECTION."

The initial capacitance at shipment (reference capacitance) is usually measured with a remote keypad mounted. If the inverter is used with a multi-function keypad mounted and measures the capacitance for life prediction, set up the reference capacitance using the following procedure.

------ Reference capacitance setup procedure ------

- Set function code H98 (Protection/maintenance function) to enable the user to specify the judgment criteria for the service life of the DC link bus capacitor (Bit 3 = 1) (refer to function code H98).
- 2) Turn OFF all run commands.
- 3) Make the inverter ready to be turned OFF under ordinary operating conditions.
- 4) Set both function codes H42 (Capacitance of DC link bus capacitor) and H47 (Initial capacitance of DC link bus capacitor) to "0000."
- 5) Turn OFF the inverter, and the following operations are automatically performed.

The inverter measures the discharging time of the DC link bus capacitor and saves the result in function code H47 (Initial capacitance of DC link bus capacitor).

The conditions under which the measurement has been conducted will be automatically collected and saved. During the measurement, "...." will appear on the LED monitor.

6) Turn ON the inverter again.

Confirm that H42 (Capacitance of DC link bus capacitor) and H47 (Initial capacitance of DC link bus capacitor) hold right values. Shift to Menu #5 "Maintenance Information" and confirm that the relative capacitance (ratio to full capacitance) is 100%.

Note If the measurement has failed, "0001" is entered into both H42 and H47. Remove the factor of the failure and conduct the measurement again.

Hereafter, each time the inverter is turned OFF, it automatically measures the discharging time of the DC link bus capacitor if the above conditions are met. Periodically check the relative capacitance of the DC link bus capacitor (%) with Menu #5 "Maintenance Information" in Programming mode.

Note The condition given above produces a rather large measurement error. If this mode gives you a lifetime alarm, set H98 (Maintenance operation) back to the default setting (Bit 3 (Select life judgment threshold of DC link bus capacitor) = 0) and conduct the measurement under the condition at the time of factory shipment.

Note If the multi-function keypad is mounted, the inverter does not measure the discharging time automatically since the inverter's conditions are different from the ones applied at shipment.

# Chapter 4 SPECIFICATIONS

# 4.1 General Specifications

Table 4.1 summarizes the general specifications of the multi-function keypad "TP-G1-J1."

Item	Specifications	Remarks
Enclosure	Front side: IP40; Rear side: IP20	
Environment	Indoor only. Shall be free from corrosive gases, flammable gases, dust, and direct sunlight.	
Ambient temperature (during operation)	-10 to +50°C	
Ambient humidity (during operation)	5 to 95% RH (no condensation)	
Altitude	1000 m or below	
Vibration	$\begin{array}{rrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrrr$	
Ambient temperature (during storage)	-25 to +65°C	
Ambient humidity (during storage)	5 to 95% RH (no condensation)	
External dimensions	See the figure below.	
Mass	129 g	

# Table 4.1 General Specifications

# External dimensions







(Unit: mm)



# 4.2 Communication Specifications

Tables 4.2 and 4.3 summarize the communication specifications.

Item	Specifications	Remarks
No. of inverters connected	One inverter for one multi-function keypad	
Connection cable	Shall meet the US ANSI/TIA/EIA-568A Category 5 standard (10BASE-T/100BASE-TX, straight).	The remote operation extension cable is available as an option (CB-5S, CB-3S, or CB-1S, depending on the distance).
Maximum communication distance	20 m	
Connector	RJ-45 connector	See Table 4.3.

Table 4.2 Hardware Specifications

#### Table 4.3 RJ-45 Connector Pin Assignment

Pin #	Signal name	Description	Remarks	
1, 8	Vcc	DC power source for the multi-function keypad (5 V)	Pin #1	
2, 7	GND	Reference potential	Pin #8	
3, 6	NC	Unassigned (reserved)		
4	DX -	RS-485 communication data ( - )		
5	DX +	RS-485 communication data (+)	Female port Male port	
			Back of Multi-function Keypad	

Note SW3 for the terminating resistor on the control circuit board in the inverter must be set to OFF (open).

# 4.3 Transmission Specifications

Table 4.4 summarizes the transmission specifications.

Table 4.4 Transmission Specifications

Item	Specifications	Remarks	
Area code	No need to specify.	There is no need to specify function	
Communications protocol	Modbus-RTU	codes y01 through y10 for RS-485 communication, which will be ignored	
Synchronization system	Start-stop	anyway.	
Communication system	Half-duplex		
Communication speed (Baud rate)	19200 bps		
Parity	Even parity		
Stop bit length	1 bit		
Error checking	CRC-16		

# 多機能タッチパネル / Multi-function Keypad "TP-G1-J1"

# 取扱説明書 / Instruction Manual

First Edition, December 2007 Third Edition, April 2011 Fuji Electric Co., Ltd.

- この取扱説明書の一部または全部を無断で複製・転載することはお断りします。
- この説明書の内容は将来予告なしに変更することがあります。
- ●本書の内容については、万全を期して作成いたしましたが、万一ご不審の点や誤り、記載もれなど、 お気づきの点がありましたら、ご連絡ください。
- 運用した結果の影響については、上項にかかわらず責任を負いかねますのでご了承ください。

The purpose of this instruction manual is to provide accurate information in handling, setting up and operating of Multi-function keypad "TP-G1-J1" for the FRENIC-Eco/Multi/MEGA series of inverters. Please feel free to send your comments regarding any errors or omissions you may have found, or any suggestions you may have for generally improving the manual.

In no event will Fuji Electric Co., Ltd. be liable for any direct or indirect damages resulting from the application of the information in this manual.

# 富士電機株式会社 パワエレ機器事業本部 ドライブ事業部

〒141-0032 東京都品川区大崎一丁目 11 番 2 号 (ゲートシティ大崎イーストタワー) URL http://www.fujielectric.co.jp/

# Fuji Electric Co., Ltd.

Gate City Ohsaki, East Tower, 11-2, Osaki 1-chome, Shinagawa-ku, Tokyo 141-0032, Japan URL http://www.fujielectric.com/