

FUNCTION CODE	Detail	Address
S01	Frequency reference (p.u.)	401794
S02	Torque command	401795
S03	Torque current command	401796
S05	Frequency reference	401798
S06	Operation command	401799
S07	Universal DO	401800
S08	Acceleration time F07	401801
S09	Deceleration time F08	401802
S10	Torque limit value 1-1	401803
S11	Torque limit value 1-2	401804
S12	Universal AO	401805
S13	PID command	401806
S14	Alarm reset command	401807
S19	Speed command	401812