

# UB400-F42-UK-V95

	04011111
	100 mm x 100 mm
	approx. 390 kHz
	approx. 50 ms
6	
	solid green: Power on
	solid: switching state switch output flashing: program function
	normal operation: "fault" program function: no object detected
	$\leq$ 3 A Slow-blow fuse in accordance with IEC 60127-2 Sheet 5 required. Recommendation: after a short circuit, check that the device is functioning correctly.
	22 253 V AC/DC
	≤ 60 mA
ty t <sub>v</sub>	≤ 800 ms
	1 relay output
	3 A
	$\leq$ 0.5 % of switching point
	≤ 8 Hz
	1 % of the set operating distance
	± 1 % of full-scale value
	-25 70 °C (-13 158 °F)
	-40 85 °C (-40 185 °F)
	IP65
	5-pin V95 connector (7/8"-16 UN 2A)
	РВТ
	epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT

40 ... 400 mm

50 ... 400 mm


0 ... 40 mm


EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012

TR CU 004/2011 TR CU 020/2011



260 g

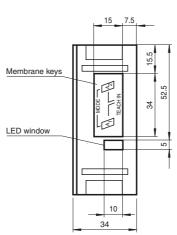

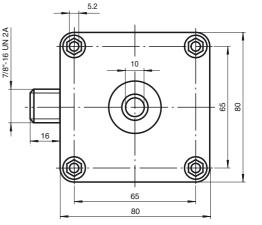

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




1

# **Electrical Connection**

 

### Pinout

 

# Accessories

V95-G-Y Female connector, 7/8" - 16 UN, 5-pin, field attachable

## V95-W-5M-PVC

Female cordset, 7/8", 5-pin, PVC cable

V95-W Female cordset, field attachable

V95-W-2M-PVC Female cordset, 7/8", 5-pin, PVC cable

MH 04-3505 Mounting aid for FP and F42 sensors

MHW 11 Mounting brackets for sensors

## Safety notes:

The supply circuit is separated from the relay circuit by basic insulation.

Safety class II is only guaranteed when using cable connectors listed in the accessories. The connector cable may only be separated from the unit when the power is off.

## **CAUTION:**

The UB...-F42(S)-UK-V95 ultrasonic sensor is <u>not</u> suitable for use in environments subject to explosion hazards.

Conformity:	EN 60947-5-2
Housing insulation:	Safety class II
Degree of contamination:	3
Overvoltage category:	III

## Parameterisation:

You can use 2 keys to parameterise the sensor. In order to start the switch point 1 learning mode, press the A1 key; in order to start the switch point 2 learning mode, press the A1 key.

If you keep both keys pressed as you switch on the power supply, the sensor will switch over to the sensitivity adjustment mode of operation.

 
In case the parameterisation procedure is not completed within 5 minutes, the sensor will discontinue the process and retain all previous settings.

# Additional Information

## Possible operating modes

### 1. Switch point operation

normally open A1 -> ∞	A2		
normally closed A2 -> $\infty$	A1		
2. Window operation			
normally open A1 < A2	A1 A2		
normally closed A2 < A1	A2 A1		
3. Hysteresis operation			



4. Object presence detection mode

A1 ->  $\infty$ , A2 ->  $\infty$ : Sensor detects object presence within sensing range Note A1 ->  $\infty$ , A2 ->  $\infty$  means: cover sensor with hand

or remove all objects from sensing range



Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com fa Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



### Teaching in switch points:

Teaching in A1 switch point by pressing A1 key.	
Keep A1 key pressed for > 2 s	The sensor enters the switch point 1 learning mode
Position target object in the desired distance	The sensor indicates via LED lights whether the target object has been detected. In case the object has been detected, the yellow LED will flash; if the object has not been detected, the red LED flashes.
Briefly press the A1 key	The sensor completes the switch point 1 TEACH- IN process and saves this value in non-volatile memory. In the event of an uncertain object (flashing red LED), the value learned is invalid. The system exits the TEACH-IN mode.

Analogously, the A2 switch point is learned in the same fashion as described above using the A2 key.

### Switching hysteresis operation mode <--> switch point/window operation mode:

Keep both A1 and A2 keys pressed	The sensor indicates the current operation mode through the green LED. permanent green: Switch point/window operation mode flashing green: Hysteresis operation mode
after 2 seconds:	The sensor changes the operation mode which can be identified through the green LED. permanent green: Switch point/window operation mode flashing green: Hysteresis operation mode
Release keys	The green LED of the sensor keeps indicating the operation mode selected for additional 5 seconds

 
### Suppression of disturbing targets

Some types of installation or particular conditions during operation of an ultrasonic sensor may admit that undesired objects (such as shelf brow posts, edges of machines) are closer than the actual target as they enter the recording range. In this case, the sensor would normally detect these objects rather than the desired target. So in order to ensure an error-free operation, in may be necessary to suppress those objects.

Objects can be suppressed if they meet the following conditions:


- The disturbing target must not hide the actual target completely.
- The amplitude of the disturbing signal must be smaller than the amplitude of the desired signal.
- The disturbing target must remain in the edge region of the sound lobe and must not enter its center.

### Sound lobe



The suppression of the disturbing target is effected through reduction of the response sensitivity. This figure shows its effect on the response characteristics of the sensor. The sensor is preset on step 1 by the manufacturer.



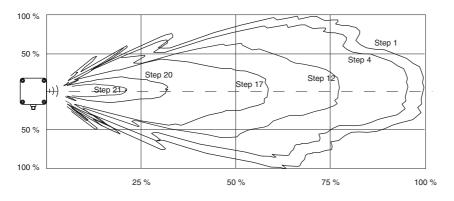

## Sensitivity adjustment for suppression of disturbing targets

Remove the actual target object from the detection range.

Keep A1 and A2 keys pressed as you switch on power supply	The sensor enters the sensitivity adjustment mode of operation. The sensor sensitivity can be adjusted in 24 steps. Step 1 = high response Step 24 = low response
Briefly press the A1 key	Response is increased. The LED lights indicate the actual state of the sensor. - flashing red: no disturbing target detected - flashing yellow: disturbing target detected - permanent red: upper setting limit is reached.
Briefly press the A2 key	Response is decreased. The LED lights indicate the actual state of the sensor. - flashing red: no disturbing target detected - flashing yellow: disturbing target detected - permanent red: lower setting limit is reached.
Press both A1 and A2 keys at once	Exiting sensitivity adjustment. The sensor response is saved in non-volatile memory. In the event the sensitivity adjustment is not exited through this procedure, the sensor will exit this operation mode automatically after 5 minutes, and the previous sensitivity value remains valid.



