3 SCHMERSAL

EN	Operating instructions.	 iges 1 to	12
(EN)	Operating instructions.	 iges 1 to	

C	٦n	tο	ni	1
U	ш	ιe	ш	

1 About this document	
1.1 Function	
1.2 Further applicable documents	
1.3 Target group: authorised qualified personnel	
1.4 Explanation of the symbols used	
1.5 Appropriate use	
1.6 General safety instructions	
1.7 Warning about misuse	
1.8 Exclusion of liability	. 2
2 Product description	_
2.1 Ordering code	
2.2 Purpose	
2.3 Technical data	
2.4 Safety classification	. ن
2 Mounting	
3 Mounting 3.1 General mounting instructions	1
3.2 Dimensions	
3.3 Accessories	
3.3 Accessories	.4
4 Electrical connection	
4.1 General information for electrical connection	5
4.2 Notes for replacing the device	
4.3 Power supply and fuse protection	
4.4 Internal fuse elements device ports	
4.5 Earth concept and shielding	
4.6 Overview of connections and LED indicators	
4.7 Connector configuration of device ports X0 – X7	
4.8 Connector configuration POWER I/O	
4.9 Connector configuration PROFINET P1/P2	
4.10 Setting the F-address and factory reset	
·	
5 Diagnostic functions	
5.1 LED indicators, device ports X0 - X7	7
or EED indicators, device perto No Nr	٠,
5.2 LED indicators, PROFINET ports P1/P2	. 8
5.2 LED indicators, PROFINET ports P1/P2	. 8

6.1	Set-up and maintenanceFunctional testing8Maintenance.8
7.1	Disassembly and disposalDisassembly8Disposal8
8.1 8.2	Annex system configuration Configuration examples of the power supply
9	EU Declaration of conformity

1. About this document

1.1 Function

These operating instructions provide all the information required for mounting, commissioning, safe operation and also disassembly of the safety fieldbox. The operating instructions must be available in a legible condition and a complete version in the vicinity of the device.

1.2 Further applicable documents

Enter search term "SFB-PN" in the Schmersal Online Catalogue at: products.schmersal.com.

- Manual: Safety Field Box SFB-PN-V2
- Operating instructions: Safety Field Box SFB-PN-V2
- GSDML File
- Manual: SFB Configuration Tool

1.3 Target group: authorised qualified personnel

All operations described in this operating instructions and in the manual must be carried out by trained specialist personnel, authorised by the plant operator only.

Please make sure that you have read and understood these operating instructions and the manual and that you know all applicable legislations regarding occupational safety and accident prevention prior to installation and putting the component into operation.

The machine builder must carefully select the harmonised standards to be complied with as well as other technical specifications for the selection, mounting and integration of the components.

1.4 Explanation of the symbols used



Information, hint, note:

This symbol is used for identifying useful additional information.



Caution: Failure to comply with this warning notice could lead to failures or malfunctions.

Warning: Failure to comply with this warning notice could lead to physical injury and/or damage to the machine.

1.5 Appropriate use

Products in Schmersal's range are not intended to be used by private end consumers.

The products described in these operating instructions are developed to execute safety-related functions as part of an entire plant or machine. It is the responsibility of the manufacturer of a machine or plant to ensure the correct functionality of the entire machine or plant.

The safety fieldbox must only be used according to the following versions or for applications that are approved by the manufacturer. Detailed information regarding the range of applications can be found in the chapter "Product description".

1.6 General safety instructions

The user must observe the safety instructions in this operating instructions manual, the country specific installation standards as well as all prevailing safety regulations and accident prevention rules.

The information contained in this operating instructions manual is provided without liability and is subject to technical modifications. There are no residual risks, provided that the safety instructions as well as the instructions regarding mounting, commissioning, operation and maintenance are observed.

1.7 Warning about misuse



In the event of improper or unintended use or tampering, use of the safety fieldbox could expose persons to danger or cause damage to the machine or system components.

1.8 Exclusion of liability

We shall accept no liability for damages and malfunctions resulting from defective mounting or failure to comply with this operating instructions manual. The manufacturer shall accept no liability for damages resulting from the use of unauthorised spare parts or accessories.

For safety reasons, invasive work on the device as well as arbitrary repairs, conversions and modifications to the device are strictly forbidden; the manufacturer shall accept no liability for damages resulting from such invasive work, arbitrary repairs, conversions and/or modifications to the device.

2. Product description

2.1 Ordering code

This operating instructions manual applies to the following types:

SFB-PN-IRT-8M12-IOP-V2

Option	Description	
SFB	Safety fieldbox	
PN	PROFINET	
IRT	Switch IRT-capable	
8M12	8 device ports for M12 connector, 8-pole	
IOP	Device connection: IO parallel	
V2	Version 2	

2.2 Purpose

The SFB-PN-IRT-8M12-IOP-V2 safety fieldbox is designed for connection of up to 8 safety switchgear units with parallel IO signals to a PROFINET/PROFIsafe network.

A maximum of 4 BDF200-FB control panels can be connected.



Only safety switchgears are allowed to be connected for which the feedback of an external voltage can be safely excluded.

The safety signals from the connected safety switchgear are forwarded to a safety controller via the safety field bus for evaluation. For larger safety applications, multiple fieldboxes can be connected to the power supply and field bus in series.



The user must evaluate and design the safety chain in accordance with the relevant standards and the required safety level.

The non-safe IO signals of the connected devices are connected to the control system via the field bus.

Safety switchgear with parallel IO signals can be connected to device ports X0 - X7.

BDF200-FB control panels can only be connected to device ports X4 - X7.



Manual: Safety fieldbox SFB-PN-V2

Further information on the commissioning of the safety SFB-PN-V2 fieldbox can be found in the manual.



GSDML file for safety fieldbox SFB-PN-V2

The dual-language GSDML file for the SFB-PN-V2 can be found on the internet at **products.schmersal.com** after searching 'SFB-PN'.

A GSDML file is also saved in the device. The file can be downloaded via the integrated web server (see 'Info' page).

2.3 Technical data

Standards:	EN 61131-1, EN 61131-2, E	
	EN ISO 13849-	1, IEC 61508
Time to readiness:		≤8s
Worst Case Delay Time Inpu	t acc. DIN EN 61784-3-3:	≤ 20 ms
Worst Case Delay Time Outp	out acc. DIN EN 61784-3-3:	≤ 50 ms
Device Watchdog Time acc.	DIN EN 61784-3-3:	10 ms
Device Acknowledgement Ti	me acc. DIN EN 61784-3-3:	≤ 25 ms
Materials:		
- Enclosure:	polyami	de / PA 6 GF
- Viewing window:	polyamid	le / PACM 12
- Encapsulation:	polyureth	nane / 2K PU
- Labelling plates:	pc	olyamide / PA
Mechanical data	·	-
Electrical connection version	: Built-in socke	et / connector
- Device ports X0 - X7:	M12/8-p	ole, A-coded
Dower I/O	M42 DOWED/4 =	•

Mechanical data	
Electrical connection version:	Built-in socket / connector
- Device ports X0 - X7:	M12/8-pole, A-coded
- Power I/O:	M12-POWER/4-pole, T-coded
- PROFINET P1/P2:	M12/4-pole, D-coded
M12 connector tightening torque:	min. 0.8 Nm / max. 1.5 Nm
- Recommended for Schmersal cables:	1.0 Nm
Fixing screws:	2 x M6
- Tightening torque:	max. 3.0 Nm
Viewing window screws:	2 x Torx 10
- Tightening torque:	0.5 0.6 Nm
A 1.1 (1141	

Tightoning torque	0 F 0 G N m
- Tightening torque:	0.5 0.6 Nm
Ambient conditions	
Ambient temperature:	−25 °C +55 °C
Storage and transport temperature:	−25 °C +70 °C
Relative humidity:	10 % 95 %, non condensing
Resistance to shock:	30 g / 11 ms
Resistance to vibration:	5 10 Hz, amplitude 3.5 mm;
10	150 Hz, amplitude 0.35 mm / 5 g
Degree of protection:	IP66/IP67 acc. EN 60529
Installation altitude above sea level:	max. 2,000 m
Protection class:	III
Insulation values to EN 60664-1:	
- Rated insulation voltage U _i :	32 VDC
- Rated impulse withstand voltage U _{imp} :	0.8 kV
- Over-voltage category:	III
Degree of pollution:	2

- Degree of pollution: Flectrical data - Power I/O

Electrical data – Power I/O	
Supply voltage U _B :	24 VDC -15% / +10%
	(stabilised PELV mains unit)
Current consumption SFB:	200 mA
Rated operating voltage U _e :	24 VDC
Rated operating current I _e :	10 A
	(external fuse protection required)

Device fuse rating: ≤ 10 A slow blow when used to UL 61010



Adapters providing field wiring means are available from the manufacturer. Refer to manufacturer's information.

Use power cables with minimum AWG14, 80°C, 24Vdc rating.

UL 248 fuse (slow blow) or UL 489 Circuit breaker, rated max. 10 A or equivalent.

Operating instructions Safety fieldbox

Electrical da Maximum ca						30 m
Safety input	ts:				Х	1 and X2
Switching the	resholds (a	cc. EN 6	31131, type 1):	_	3 V	5 V (Low)
				13	V 30	V (High)
Current cons	sumption pe	er input:			< 6 ı	mA / 24 V
Permissible residual drive current:				< 1.0 mA		
Accepted test pulse duration on input signal:			0	0.01 ms 1.0 ms		
- With test pulse interval of:				20 ms	120 s	
Classification	n:				ZV	'EI CB24I
Sink:	C1		Source:	C1	C2	C3
Test pulse of	outputs:				Υ	1 and Y2
Switching ele	ements:			p-type, s	short-cir	cuit proof
Rated opera	ting voltage	e U.:				24 VDC

Test pulse outputs:	Y1 and Y2
Switching elements:	p-type, short-circuit proof
Rated operating voltage U _e :	24 VDC
Rated operating current I _e :	Y1: 15 mA
	Y2: 10 mA at 24 V/30 mA at GND
Leakage current I _r :	≤ 0.5 mA
Voltage drop U _d :	≤ 1 V
Test pulse duration:	≤ 1 ms
Test pulse interval:	500 ms
Classification:	ZVEI CB24I
Source: C1	Sink: C1

Digital output:	DO
Switching elements:	2 p-type, short-circuit proof
Utilisation category:	DC-12 / DC-13
Rated operating voltage U _e :	24 VDC
Rated operating current I _e :	0.8 A
Leakage current I _r :	≤ 0.5 mA
Voltage drop U _d :	≤ 2 V
Inductive load:	≤ 400 mH
Switching frequency output:	≤ 1 Hz
Test pulse duration:	≤ 1 ms
Test pulse interval:	15 500 ms
Classification:	ZVEI CB24I
Source: C1	Sink: C1

Diagnostics input/FB interface:	DI
Switching thresholds:	−3 V 5 V (Low)
	13 V 30 V (High)
Current consumption per input:	< 12 mA / 24 V
Permissible residual drive current:	< 1.0 mA
Input debounce filter:	10 ms
FB interface data transmission rate:	19.2 kBaud
Power supply devices:	A1 and A2
Rated operating voltage U _e :	24 VDC
Rated operating current I _e :	0.8 A
Device port line fuse:	1.5 A
lintograta	d automatic resettable fuce)

 DDOEINET DAIDS
(integrated automatic resettable fuse)

Electrical data – PROFINET P1/P2

Field bus protocol:	PROFINET / PROFIsafe
Specification:	
- PROFINET:	V2.3, Conformance class C
- Supported options:	MRP, fast start-up
- PROFIsafe	V2.4
Network load class, PROFINET:	3
Transmission rate:	100 Mbit/s Full Duplex
PROFINET addressing:	via DCP
Integrated switch:	Dual port, 100 Mbit/s, IRT-capable
Supported PROFINET services:	I&M0 to I&M3, SNMP, LLDP
Service interface:	Web interface HTTP

LED indications

8 x LED green/red 'E':	Error LED, device port
8 x LED yellow 'I':	Input LED, device port
2 x LED green 'L':	Link LED, Ethernet port
2 x LED green 'A':	Activity LED, Ethernet port
1 x LED green/red 'SF':	System fault LED
1 x LED red 'BF':	Bus fault LED
1 x LED green/red 'Err':	Error LED, fieldbox
1 x LED green 'Pwr':	Power LED, fieldbox



All fieldboxes have a good resistance against chemicals and oil. When used in aggressive media (e.g. chemicals, oils, lubricants and coolants in high concentrations) the material resistance must in each case be checked in advance for the specific application.



The sum of the total current of the individual device ports X0-X7 for outputs A1 (power supply to devices) and DO (digital output) should not exceed 850 mA.



Protection class IP67 is only reached if all M12 connectors and blanking plugs, as well as the viewing window are properly fastening with screws.

2.4 Safety classification

- Safety inputs, 2-channel:

Standards:	EN ISO 13849-1, IEC 61508, EN 62061	
PL:	е	
Control Category:	4	
DC:	99 %	
PFH:	1.1 x 10 ⁻⁹ /h	
PFD _{avg} :	9.6 x 10 ⁻⁵	
SIL:	suitable for SIL 3 applications	
Mission time:	20 years	
Response time of local safety	input > PROFINET: 20 ms	
The SFB fulfills the requirements as PDDB according to EN 60947-5-3		
in combination with magnetic sensors (2 NC contacts) up to PL e / SIL 3.		

- Safety inputs, 1-channel:

Standards:	EN ISO 13849-1, IEC 61508, EN 62061
PL:	d
Control Category:	2
DC:	90 %
PFH:	2.3 x 10 ⁻⁷ /h
PFD _{avq} :	2.0 x 10 ⁻²
SIL:	suitable for SIL 1 applications
Mission time:	20 years
Response time of local safety i	nput > PROFINET: 20 ms
Test interval for error detection	: 10 s

- Safety outputs, 1 wire (PL d):

Standards:	EN ISO 13849-1, IEC 61508, EN 62061
PL:	d
Control Category:	3
DC:	90 %
PFH:	1.0 x 10 ⁻⁷ /h
PFD _{avq} :	8.8 x 10 ⁻³
SIL:	suitable for SIL 2 applications
Mission time:	20 years
PROFINET reaction time >	local safety output: 50 ms

- Safety outputs, 2 wires (PL e):

- Salety outputs, 2 wires (PL t	,
Standards:	EN ISO 13849-1, IEC 61508, EN 62061
PL:	е
Control Category:	4
DC:	99 %
PFH:	1.2 x 10 ⁻⁹ /h
PFD _{avg} :	1.1 x 10 ⁻⁴
SIL:	suitable for SIL 3 applications
Mission time:	20 years
PROFINET reaction time > local	al safety output: 50 ms



This product must only be replaced in the application by an identical product of type SFB-PN-IRT-8M12-IOP-V2 with part no. 103040357.

The older product version has a lower safety level.

S SCHMERSAL (EN) 3

Operating instructions Safety fieldbox

Safety response times, SFB-PN-V2

The overall reseponse time of a safety function is made up of the following:

- · Response time of the connected safety switchgear
- Delay time safety fieldbox SFB-PN-V2 (WCDT_Input ≤ 20 ms)
- PROFINET/PROFIsafe transmission time
- Cycle time F runtime group F-PLC
- Response time of safety shut-off element (actuator)



In addition to the maximum response time of the SFB-PN-V2, the response times of the connected safety switchgear, the transmission time from PROFINET and the response times of additional PROFIsafe components (if applicable) must be taken into consideration.



The maximum acceptable response times of the safety functions are defined in the risk analysis of the machine.

3. Mounting



The field box must be installed in a way that only authorised specialist personnel can access it.

3.1 General mounting instructions


Fasten fieldbox with two M6-screws on a flat mounting surface, for mechanically strain-free installation. The maximum tightening torque is 3.0 Nm. Any mounting position.



Do not install fieldbox outside closed rooms.

3.2 Dimensions

All measurements in mm.

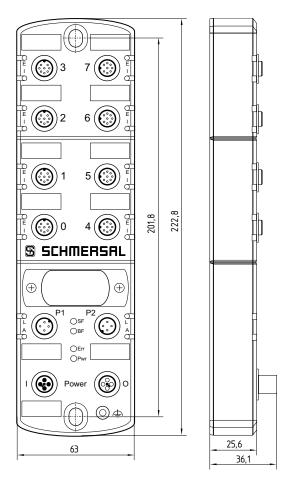

3.3 Accessories

Further accessories can be found under the search term "SFB-PN" in the Schmersal Online Catalogue at **products.schmersal.com**.

3.3.1 Pre-wired and connecting cables

Device connection – Cable M12, 8 poles, straight, A-coded		
0.5 m	Connecting cable, male / female connectors	101217786
1.0 m	Connecting cable, male / female connectors	101217787
1.5 m	Connecting cable, male / female connectors	101217788
2.5 m	Connecting cable, male / female connectors	101217789
3.5 m	Connecting cable, male / female connectors	103013428
5.0 m	Connecting cable, male / female connectors	101217790
7.5 m	Connecting cable, male / female connectors	103013429
10.0 m	Connecting cable, male / female connectors	103013125
15.0 m	Connecting cable, male / female connectors	103038984
20.0 m	Connecting cable, male / female connectors	103038566
30.0 m	Connecting cable, male / female connectors	103038567

Power – C	Power – Cable M12, 4 poles, straight, T-coded		
5.0 m	Pre-wired cable, female connector	103013430	
10.0 m	Pre-wired cable, female connector	103013431	
20.0 m	Pre-wired cable, female connector	103038975	
30.0 m	Pre-wired cable, female connector	103038976	
1.5 m	Connecting cable, male / female connectors	103025136	
3.0 m	Connecting cable, male / female connectors	103013432	
5.0 m	Connecting cable, male / female connectors	103013433	
7.5 m	Connecting cable, male / female connectors	103013434	
10.0 m	Connecting cable, male / female connectors	103038978	

Ethernet – Cable M12, 4 poles, straight, D-coded, shielded			
5.0 m	Connecting cable, RJ45 to connector M12	103013435	
7.5 m	Connecting cable, RJ45 to connector M12	103013436	
10.0 m	Connecting cable, RJ45 to connector M12	103013437	
20.0 m	Connecting cable, RJ45 to connector M12	103038980	
1.5 m	Connecting cable, male / male connectors	103038982	
3.0 m	Connecting cable, male / male connectors	103013438	
5.0 m	Connecting cable, male / male connectors	103013439	
7.5 m	Connecting cable, male / male connectors	103013440	
10.0 m	Connecting cable, male / male connectors	103038983	

3.3.2 Adapter cables

M12-Adapter cables, 8 poles to 4 poles			
2.5 m	VFB-SK8P/4P-M12-S-G-2,5M-BK-2-X-A-4	103032864	
5.0 m	VFB-SK8P/4P-M12-S-G-5M-BK-2-X-A-4	103032865	

Y-Adapter cables for Schmersal AOPD				
1.0 m	m SFB-Y-SLCG-COM-8P-S-G-1M-BK-2-X-A-4 10303286			
1.0 m	SFB-Y-SLCG-8P-S-G-1M-BK-2-X-A-4	103032867		

3.3.3 Further accessories

Sealing stickers for inspection window, 4 pcs	103013919
Protective caps for M12 sockets, 10 pcs	103013920
Labels, frame 4 x 5 pcs	103035090

4. Electrical connection

4.1 General information for electrical connection



The electrical connection may only be carried out by authorised personnel in a de-energised condition.

To supply the safety fieldbox, M12 power connectors, cables with a cross-section of max. 1.5 mm² can be connected to the fieldbox.



In case of a fault, a voltage of up to $60\ V$ can be applied to the device ports.

4.2 Notes for replacing the device

To replace a defective SFB, follow the steps below:

- Bring the machine and the SFB into a de-energised state
- Check replacement device for correct version



This product must only be replaced in the application by an identical product of type SFB-PN-IRT-8M12-IOP-V2 with part no. 103040357.

The older product version has a lower safety level.



The replacement of the older SFB-PN-IRT-8M12-IOP with the newer SFB-PN-IRT-8M12-IOP-V2 is possible.

- The replacement device must be in the delivery state. If necessary, carry out a "factory reset" (see 4.10).
- Set or transfer the safety address to the new device (see 4.10).
- Mount and install the unit
- Put the system and SFB back into operation
- Check all safety functions




The simple device change is only possible if the

"Support device replacement without exchangeable medium" has been activated in the F-CPU for the PROFINET interface under

"General / Advanced options / Interface options".

4.3 Power supply and fuse protection


The supply voltage of the safety fieldbox is to be protected with a fuse of 10 A. In order to increase the cable cross section for the supply voltage of the fieldbox, both connections from Us and GND must be connected in parallel. Pins 1 + 4 and 2 + 3 in the fieldbox are bridged.

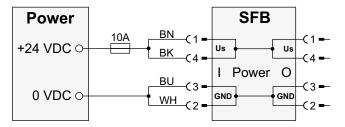

4.4 Internal fuse elements device ports

The device ports X0 - X7 are designed for 0.8 A continuous current and equipped in each case with an auto-resettable fuse of 1.5 A for line protection. If the fuse element is triggered, the red LED on the device port flashes with 4 pulses.

 After eliminating the overload at one of the device ports, the fuse resets itself after a short cool-down phase.




4.5 Earth concept and shielding


A functional earth is connected for fault-free operation of the safety fieldbox. Earth loops must be avoided when connecting the functional earth

The FE functional earth is normally connected via the switch. In the event of EMC problems, the fieldbox can be earthed via the separate FE connection.


An earth strap is available as an accessory.

Wiring examples for avoidance of earth loops:

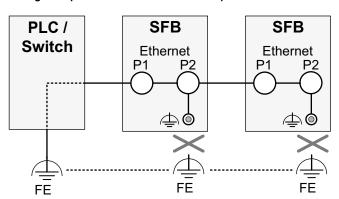

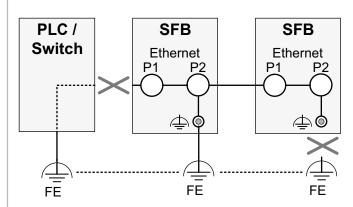

4.6 Overview of connections and LED indicators

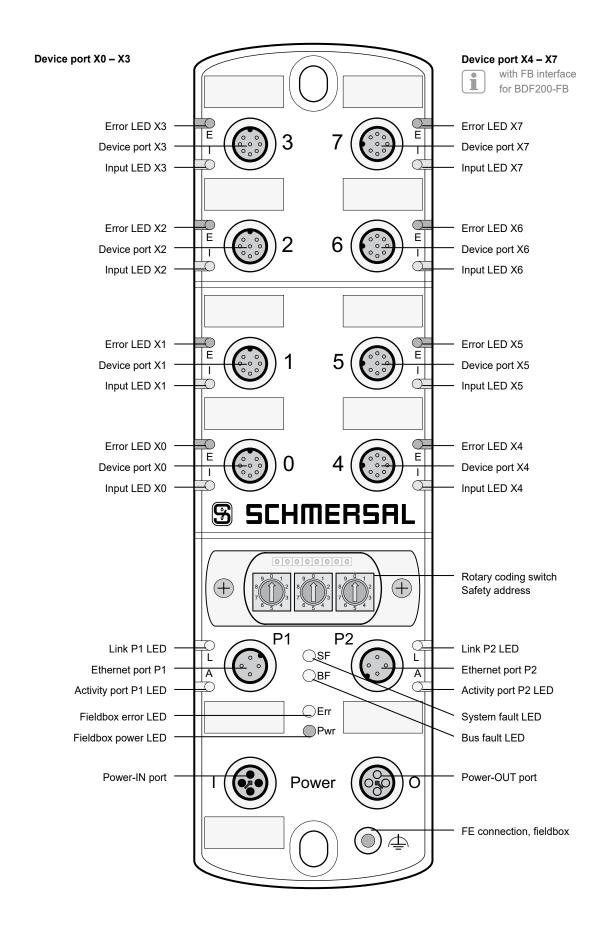

4.7 Connector configuration of device ports X0 - X7

Version: M12 socket, 8-pin, A-coded

PIN	Colour*	Signal	Description of fieldbox signals
1	WH	A1	+ 24 VDC device supply
2	BN	Y1	Test pulse output 1,
			safety channel 1 supply
3	GN	A2	0 VDC device supply
4	YE	X1	Safety input 1
5	GY	DI	Diagnostic-input / FB-Interface
6	PK	Y2	Test pulse output 2,
			safety channel 2 supply
7	BU	X2	Safety input 2
8	RD	DO	Safe output

X4 - X7 additional with FB interface for BDF200-FB



The default setting is used for safety switchgear with electronic OSSDs. If safety switchgear with dry contacts are used, cross fault monitoring must be activated. For safety switchgear with electronic OSSDs, cross fault detection of the device connection cable must be carried out by the safety switchgear.

4.8 Connector configuration POWER I/O

Version: M12 power connector/socket, 4-pin, T-coded

PIN	Colour*	Signal	Description of fieldbox signa	ls
1	BN	Us	+ 24 VDC SFB supply	(= PIN 4)
2	WH	GND	0 VDC SFB supply	(= PIN 3)
3	BU	GND	0 VDC SFB supply	(= PIN 2)
4	BK	Us	+ 24 VDC SFB supply	(= PIN 1)

4.9 Connector configuration PROFINET P1/P2

Version: M12 socket, 4-pin, D-coded

PIN	Colour*	Signal	Description of fieldbox signals
1	YE	TD+	Transmit-Data +
2	WH	RD+	Receive-Data +
3	OG	TD-	Transmit-Data -
4	BU	RD-	Receive-Data -
Flang	je	FE	Ethernet shielding

^{*} Colour code of SCHMERSAL M12 cables

4.10 Setting the F-address and factory reset

Carefully remove the viewing window. (Screws Torx 10)



The screws of the viewing window are not secured. Keep the screws safe so that they do not get lost.



Caution

Electrostatically sensitive components.

Do not touch the printed circuit board directly.



When you open the inspection window, ensure that no moisture or excessive humidity penetrates into the fieldbox.

The 3 rotary coding switches behind the viewing window can be used to set the safety address and to carry out a factory reset of the SFB.

F address

1 - 999 Valid F address 0 - 0 - 0 Factory reset

Setting of the F address

- · Remove power from the SFB
- Set the desired F address in the range 1 999
- Resupply power to the SFB

Carrying out an SFB factory reset:

- Remove power from the SFB
- Setting of F address 0 − 0 − 0
- Resupply power to the SFB
- After 15 seconds, switch off the power of the SFB-PN again
 The IP address and the PROFINET name are deleted during a factory reset.

5. Diagnostic functions

5.1 LED indicators, device ports X0 - X7

There are 2 LED indicators on each device port.

A green/red error LED and a yellow input LED to display the switching condition at the safety inputs.

Error LED (E)

The error LED may exhibit the following display and flashing pattern:

LED display		Description
GREEN	ON	No fault at device port
GREEN	Flashes	Device port fault can be acknowledged
RED	1 impulse	Safety input cross-fault
RED	2 impulses	Safety input fault
RED	3 impulses	Test pulse output fault
RED	4 impulses	Device supply overload
RED	5 impulses	Digital output overload
RED	6 impulses	Digital output fault
RED	7 impulses	FB interface fault (only device ports 4-7)

Input LED (I)

The input LED may exhibit the following display and flashing pattern:

LED display		Description
YELLOW	OFF	Both safety inputs LOW
YELLOW	ON	Both safety inputs HIGH
YELLOW	Flashes	Only one safety input HIGH,
		or discrepancy/stable time fault

Operating instructions Safety fieldbox

5.2 LED indicators, PROFINET ports P1/P2

There are 2 LED indicators at the Ethernet ports. A green link LED and yellow activity LED.

LED link (L)

The link LED may exhibit the following display and flashing pattern:

LED display		Description
GREEN	ON	Connection to Ethernet active

LED Activity (A)

The activity LED may exhibit the following display and flashing pattern:

LED display		Description
YELLOW	Flashes	Ethernet data transmission active

5.3 Central LED indicators, SFB-PN

There are 4 LEDs for central diagnostics of the fieldbox. A green/red LED indicator for a system fault, a red LED for bus fault, a green/red error LED and a green power LED.

System fault LED (SF)

The system fault LED may exhibit the following display and flashing pattern:

LED display		Description
RED	ON	Module error or device port error
GREEN	Flashes	FLASH signal for identifying the fieldbox

Bus fault LED (BF)

The bus fault LED may exhibit the following display and flashing pattern:

LED display		Description
RED ON		No or slow connection
RED	Flashes	Connection but no data transmission

Fieldbox error LED (Err)

The error LED may exhibit the following display and flashing pattern:

LED display		Description
GREEN	ON	Field box in RUN
GREEN	Flashes	Module fault can be acknowledged
RED	ON	Internal field box fault
RED	3 Hz	F_WD_Time SFB-PN exceeded
RED	1 impulse	Internal over temperature fault
RED	2 impulses	Invalid F address fault
RED	3 impulses	Invalid F_iPar_CRC fault
RED	4 impulses	Acknowledge impulse length fault
RED	5 impulses	Test pulse output overload fault
RED	6 impulses	Overvoltage fieldbox U > 29 V

Fieldbox power LED (Pwr)

The power LED may exhibit the following display and flashing pattern:

LED display		Description		
GREEN	ON	Supply voltage of fieldbox OKAY		
GREEN	1 Hz	Low voltage warning U < 20 V		
GREEN	3 Hz	Low voltage fault U < 17 V		
GREEN	OFF	Fieldbox switched off U < 12 V		

6. Set-up and maintenance

6.1 Functional testing

A check must be carried out to ensure that the projected safety function is effective.



The safety functions, configuration of the safety fieldbox and correct installation must be checked by a responsible safety specialist/safety representative.

6.2 Maintenance

The safety fieldbox operates error-free if installed and used properly.

7. Disassembly and disposal

7.1 Disassembly

Only disassemble the safety fieldbox if it is in de-energized state.

7.2 Disposal

Dispose of the safety fieldbox properly in accordance with national regulations and laws.

8. Annex system configuration

8.1 Configuration examples of the power supply

If the power supply of each fieldbox is separated and in a star configuration, the maximum cable length of a fieldbox series is limited only by the maximum permissible cable length of the field bus used.

If the power supply from fieldbox to fieldbox is looped through, the following maximum configurations apply.


3 different configurations are shown respectively for the different SCHMERSAL safety switchgear. One configuration with long cable lengths (maximum), one configuration with medium cable lengths (medium) and one configuration with shorter cable lengths (small).

The following assumptions are made for the configuration examples listed in the table:

- The examples represent maximum configurations. If individual cable lengths are shortened, larger systems are possible.
- 2 x 1.5 mm² power supply wiring and 10 A fuse protection.
- Use of SCHMERSAL cables.
- The cable lengths listed in the table between the power supply and the first fieldbox as well as the individual fieldboxes are the maximum lengths. Reducing the individual cable lengths is not critical.
- For interlocks, these designs are based on simultaneous activation of all lock and unlock functions. In the event of delayed activation of the lock and unlock function, larger systems are possible.

Device / configuration version	Max. number of devices	Equals number of fieldboxes	Length of the cable (A) up to the first fieldbox	Length of the cables (B) between the fieldboxes	Length of stub cables (C) for device connection
AZM 201 / Maximum	16	2	10.0 m	10.0 m	7.5 m
AZM 201 / Medium	20	2.5	7.5 m	7.5 m	5.0 m
AZM 201 / Small	24	3	7.5 m	5 m	3.5 m
MZM 100 / Maximum	20	2.5	10.0 m	10.0 m	7.5 m
MZM 100 / Medium	24	3	7.5 m	7.5 m	5.0 m
MZM 100 / Small	28	3.5	7.5 m	5 m	3.5 m
AZM 300 / Maximum	28	3.5	10.0 m	10.0 m	7.5 m
AZM 300 / Medium	32	4	7.5 m	7.5 m	5.0 m
AZM 300 / Small	40	5	7.5 m	5 m	3.5 m
AZM 400 / Maximum	16	2	10.0 m	10.0 m	7.5 m
AZM 400 / Medium	16	2	7.5 m	7.5 m	5.0 m
AZM 400 / Small	16	2	7.5 m	5 m	3.5 m
AZM 1xx / Maximum	20	2.5	10.0 m	10.0 m	7.5 m
AZM 1xx / Medium	24	3	7.5 m	7.5 m	5.0 m
AZM 1xx / Small	28	3.5	7.5 m	5 m	3.5 m
RSS & CSS / Maximum	48	6	10.0 m	10.0 m	7.5 m
RSS & CSS / Medium	56	7	7.5 m	7.5 m	5.0 m
RSS & CSS / Small	64	8	7.5 m	5 m	3.5 m
Mixed / Maximum	24	3	10.0 m	10.0 m	7.5 m
Mixed / Medium	28	3.5	7.5 m	7.5 m	5.0 m
Mixed / Small	32	4	7.5 m	5 m	3.5 m

Mixed fitting of fieldbox: 2 x AZM 201, 2 x MZM 100, 2 x AZM 300 and 2 x RSS / CSS

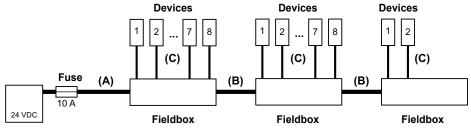


Power supply

i

A useful design tool for calculating the real voltage drops is available on the Internet at www.system-engineering-tool.com


8.2 Wiring example of the safety switches

Electronic interlock, unlocking function via 1 wire

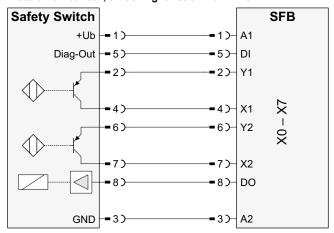


SCHMERSAL devices: MZM100, AZM201, AZM300, AZM40, ...

Electronic interlock, unlocking function via 2 wires

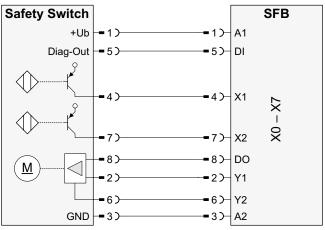


SCHMERSAL devices: AZM400, ...

Electromechanical interlock, unlocking function via 1 wire

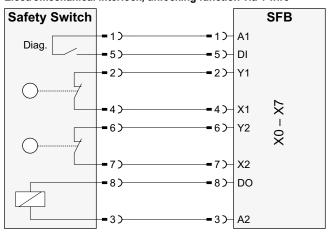


SCHMERSAL devices: AZM 161-FB, AZM 170-FB, AZM150-ST, ...

Electronic sensor, 8-pin

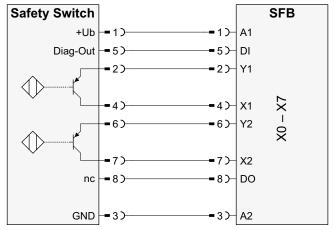


SCHMERSAL devices: CSS series, RSS series, ...

Electronic sensor, 4/5-pin

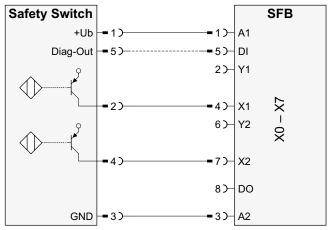


Different safety switchgear

Electronic E-STOP, BDF 200 FB, FB interface

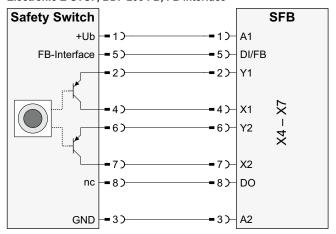


SCHMERSAL devices: BDF 200-FB, ...

Electromechanical switches/sensors, 2-channel, 4-pin

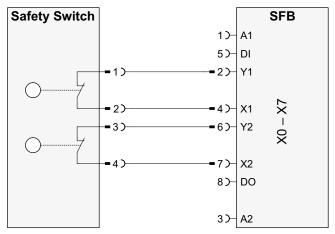


SCHMERSAL devices: BNS series, TESK, ...

Electromechanical switches, 2-channel, 8-pin

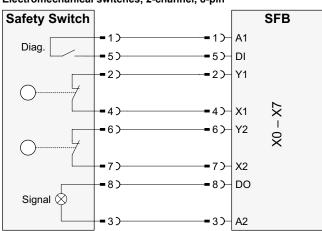


SCHMERSAL devices: BDF100-NH(K), AZ series, PS series, ZQ series, ...

2 electromechanical switches, 1-channel, forcibly interrupted

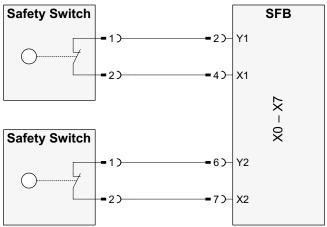


Different safety switchgear

Optoelectronic AOPD, 8-pin

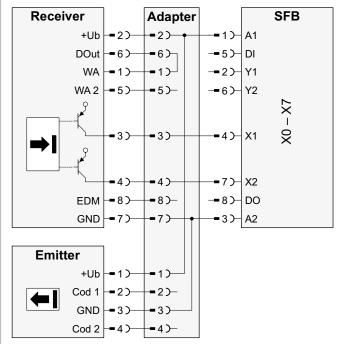

SCHMERSAL devices: SLC 440, SLG 440, ...

Optoelectronic AOPD, 5-pin

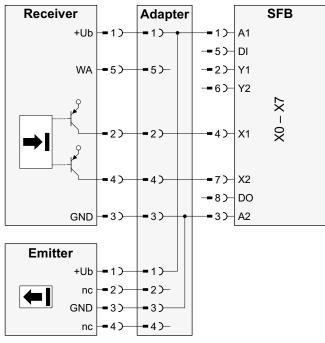

SCHMERSAL devices: SLC 440 COM, SLG 440 COM, SLB 440, ...

Other wiring examples can be found in the 'Safety SFB-PN fieldbox manual' on the internet at products.schmersal.com.

9. EU Declaration of conformity

EU Declaration of conformity

SCHMERSAL

Original K.A. Schmersal GmbH & Co. KG

Möddinghofe 30 42279 Wuppertal Germany

Internet: www.schmersal.com

We hereby certify that the hereafter described components both in their basic design and construction conform to the applicable European Directives.

Name of the component: SFB

Type: See ordering code

Description of the component: Safety fieldbox (IO module with fieldbox interface)

Relevant Directives: 2006/42/EC Machinery Directive 2014/30/EU EMC-Directive

2011/65/EU RoHS-Directive

Applied standards: EN 61131-2:2007

EN 60947-5-3:2013 EN ISO 13849-1:2015 IEC 61508 Teile 1-7:2010

Notified body for the prototype test: TÜV Rheinland Industrie Service GmbH

Am Grauen Stein, 51105 Köln

ID n°: 0035

EC-prototype test certificate: 01/205/5878.00/22

Person authorised for the compilation of the technical documentation:

npilation Oliver Wacker
on: Möddinghofe 30
42279 Wuppertal

Place and date of issue: Wuppertal, January 5, 2022

SFB-PN-IOP-V2-A-EN

Authorised signature **Philip Schmersal** Managing Director



The currently valid declaration of conformity can be downloaded from the internet at products.schmersal.com.





Möddinghofe 30, 42279 Wuppertal

Germany

Phone: +49 202 6474-0
Telefax: +49 202 6474-100
E-Mail: info@schmersal.com
Internet: www.schmersal.com