NRGC-EIP





NRG controller with EtherNet/IP™ Communication





Main features

- Communication interface. The NRG controller bridges the field level devices to the control level to allow exchange of data in real-time with the NRG solid state relays.
- Reduced maintenance costs and downtime. Use of real-time data for prevention of machine stoppages during operation.
- Good quality products and low scrap rates. Real-time monitoring allows timely decisions for better machine and process management.
- Reduced efforts in troubleshooting. A number of faults can be distinguished to facilitate and reduce troubleshooting time.
- Fast installation and set-up. Control, monitoring and diagnostics all possible via the communication system.
- Compact dimensions. One controller with a product width of 35 mm can handle up to 32 RG..CM..N solid state relays.



Description

The NRGC-EIP is the NRG controller in the NRG BUS chain.

The **NRGC-EIP** interfaces directly with the main controller of the system through EtherNet/IP communication. Each **NRGC-EIP** is identified by a unique MAC address which is printed on the façade of the product.

The **NRGC-EIP** is mainly a facilitator of the communication between the main controller and each individual RG..N solid state relay in the system. The **NRGC-EIP** also performs internal operations to setup and maintain the internal bus.

The **NRGC-EIP** needs to be supplied with 24 VDC. LEDs on the front facade give a visual indication of the status of the **NRGC-EIP**, of any ongoing communication with the main controller and the RG..Ns on the BUS chain and of any alarm condition related specifically to the **NRGC-EIP**.

Specifications are noted at 25°C unless otherwise specified.



Applications

Any heating application where reliable and precise maintenance of temperatures is crucial to the quality of the end product. Typical applications include plastic machinery such as injection machines, extrusion machines and PET blow moulding machines, packaging machinery, sterilisation machinery, drying tunnels and semiconductor manufacturing equipment.




Main function

- Communication interface: EtherNet/IP
- Connects up to 32 RG..CM..Ns
- Supply voltage 24 VDC +/-20%





The NRG system

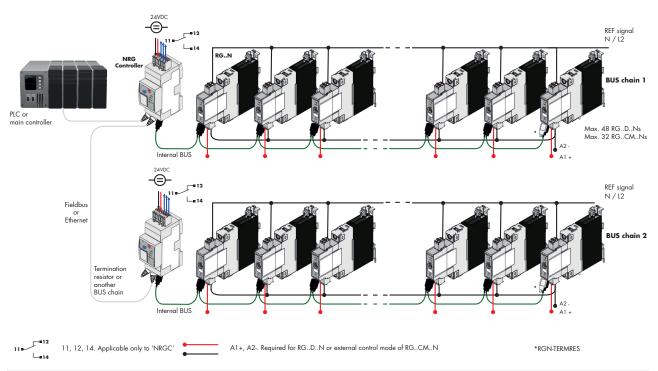



System Overview

The NRG is a system consisting of one or more BUS chains that enable communication between the field devices (such as the solid state relays) and the control devices (such as the machine controller or PLC).

Each NRG BUS chain consists of the following 3 components:

- · the NRG controller
- the NRG solid state relay(s)
- the NRG internal BUS cables

The **NRG controller** is the interface to the machine controller. It acts as a gateway for the communication between the PLC and the RG..N solid state relays. It is not possible to operate the NRG system without the NRG controller.

The NRG controllers available are:

NRGC

The NRGC is an NRG controller with a Modbus RTU interface over RS485. The NRGC is addressed via the assigned Modbus ID (from 1-247). In an NRG system operating on Modbus it is possible to have 247 NRG BUS chains.

NRGC-PN

NRGC-PN is an NRG controller with a PROFINET communication interface. The NRGC-PN is identified by a unique MAC address which is printed on the facade of the product. The GSD file can be downloaded from www. gavazziautomation.com

NRGC-EIP

NRGC-EIP is an NRG controller with an EtherNet/IP communication interface. The IP address is provided automatically via a DHCP server. The EDS file can be downloaded from www.gavazziautomation.com







System Overview (continued)

The **NRG solid state relay** is the switching component in the NRG system. Each **RG..N** integrates a communication interface to exchange data with the machine controller (or PLC). The available RG..Ns that can be used in an NRG system are:

RG..D..N

The RG..D..N are solid state relays for use in an NRG system having the communication interface only for real time monitoring. Control of the RG..N is done via a DC control voltage. It is possible to have maximum 48 RG..D..Ns in one NRG BUS chain. The RG..D..N solid state relays are only compatible with the NRGC (Modbus RTU) NRG controller.

RG..CM..N

The RG..CM..N are solid state relays for use in an NRG system having the communication interface for control of the **RG..N** through the BUS and for real time monitoring. It is possible to have maximum 32 **RG..CM..Ns** in one NRG BUS chain.

It is not possible to mix RG..D..N and RG..CM..N in the same BUS chain.

The **NRG** internal **BUS** cables are proprietary cables that connect the NRG controller to the first RG..N in the NRG BUS chain and respective RG..Ns on the BUS. The internal BUS terminator, provided in the same package with the NRG controller, shall be plugged to the last RG..N in the NRG BUS chain.



NRG system required components

| Description | Component code | Notes |
|-------------------------|----------------|---|
| Solid state relays | RGN | NRG solid state relays |
| NRG controller | NRGC | NRGC: NRG controller with Modbus RTU communication. NRGC-PN: NRG controller with PROFINET communication. NRGC-EIP: NRG controller with EtherNet/IP communication. RGN-TERMRES is included in the NRGC packaging. The RGN-TERMRES is to be mounted on the last RGN on the bus chain. |
| NRG internal BUS cables | RCRGN-xxx | Proprietary cables terminated at both ends with a micro USB connector |

List of contents

NRGC-EIP

| References | 4 |
|-------------------------------|----|
| Structure | 5 |
| General data | 6 |
| Dimensions | 6 |
| Power supply specifications | 6 |
| Auto-addressing | 7 |
| Communications | |
| Internal bus | |
| Compatibility and conformance | |
| Environmental specifications | |
| LED indicators | 10 |
| Alarm management | 11 |
| Connection diagram | 12 |
| Mounting | 13 |
| Connection specifications | 14 |
| · | |
| | |





References



Order code



NRGC-EIP



Carlo Gavazzi compatible components

| Description | Component code | Notes |
|-------------------------|----------------|--|
| Solid state relays | RGCMN | NRG solid state relays RGCMN: Communication interface for control of the RGN and for real time monitoring. Maximum 32x RGCMN in one BUS chain. |
| NRG Internal BUS cables | RCRGN-010-2 | 10cm cable terminated at both ends with a microUSB connector. Packed x4 pcs. |
| | RCRGN-075-2 | 75cm cable terminated at both ends with a microUSB connector. Packed x1 pc. |
| | RCRGN-150-2 | 150cm cable terminated at both ends with a microUSB connector. Packed x1 pc. |
| | RCRGN-350-2 | 350cm cable terminated at both ends with a microUSB connector. Packed x1 pc. |
| | RCRGN-500-2 | 500cm cable terminated at both ends with a microUSB connector. Packed x1 pc. |


Further reading

| Information | Where to find it | |
|--|---|--|
| User manual NRG EtherNet/IP | https://gavazziautomation.com/images/PIM/MANUALS/ENG/SSR_UM_NRG_EIP.pdf | |
| Datasheet RGCMN solid state relay with control and real time monitoring via bus | http://www.gavazziautomation.com/docs/mt_gh/SSR_RG_CM_N.pdf | |
| EDS file | http://www.gavazziautomation.com/images/PIM/OTHERSTUFF/EDS/EDS_ NRGC-EIP.zip | |





Structure

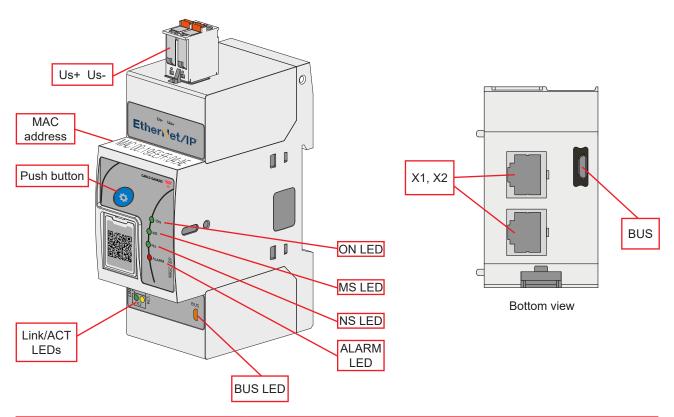

| Element | Component | Function |
|--------------------|--|---|
| Us+ Us- | Supply connection | 2 position spring plug – Us-, Us+ connection for powering the NRGC-EIP |
| Push button | Communications check & Autoaddressing button | Enables and disables a Communications Check function of the BUS chain (link between NRGC-EIP and RGNs) by pressing front button between 2 to 5 seconds Enables auto addressing of RGNs when pressed for 3 seconds during power up. Check 'Autoaddressing' section for more info. |
| MAC address | Device MAC address | Increment by 1 and 2 for MAC addresses of X1 and X2 |
| ON LED | ON indicator | Indicates presence of supply voltage on NRGC-EIP |
| BUS LED | BUS indicator | Indicates ongoing communication with RGNs |
| MS LED | Module status | Indicates the status of the device |
| NS LED | Network status | Indicates the status of the EtherNet/IP network interface |
| ALARM LED | ALARM indicator | Indicates presence of an alarm condition |
| Link / ACT LEDs | Link/Activity indicators | Indicates the status of the physical Ethernet connection |
| X1, X2 | Ethernet ports | 2x RJ45 plugs for EtherNet/IP communication |
| BUS | Micro-USB port – internal BUS | RCRGN cable connection for the internal BUS communications line |






Features


General data

| Material | Noryl (UL94 V0), RAL7035 |
|------------------|---|
| Mounting | DIN rail |
| Dimensions | 2-DIN |
| Touch protection | IP20, IP00 with door flap on front facade open |
| Weight | 142g |
| I Compatibility | RGCCMN solid state contactors (RG end-devices) RGSCMN solid state relays (RG end-devices) |

Dimensions

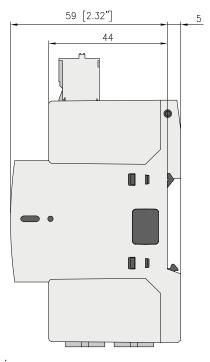

All dimensions in mm. Tolerances +/- 0.5 mm.

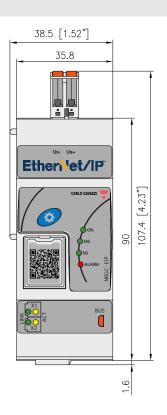

Performance

Power supply specifications

| Supply port rating, Us | 24 VDC |
|-----------------------------|----------------|
| Supply voltage range, Us | 19.2 – 32 VDC* |
| Reverse polarity protection | Yes |
| Consumption | < 12 W |
| LED Indication, Supply ON | Green LED |
| Power on | 2 s |


 $^{\star}\,$ to be supplied by class 2 power source according to UL1310





Auto-addressing

The RG..Ns on the bus chain are automatically addressed upon the first start-up of the system. The RG..Ns are addressed based on their position on the bus chain.

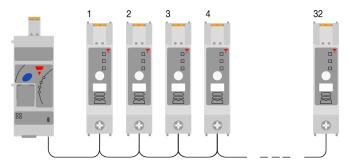

In case of an RG..N replacement, or any changes to the NRG bus chain, the RG..Ns have to be re-addressed. Follow the procedure below to re-address the RG..Ns on the NRG bus chain manually. Alternatively, auto-addressing can be done via an 'Explicit' command (check NRG EtherNet/IP User Manual for further information)

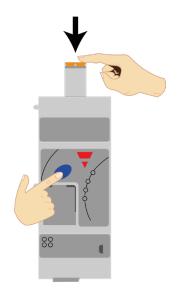


Fig. 1 Hold the blue button while powering up the NRGC-EIP



Fig. 2 Release when Alarm LED turns ON indicating that autoaddressing is complete





Communication

| Communication protocol to Main Controller | EtherNet/IP™ |
|---|---|
| EDS file | The EDS file for the NRGC-EIP is available electronically by going to www.gavazziautomation.com |
| IP address | The NRGC-EIP obtains its IP address via a DHCP service. The device is shipped with the Address Conflict Detection (ACD) function activated. Therefore, the device releases its IP address if the same IP address has been assigned multiple times in the network. ACD can be deactivated via the TCP/IP interface class |
| Connections | With the NRGC-EIP there are 2 possible connections: Exclusive owner connection - this connection is the main IO connection to control and read parameters from each NRG solid state relay. Input only connection - this connection is used to transfer the alarming data from each NRG solid state relay At least an Exclusive owner connection is required to initiate communication with the NRGC-EIP |
| Communication interface | The ethernet ports (X1, X2) are 100 Mbit, full duplex operation ports and should be connected to another EtherNet/IP device with Cat5e (straight through) cable via the standard RJ45 connector. It is recomended that the interconnecting cables should be fitted with plugs provided with an outer metallic shell with the shell connected to the wire screen of the cable. For further information refer to the EtherNet/IP cabling guidelines |
| LED indication - ACT | Yellow, Flashing - NRGC-EIP is sending/receiving Ethernet frames |
| LED indication - Link | Green, ON - Device is linked to Ethernet |

Internal Bus

| Max. number of RGNs connected to NRGC-EIP | 32x RGCMN |
|---|--|
| Connection to RGNs | RCRGN-xx 5-way cable terminated with micro-USB connection |
| BUS termination | RGN-TERMRES (1x pc. provided with 1x NRGC-EIP) to be plugged on the last |
| BOS termination | RGN on the BUS chain to terminate the internal BUS |
| LED indication - BUS | Yellow, ON indicating ongoing communication with the RG end-devices |

Carlo Gavazzi Ltd. 8 01/10/2020 NRGC-EIP DS ENG





Compatibility and Conformance

| Approvals | |
|----------------------|---|
| Standards compliance | LVD: EN 60947-5-1 EMCD: EN 60947-5-1 UL: UL508, E172877, NMFT cUL: C22.2 No. 14-18, E172877, NMFT7 |

| Electromagnetic compatibility (EMC) - Immunity | | |
|--|---|--|
| Electrostatic discharge (ESD) | EN/IEC 61000-4-2 8 kV air discharge, 4 kV contact (PC1) | |
| Radiated radio frequency | EN/IEC 61000-4-3 10 V/m, from 80 MHz to 1 GHz (PC1) 10 V/m, from 1.4 to 2 GHz (PC1) 3 V/m, from 2 to 2.7 GHz (PC1) | |
| Electrical fast transient (burst) | EN/IEC 61000-4-4 Input: 1 kV, 5 kHz & 100 kHz (PC1) Internal bus: 1 kV, 5 kHz & 100 kHz (PC1) EtherNet/IP ports: 1 kV, 5 kHz & 100 kHz (PC1) 2 kV, 5 kHz & 100 kHz (PC2) | |
| Conducted radio frequency | EN/IEC 61000-4-6 10 V/m, from 0.15 to 80 MHz (PC1) | |
| Electrical surge | EN/IEC 61000-4-5 DC Output / Input, line to line: 500 V (PC2) DC Output / Input, line to earth: 500 V (PC2) Signal, line to earth 1 kV (PC2) ¹ | |
| Voltage dips and interruptions | EN/IEC 61000-4-11 0% @ 5000 ms (PC2) 40% @ 200 ms (PC2) 60% @ 10, 30, 100, 300, 1000 ms (PC2) | |
| Voltage dips and interruptions on input lines | EN/IEC 61000-4-29 0% @ 1, 3, 10, 30, 100, 300, 1000 ms (PC2) 30% @ 10, 30, 100, 300, 1000 ms (PC2) 70% @ 10, 30, 100, 300, 1000 ms (PC2) 80% @ 10, 30, 100, 300, 1000 ms, 3 s, 10 s (PC2) 120% @ 10, 30, 100, 300, 1000 ms, 3 s, 10 s (PC2) | |

1. Not applicable to shielded cables <10m. Additional suppression on data lines may be required if shielded cables are not used.

| Electromagnetic compatibility (EMC) - Emissions | |
|--|--|
| Radio interference field emission (radiated) | EN/IEC 55011 Class A: from 30 to 1000 MHz |
| Radio interference voltage emissions (conducted) | EN/IEC 55011 Class B: from 0.15 to 30 MHz |



Environmental specifications

| Operating temperature | -20 to +65 °C (-4 to +149 °F) | |
|-----------------------|-------------------------------|--|
| Storage temperature | -20 to +65 °C (-4 to +149 °F) | |
| Relative humidity | 95% non-condensing @ 40°C | |
| Pollution degree | 2 | |
| Installation altitude | 0 - 2000m | |
| EU RoHS compliant | Yes | |
| China RoHS | | |

► LED indicators

| ON | Green | ON: | Us is present at terminals Us+, Us- | |
|----------------|----------------|-----------------------------------|---|--|
| - | | OFF: | Us is not present at terminals Us+, Us- | |
| Link Green | ON: | Device is linked to Ethernet | | |
| (X1 & X2) | | OFF: | Device has no link to Ethernet | |
| ACT Yellow | OFF: | No frames are being sent/received | | |
| (X1 & X2) | | Flashing: | NRGC-EIP is sending/receiving Ethernet frames | |
| | | ON: | During transmission of messages from NRGC-EIP to RGNs | |
| BUS | Yellow | OFF: | Idle bus between the NRGC-EIP and RGNs and when NRGC-EIP is receiving data from RGNs | |
| ALARM R | Red | ON: | Flashing when alarm condition on NRGC-EIP is present. Refer to Alarm management section | |
| | | OFF: | No alarm condition | |
| | Red / Green | Green: | NRG Controller is operational | |
| | | Green Flickering: | NRG Controller has not been configured | |
| MS | | Green / Red Flickering: | NRG Controller is performing its power-up testing | |
| Wio | | Red: | NRG Controller has detected a major unrecoverable fault | |
| | | Red Flickering: | NRG Controller has detected a major recoverable fault | |
| | | OFF: | NRG Controller is powered off | |
| | | Green: | Connected: An IP address is configured and at least one CIP connection is established | |
| | | Green Flickering: | No connections: an IP address is configured but no CIP connections are established | |
| NS | Red / | Green / Red Flickering: | NRG controller is performing its power-up testing | |
| | Green | Red: | Duplicate IP: NRG controller detected that its IP address is already in use | |
| | | Red Flickering: | Connection time-out an IP address is configured and Exclusive Owner connection has timed out | |
| | | OFF: | NRG controller does not have an IP address or is powered off | |



Alarm management

| Alarm condition present | ALARM LED ON with a specific flashing rate Alarms are also available as implicit messages via the Ethernet/IP communication | | |
|-------------------------|---|---|--|
| | interface. Refer to NRG EtherNet/IP User Manual for further information | | |
| Alarm types | No. of flashes | Description of fault | |
| | 2 | Errors in the configurations of the internal NRG bus chain including: Number of RGNs on bus chain is > 32 (Device Limit Error) More than one RGN on the bus chain have the same address (Device conflict error) One of the RGNs does not have an address. This may occur when a new RGN is introduced to the bus chain (Device Unconfigured Error) The internal Device ID of one of the RGNs on the bus chain does not correspond to its position on the bus (Device Position Error) | |
| | 4 | Supply Error: Supply to NRGC-EIP is outside of the specified range | |
| | 8 | Communication Error (BUS): An error in the communication link (internal BUS) between the NRGC-EIP and RGNs | |
| | 9 | Internal Error: Detection of internal issues with the NRGC-EIP | |
| | 10 | Termination (BUS) Error: Internal BUS chain not terminated | |
| Flashing rate | 0.5s → ← | <u>3s</u> ■ | |



Connection diagram

The NRG bus chain can be configured in a EtherNet/IP network via a line, ring, star or tree topologies via the ethernet ports on the NRGC-EIP.

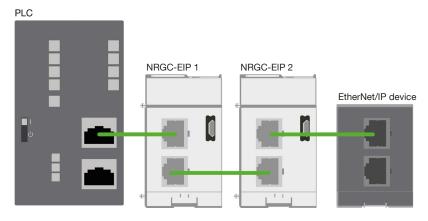


Fig. 3 Example of a line configuration of the NRGC-EIP with other EtherNet/IP devices and controller


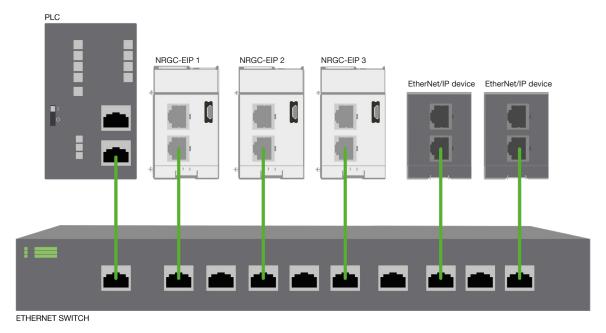


Fig. 4 Example of a star configuration of the NRGC-EIP with other EtherNet/IP devices and controller






Mounting

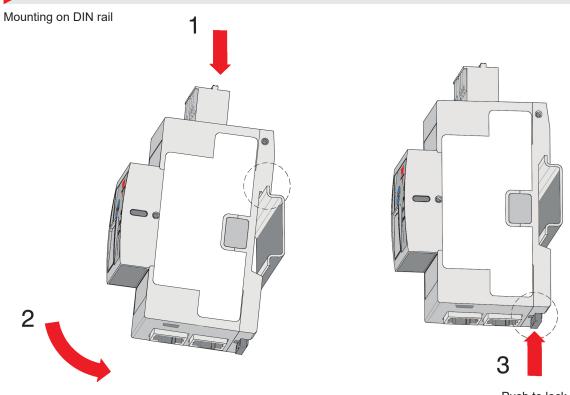



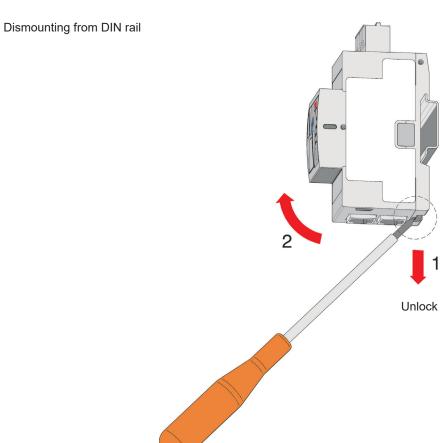





Connection specifications

| Power connection | | |
|---|------------------------------------|--|
| Terminal | Supply: Us+, Us- | |
| | Top | |
| Conductors | Use 60/75°C copper (Cu) conductors | |
| Stripping length | 12 - 13 mm | |
| Connection type | 2-pole spring plug, pitch 5.08 mm | |
| Rigid (solid & stranded) UL/CSA rated data | 0.2 – 2.5 mm², 26 – 12 AWG | |
| Flexible with end sleeve | 0.25 – 2.5 mm ² | |
| Flexible without end sleeve | 0.25 – 2.5 mm ² | |
| Flexible with end sleeve using TWIN ferrules | 0.5 – 1.0 mm ² | |

| Communication - connection | | |
|-------------------------------|--|--|
| Terminal | X1, X2: RJ45 (x2) BUS: RCRGN-xxx-2 | |
| | Bottom view | |
| EtherNet/IP connection | RJ45 shielded plugs | |
| Cable for EtherNet/IP | Not provided. Check EtherNet/IP cabling guidelines for further info. | |
| Max. length of Ethernet cable | 100 mtrs (between EtherNet/IP devices) | |
| Cable for Internal Bus | RCRGN-xxx-2: 5-way USB micro connection - +24 supply line for RGNs - GND - RS485A - RS485B - Autoconfig / Auto addressing line | |

RCRGN...



NRG internal BUS cable



Main features

- Cables available at various lengths to provide the internal BUS of the NRG system
- · Cables terminated at both ends with a microUSB plug
- Connects the NRG controller to the RG..N solid state relay and respective RG..N solid state relays



Description

The **RCRGN** cables are proprietary cables that must be used with the NRG system for the internal BUS. These cables connect the NRG controller to the RG..N solid state relays and respective RG..N solid state relays.

The RCRGN... are 5-way cables carrying the communication, supply and autoconfiguration / auto-addressing lines. By means of autoconfiguration / auto-addressing, the RG..Ns are assigned a unique ID based on the physical location and on the internal BUS.

Carlo Gavazzi compatible components

| Description | Component code | Notes | |
|--------------------|----------------|--|--|
| NRG Controller | NRGC | NRGC: NRG controller with Modbus RTU communication. NRGC-PN: NRG controller with PROFINET communication. NRGC-EIP: NRG controller with EtherNet/IP communication. 1x RGN-TERMRES is included in the NRGC packaging. The RGN-TERMRES is to be mounted on the last RGN on the bus chain. | |
| Solid state relays | RGN | NRG solid state relays | |





Order code



Enter the code entering the corresponding option instead of lacksquare

| Code | Option | Description | Notes |
|------|--------|---|-----------------|
| R | | Cables | |
| С | | Capies | |
| R | | | |
| G | | Suitable for the NRG system | |
| N | | | |
| | 010 | 10cm cable length | packed x 4 pcs. |
| | 075 | 75cm cable length | packed x 1 pc. |
| | 150 | 150cm cable length | packed x 1 pc. |
| | 350 | 350cm cable length | packed x 1 pc. |
| | 500 | 500cm cable length | packed x 1 pc. |
| 2 | - | Terminated at the both ends with a microUSB connector | |



COPYRIGHT ©2020

Content subject to change. Download the PDF: http://gavazziautomation.com