


Pizzato Elettrica S.r.l. Via Torino, 1 36063 Marostica (VI) ITALY

Tel. +39.0424.470.930 Fax +39.0424.470.955 E-mail info@pizzato.com Web www.pizzato.com

Article:

FR 508 Description: Position switch with piston plunger



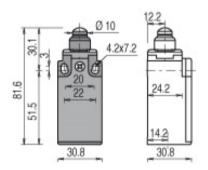

Electrical data:

Pollution degree: 3

Thermal current (Ith): 10 A

Rated insulation voltage (Ui): 500 Vac 600 Vdc Rated impulse withstand voltage (Uimp): 6 kV

Conditional shot circuit current: 1000 A according to EN 60947-5-1

Protection against short circuits: fuse 10 A 500 V type aM

# Housing:

Polymer housing, one threaded PG 13,5 conduit entry (FR series)

# General data:


Ambient temperature: from -25°C to +80°C Max actuation frequency: 3600 operations cycles/hour Mechanical endurance: 20 million operations cycles

# Contact block characteristics:

1NO+1NC fast action (B5)

Double gap and double bridge, fingerproof protection, captive screws.

#### Travel diagram:



- Closed contact
- Opened contact
- → Positive opening travel (IEC 60947-5-1)
- ① Opening travel 2x2m (EN 81)
- Reset device travel R
- Pushing the switch 4
- Releasing the switch
- Tripping mechanical point S

### In conformity with requirements requested by: Activating forces:

Low Voltage Directive 2014/35/EU Min.: 8 N Electromagnetic Compatibility Directive Positive opening: 25 N 2014/30/EU

#### In conformity with standards:

IEC 60947-5-1, EN 60947-5-1, EN 60947-1, EN 50047, IEC 60204-1, EN 60204-1, EN ISO 14119, EN ISO 12100, IEC 60529, EN 60529, UL 508, CSA 22.2 No. 14. **Approvals:** 

IEC 60947-5-1, UL 508, CSA 22.2 No. 14, GB14048.5-2001.

Markings and quality marks:



# **Utilization categories:**

Alternate current: AC15 (5060 Hz)						
Ue (V)	250	400	500			
Ie (A)	6	4	1			
Direct current: DC13						
Ue (V)	24	125	250			
Ie (A)	6	1,1	0,4			

© 2017 Copyright Pizzato Elettrica. Technical modifications and errors reserved. The data quoted in this sheet are carefully checked and represent typical series values. Descriptions of device and its applications, the control contexts, details on external controls, installation and operating information are given to the best of our knowledge. This does not mean however that any assured properties or other claims under liability law that extend beyond the "General Sales Terms" as stated in the Pizzato Elettrica general catalogue may be derived. The user is not absolved of his obligation to examine our information and recommendations before using them for his own purposes.

Sheet: 15367-0-en-2.1.0 Date: 2018/01/11 Page: 1/3

Positive switch opening:

Device with positive opening conforming to IEC 60947-5-1.

### Cross section of the conductors (flexible copper wire):

min. 1 x 0,5 mm2 (1 x AWG 20) max. 2 x 2,5 mm2 (2 x AWG 14)

#### **Device screw tightening torques:**

Cover screws: 0,7 ... 0,9 Nm Head screws: 0,5 ... 0,7 Nm Lever screws: 0,7 ... 0,9 Nm Contact blocks screws: 0,6 ... 0,8 Nm Plugs: 1,2 ... 1,6 Nm (M20/PG13,5) 1 ... 1,4 Nm (M16/PG11)



Pizzato Elettrica S.r.l. Via Torino, 1 36063 Marostica (VI) ITALY

Tel. +39.0424.470.930 Fax +39,0424,470,955 E-mail info@pizzato.com Web www.pizzato.com

Article:	FR 5	08
----------	------	----

Description: Position switch with piston plunger

# Data type approved by IMQ.

Rated insulation voltage (Ui): 500 Vac 400 Vac (for contact blocks 2, 11, 12, 20, 21, 22, 33, 34) Thermal current (Ith): 10 A Protection against short circuits: fuse 10 A 500 V type aM Rated impulse withstand voltage (Uimp): 6 kV 4 kV (for contact blocks 20, 21, 22, 33, 34) Protection degree: IP67 MV terminals (screw clamps) Pollution degree 3 Utilization category: AC15 Operation voltage (Ue): 400 Vac (50 Hz) Operation current (Ie): 3 A Forms of the contact element: Za, Zb, Za+Za, Y+Y, X+X, Y+Y+X, Y+Y+Y, Y+X+X Positive opening of contacts on contact block 5, 6, 7, 9, 11, 13, 14, 16, 18, 20, 21, 22, 33, 34

In conformity with standards: EN 60947-1, EN 60947-5-1+ A1:2009, fundamental requirements of the Low Voltage Directive 2006/95/CE.

#### Data type approved by UL

Utilization categories Q300 (69 VA, 125-250 Vdc) A600 (720 VA, 120-600 Vac) Data of the housing type 1, 4X "indoor use only", 12, 13 For all contact blocks except 2 and 3 use 60 or 75 °C copper (Cu) conductor and wire size No. 12-14 AWG. Terminal tightening torque of 7,1 lb in (0.8 Nm). For contact blocks 2 and 3 use 60 or 75 °C copper (Cu) conductor and wire

Sheet:

Date:

Page:

15367-0-en-2.1.0


2018/01/11

2/3

size No. 14 AWG. Terminal tightening torgue of 12 lb in (1.4 Nm). In conformity with standard: UL 508

# **Mechanical stop**

In accordance with the EN ISO 14119 standard, paragraph 5.2, "the position sensors should not be used as mechanical stop".



The actuator must not exceed the max. travel as indicated in the




The guard should not make a mechanical stop on the switch head.

0.00


### Actuation speed

Vmax (m/s)	Vmin (mm/s)	Vmin (mm/s) R
0,5	1	0,01

Contacts type = snap action
= slow action



### Actuation modality

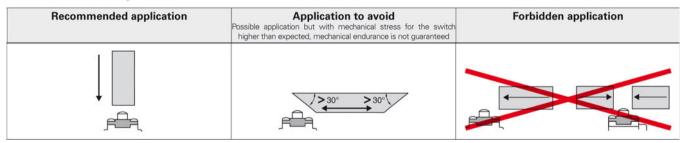

00 Mechanical stor

© 2017 Copyright Pizzato Elettrica. Technical modifications and errors reserved. The data quoted in this sheet are carefully checked and represent typical series values. Descriptions of device and its applications, the control contexts, details on external controls, installation and operating information are given to the best of our knowledge. This does not mean however that any assured properties or other claims under liability law that extend beyond the "General Sales Terms" as stated in the Pizzato Elettrica general catalogue may be derived. The user is not absolved of his obligation to examine our information and recommendations before using them for his own purposes.



Pizzato Elettrica S.r.l. Via Torino, 1 36063 Marostica (VI) ITALY Tel. +39.0424.470.930 Fax +39.0424.470.955 E-mail info@pizzato.com Web www.pizzato.com

Article:	FR 508	<b>D</b> .	15367-0-en-2.1.0
Description:	Position switch with piston plunger	Page:	2018/01/11 3/3


# Installation of single switches for safety applications

- Use only switches with the symbol  $\bigcirc$  (see figure on the side).
- Connect the safety circuit to the NC normally closed contacts (11-12, 21-22 or 31-32).
- The NO normally open contacts (13-14, 23-24, 33-34) should be used only for signalling; these contacts are not to be connected with the safety circuit. However, if in the same protection two or more switches are used, it is possible to connect the contact NO to safety circuit. In this case at least one of the two switches must feature positive opening and a NC normally closed contacts (11-12, 21-22 or 31-32) must be connected to the safety circuit.
- The switch must be actuated with the minimum positive opening travel indicated in the travel diagrams with symbol  $\ominus$
- The switch must be actuated with the minimum positive opening force.


• The fixing of the device must occur in compliance with the standard EN ISO 14119.

When the machine guard has been open and during the whole opening travel, the switch must be triggered directly (fig. 1) or through a rigid connection (fig. 2).

Only in this way the positive opening of the NC normally closed contacts (11-12, 21-22, 31-32) is guaranteed.

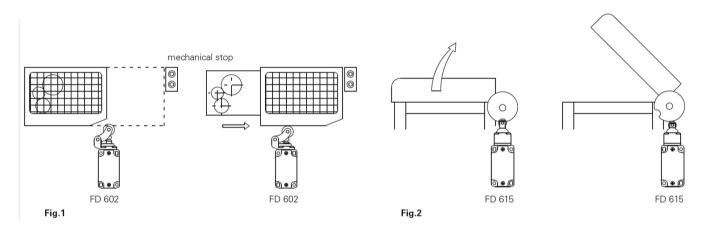

In the safety application with only one switch for each guard, the switches **should not be applied to activate by release** (fig. 3 and 4) **or through a non rigid connection** (i.e. by a spring).

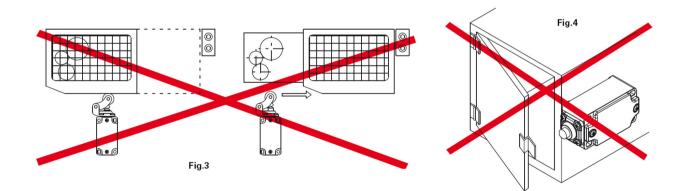

© 2017 Copyright Pizzato Elettrica. Technical modifications and errors reserved. The data quoted in this sheet are carefully checked and represent typical series values.

Descriptions of device and its applications, the control contexts, details on external controls, installation and operating information are given to the best of our knowledge. This does not mean however that any assured properties or other claims under liability law that extend beyond the "General Sales Terms" as stated in the Pizzato Elettrica general catalogue may be derived. The user is not absolved of his obligation to examine our information and recommendations before using them for his own purposes.