

DART

CONTROLS

Instruction Manual

Signal Conditioner/Generator



**P.O. Box 10
5000 W. 106th Street
Zionsville, Indiana 46077**

**Phone (317) 873-5211
Fax (317) 873-1105
www.dartcontrols.com**

Table of Contents

Introduction	2
General Features	2
Models & Options	3
Specifications	3
DP10 Electrical	3
DP10 Mechanical	3
Environmental.....	3
Mechanical Installation	4
Exploded Panel View	4
Cut-out and Mounting Dimensions	4
Installation & Diagrams	5
P3 Terminal Block Hook-Up Diagram	5
P3 Terminal Block Descriptions	5
Basic Operating Information	6
Visual Reference	6
Device Configuration	7
Mode of Operation	7
Software Parameters.....	8
Parameter Descriptions	9
Troubleshooting	13
Technical Support Options	13
What's Special About www.dartcontrols.com ?	13

Introduction

The DP10 is a panel mounted, multi-purpose signal conditioner that allows the operator easy access to make adjustments to system operations. The DP10 may be used in OEM equipment designs, plant operation or laboratory applications. Most other signal conditioners are DIN rail mounted inside a panel and designed to be set up once - many applications require frequent adjustments to meet application needs. The DP10's unique front-panel design addresses this by making output adjustment easily accessible via convenient up and down pushbuttons with a large, easy to read LED display.

General Features

- Microprocessor design digital accuracy and repeatability
- Digital design offers long-term stability in a variety of environments
- Dual-Mode operation: **Signal Scaling**, or **Signal Generation**
- Works in either voltage or Current output modes - PWM voltage (1kHz - 100kHz) Optional
- Universal power supply accepts supply voltages of 85-265VAC @ 50-60Hz without switches or jumpers settings.
- Transient voltage protection protects device in harsh industrial environments
- 1/8 DIN panel mount is rated up to NEMA 4X in similarly rated panel
- Large 4 digit, 1/2" LED display is easy to read in indoor or outdoor applications
- Euro style terminal strip standard - pluggable terminal strip optional
- Wide operating temperature -10C to +45C (14F to 113F)
- Jumper selectable signal type - Voltage or Current (mA) signal
- Configurable input to lock out operator changes once set

Models & Options

Models & Options

Model	Description
DP10	Voltage or Current (mA) signal conditioner with terminal strip

Specifications

DP10 Electrical

Line Input Voltage.....	Any Voltage from 85-265 VAC
Line Input Frequency	Any Freq. from 48-62 Hertz
Voltage Signal Input	0-5 VDC (Optional Higher)
Voltage Signal Output	0.1-5VDC MIN; 0.1-20 VDC MAX
mA Signal Input	4-20mA
mA Signal Output	4-20mA
Display Range	0 – 100.0
Units of Operation	%
Onboard Power Supply (Externally Accessible).....	5V @ 500Ma
Voltage Regulated Supply Output Range	24VDC +/-5%
Customer Specific Option Available (Regulated)	5-20 VDC

DP10 Mechanical

Display Type	LED, Red, 4 Digit, ½" Height
Housing Type (with supplied gasket in NEMA 4X panel).....	1/8 DIN NEMA 4X
Connector Style.....	3.5mm & 5mm European Style
Terminal Block Torque Setting	4.4 in. lb. Max or .5Nm
Faceplate Material	Polycarbonate with Lexan Overlay
Housing Material	Aluminum
Length (Required Panel Depth).....	4.625", 117.48mm
Faceplate Width	4.539", 115.29mm
Weight DP10	0.900 lb, 14.4 oz, 408.22g

Environmental

Operating Temperature Range	-10C to 45C (14F to 113F)
Operating Humidity Range	95%, non-condensing

Mechanical Installation

Exploded Panel View

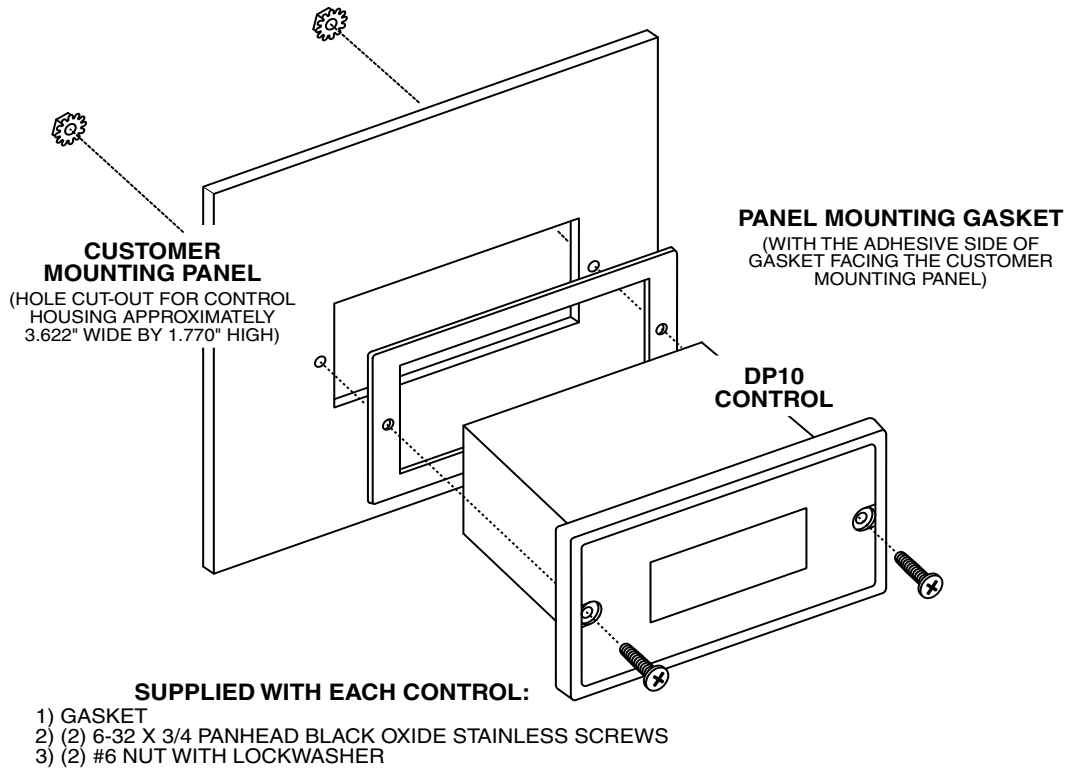


Figure 1

Cut-out and Mounting Dimensions

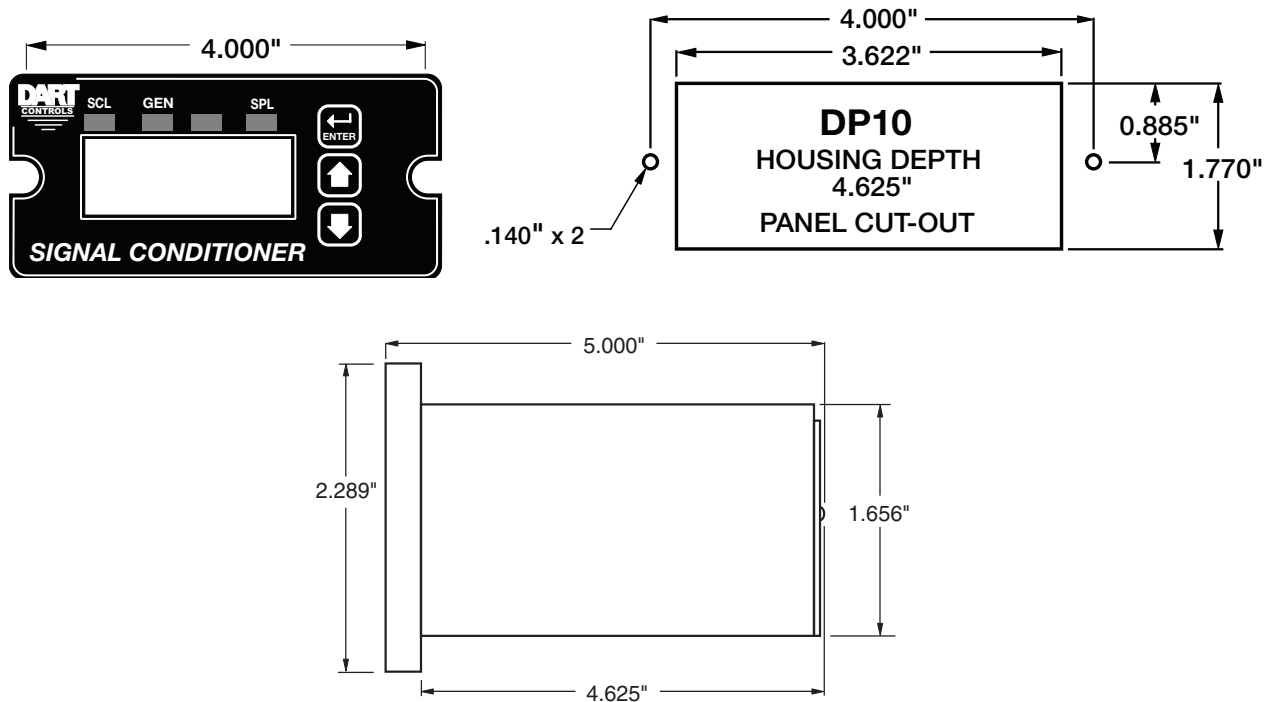


Figure 2

Installation & Diagrams

P3 Terminal Block Hook-Up Diagram

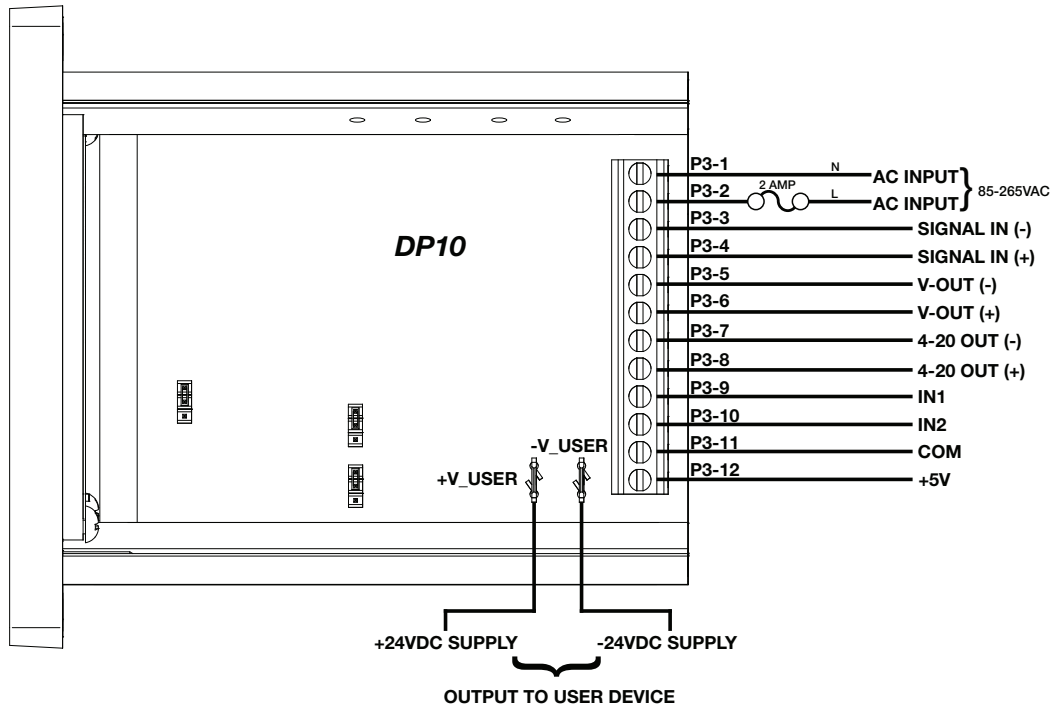


Figure 3

P3 Terminal Block Descriptions

- P3-1 (AC / N) – For single phase AC lines connect the Neutral side of your AC line to this terminal. For systems with two hot AC lines, connect either of the Hot AC lines to this terminal.
- P3-2 (AC / L) – For single phase AC lines connect the Hot side of your AC line to this terminal. For systems with two hot AC lines, connect either of the Hot AC lines to this terminal.
- P3-3 (-SIGNAL IN) – In Scaled Mode, connects to Negative or Common of voltage or current signal to be attenuated.
- P3-4 (+SIGNAL IN) – In Scaled Mode, connects to Positive of voltage or current signal to be attenuated.
- P3-5 (-24VDC SUPPLY) – A 24VDC* supply output is provided to the user for sensor or other device.
- P3-6 (+24VDC SUPPLY) – A 24VDC* supply output is provided to the user for sensor or other device.
- P3-7 (-mA OUTPUT) – The negative connection for either Scaled or Generated mA current output signal.
- P3-8 (+mA OUTPUT) – The Positive connection for either Scaled or Generated mA current output signal.
- P3-9 IN1 - Contact input for user configurable actions such as specified output, and set point lock.
- P3-10 IN2 - Contact input for user configurable actions such as specified output, and set point lock.
- P3-11 COM
- P3-12 +5V

Basic Operating Information

The DP10 Signal Conditioner is a panel-mounted multiple function device used to either attenuate (scale or reduce), convert, or generate control signals typically used in laboratory/R&D or plant/industrial applications. The input signals are analog in nature and specifically in the 0-5VDC or 4-20mA range.

** Note: An optional Voltage Regulator for 5-20V is available for customer use. Current capability depends on voltage required; e.g. 5V/50mA to 20V/200mA; thermally current limited.*

The output signal can be either 4-20mA or from 0.1Vdc to the Vset voltage (5-20VDC).

Visual Reference

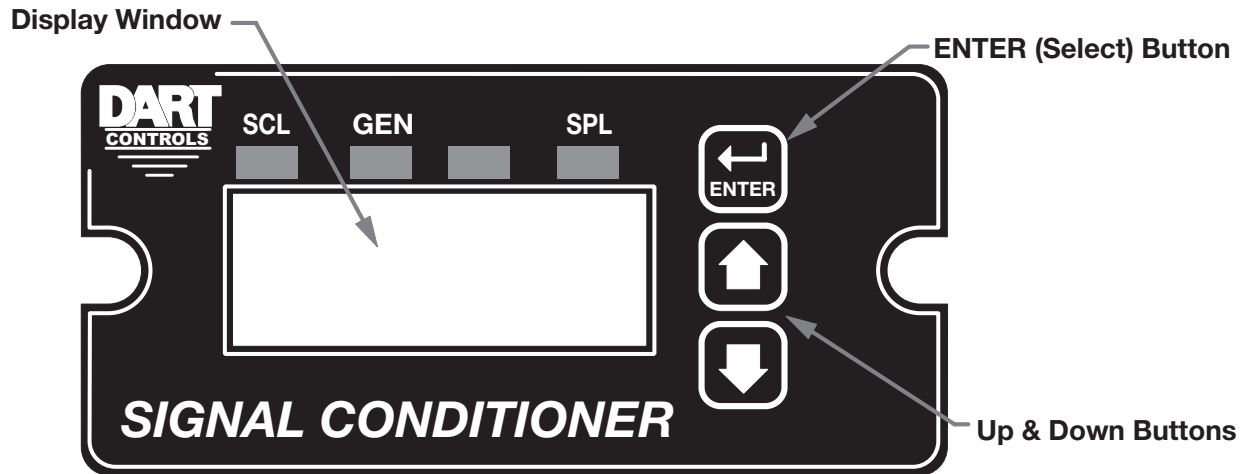


Figure 4

The Up/Down buttons are used to Scale or Set the output level, in percent. The Minimum Scaling/Generator output is 0.0%. The Maximum Scaling/Generator output is 100.0%. On power up, the factory default setting is "Last Value".

The Enter button is generally not used. However, there are some parameter programming changes available (such as Power Up Value) that can be changed in the field - to make those changes the Enter button will be used. **Please call the Dart Factory for assistance if programming changes are desired.**

When lit, the annunciator LED's across the top of the DP10 indicate the following:

SCL: Scaling mode is active and depending on jumper configuration, either a current or voltage will be output. In current output mode the Display setting and the input Current or Voltage effects the 4-20mA output current. In Voltage output mode the Display setting, the maximum level set by the potentiometer R9 adjustment and the input Current or Voltage effects the output Voltage level; see appropriate sections for proper hardware and software setup.

Gen: Generate mode is active and depending on jumper configuration, either a current or voltage will be output. In Current output mode only the Display setting effects the 4-20mA current output. In Voltage output mode, the Display setting and the maximum level set by the potentiometer R9 adjustment determine the output level; see appropriate sections for proper hardware and software setup.

SPL: The DP10 is in Set Point Lock; this effectively disables any changes until IN1/IN2 input levels change according to the functional configurations. Various modes are available with SCL, please see appropriate sections for proper setup.

Device Configuration

Configuration is accomplished via jumper settings and (for Voltage Outputs only) a trimpot adjustment. Location is as follows:

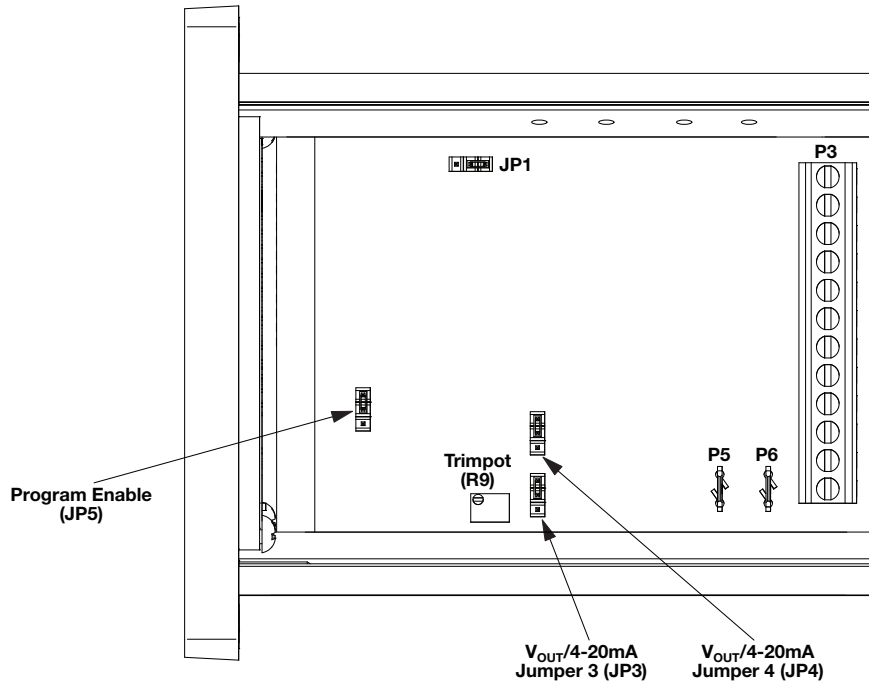


Figure 5

Signal accuracy and stability is established using a 12-bit microcontroller with a crystal oscillator. The multi-turn trimpot (R9) adjusts the maximum output level when Voltage output is selected. Adjust R9 for desired maximum voltage output (V_{set}) with the Display set to 100.0; measure V_{set} across P3-5(-) and P3-6(+).

Mode of Operation

There are three Modes of Operation for the DP10, established by the JP1, JP2, and JP3 jumper settings:

1. JP1 - If the DP10 is receiving a signal to be Scaled or Converted, this setting defines the input signal type (0-5Vdc or 4-20mA Current) (Optional high input voltage or PWM).
2. JP2 - Defines whether the DP10 is receiving an external signal to be scaled/converted; or is simply generating a signal.
3. JP3 - Determines the Output Signal type - Vdc or mA Current. MUST be same type as JP4
4. JP4 - Determines the Output Signal type - Vdc or mA Current. MUST be same type as JP3

The four jumper settings allow the DP10 to operate as:

- 4-20mA Input/Scaled 4-20mA or 0.1-20Vdc Output
- 0-5Vdc Input/Scaled 4-20mA or 0.1-20Vdc Output
- No Input/Generator 4-20mA or 0.1-20Vdc Output

DP-10 Current/Voltage I/O Jumper Configuration						
Input	Output	JP1	JP2	JP3	JP4	JP5
		V/I IN	Scale/Generate	V/I Out Reference	V/I OUT Power Supply	Application Configuration
Pin to Pin Jumper Configuration						
Current	Voltage	li	Scale	Vo	Vo	
Current	Current	li	Scale	lo	lo	
Voltage	Voltage	Vi	Scale	Vo	Vo	
Voltage	Current	Vi	Scale	lo	lo	
Generate	Voltage	N/A	Gen	Vo	Vo	
Generate	Current	N/A	Gen	lo	lo	
						Allow Change = 1-2 (pins)
						Inhibit Change = 3-4 (pins)

Note: Both JP3 and JP4 must be set correctly.

Software Parameters

Parameter	Description	Value Range (units)	Factory Default	User Settings
0	Selecting this item exits to Running Mode	n/a	n/a	
	Read-Only Parameters			
1	Model Number	90 – DP10 Unit	90	
2	Software Build	1 – 9999	n/a	
3	Hardware Version	1 – 9999	n/a	
4	Serial Number – Major (reserved)	n/a	n/a	
5	Serial Number – Minor (reserved)	n/a	n/a	
	General Setup			
10	Generate / Scale	1 – Generate 2 - Scale	1	
11	Display Intensity	0 – 31 (Dim – Bright)	26	
12	Display Zero Blanking	1 – ___X Show at least 1 Digit 2 – __XX Show at least 2 Digits 3 – _XXX Show at least 3 Digits 4 – XXXX Show all 4 Digits	2	
15	Keypad Mode	1 – Linear, Constant Rate 2 – Non-linear, Accelerating Rate	2	
16	Keypad Scroll Delay	0 – 30 (Fast – Slow)	10	
18	Power-up Mode	1 – Default to Zero Display 2 – Default to Power-up Value 3 – Default to Previous Running Val.	3	
19	Power-up Value	0 – 9999 (Display Units)	0	
	Display & Output Setup			
20	Display Value at Minimum Output	-9999 – 9999 (Display Units)	0	
21	Display Value at Maximum Output	-9999 – 9999 (Display Units)	1000	
25	Output % - Minimum	0 – 1000 (1/10th Percent Units)	0	
26	Output % - Maximum	0 – 1000 (1/10th Percent Units)	1000	
	Input #1 (IN1) Setup			
30	IN1 Input Configuration	1 – Output 0% When IN1 Low 2 – Output 0% When IN1 High 3 – Output Setpoint When IN1 Low 4 – Output Setpoint When IN1 High 5 – Output 100% When IN1 Low 6 – Output 100% When IN1 High 7 – Lock Set Point when IN1 is Low (See: Parameter Description for details)	1	
31	IN1 Setpoint	-9999 – 9999 (Display Units)	0	
	Input #2 (IN2) Setup			
35	IN2 Input Configuration	1 – Output 0% When IN2 Low 2 – Output 0% When IN2 High 3 – Output Setpoint When IN2 Low 4 – Output Setpoint When IN2 High 5 – Output 100% When IN2 Low 6 – Output 100% When IN2 High 7 – Lock Set Point when IN2 is High (See: Parameter Description for details)	1	
36	IN2 Setpoint	-9999 – 9999 (Display Units)	0	
	Parameter Memory Commands			
95	Restore Settings to Factory Default	0 – Do Nothing & Exit 5 – Restore Factory Defaults	0	
98	Save to User Default Area	0 – Do Nothing & Exit 1 – Save Setting	0	
99	Restore from User Default Area	0 – Do Nothing & Exit 1 – Restore Settings	0	

Parameter Descriptions

Parameter 0 – Exit to Running Mode

When parameter 0 is selected in Parameter-Selection Mode, the unit will return to Running Mode and display the running value. This should be selected once the changes to the parameters are completed.

Parameter 1 – Model Number (Read Only)

This is a number which represents the base model number for the product. The model code for the DP10 is 90.

Parameter 2 – Software Build (Read Only)

The software build is a code which identifies the software version of the unit.

Parameter 3 – Hardware Version (Read Only)

The hardware version is a code which identifies which hardware was used to build the unit.

Parameter 4 & 5 – Serial Number, Major & Minor (Read Only)

These parameters are reserved for future use as an electronic serial number and are unique to each manufactured unit.

Parameter 10 – Generate / Scale

Mode 1: Generate

Generate Output Signal

Mode 2: Scale

Scale Input Signal

Parameter 11 – Display Intensity

This parameter adjusts the intensity of the LED display digits in the front panel of the unit. The values of 0 – 31 correspond to a gradual change from very dim to very bright. This is often useful when the DP10 is used in the same panel as other pieces of equipment with LED display and a uniform display brightness is desired. Simply adjust the DP10 to match its surroundings.

Parameter 12 – Display Zero Blanking

This selects the number of display digits that are required to be displayed regardless of the display value. For example, with a Display Zero Blanking setting of 3 and a displayed value of 6, the display would show "_006".

Mode 1: ___X Always show at least 1 digit

Mode 2: __XX Always show at least 2 digits

Mode 3: _XXX Always show at least 3 digits

Mode 4: XXXX Always show all 4 digits

Parameter 15 – Keypad Mode

This parameter selects the operating mode of the front-panel push buttons. In some applications, increasing or decreasing the scroll rate provides the user more controllability when entering settings. Parameters 14 and 15 affect only the Up and Down buttons when the user interface is in Running Mode. These settings also apply to remote Up / Down buttons which are attached via the -1 option board.

Mode 1: Linear, Constant Rate

In linear mode, pressing and holding the Up or Down buttons will cause the display to continuously change value in the requested direction until either the Display Minimum or Display Maximum is reached. The displayed value will scroll at a constant rate which is specified using parameter 16.

Mode 2: Non-linear, Accelerating Rate

In non-linear mode, pressing and holding the Up or Down buttons will cause the display to continuously change value in the requested direction until either the Display Minimum or Display Maximum is reached. The displayed value will initially scroll at a slow rate and increase in speed until the maximum scroll rate is achieved. The initial scroll rate is specified using parameter 16.

Parameter 16 – Keypad Scroll Mode

This parameter sets the scroll speed for the front-panel push buttons. The function of this parameter varies slightly depending on the Keypad Mode. See parameter 15 for more details.

Parameter 18 – Power-Up Mode

This parameter defines the mode which determines the default Running Value when power is initially applied to the DP10.

Mode 1: Default to Zero

When in this mode, the unit will default to zero (display units).

Mode 2: Default to Power-Up Value

When in this mode, the unit will default to the Power-up Value, parameter 19.

Mode 3: Default to Previously Running Value

When in this mode, the unit will default to the previous running value before power was removed. *A previous running value must have been active for at least 3 seconds to be recalled after power has been disconnected and reapplied.*

Parameter 19 – Power-Up Value

When Power-up Mode is set to 2, this parameter will designate the default display value at power-up in display units.

Parameter 20 – Display Value at Minimum Output

This parameter defines the lower end of the display range. This is the value which limits how low the user is able to scroll the displayed value in Running Mode. In Rate and Time modes, this value is set in display units. This parameter is set without consideration for the decimal point's position. For example, setting this parameter to 125 would set the lower display limit at 12.5, 0.125, or 125 seconds according to the other configuration parameters.

Parameter 21 – Display Value at Maximum Output

This parameter defines the upper end of the display range. This is the value which limits how high the user is able to scroll the displayed value in Running Mode. In Rate and Time modes, this value is set in display units. This parameter is set without consideration for the decimal point's position. For example, setting this parameter to 1000 would set the upper display limit at 100.0, 1.000, or 1000 seconds according to the other configuration parameters.

Parameter 25 – Minimum Output % (in 1/10 percent units)

This parameter sets the output percentage which corresponds to the minimum display value, parameter 20. This parameter has a range of 0 to 1000 which represents 0.0 to +100.0 percent of output. When the user is adjusting the display value towards the programmed minimum display, the output will linearly approach the value of this parameter. For example, setting this parameter to 25 will configure the DP10 to output 2.5% when the user adjusts the display value to equal the display minimum, parameter 20. Setting this minimum percentage higher than the maximum (parameter 26) will cause the polarity of the output to be inverted. See parameters 20 - 22 and the application examples for additional information.

Parameter 26 – Maximum Output % (in 1/10 percent units)

This parameter sets the output percentage which corresponds to the maximum display value, parameter 21. This parameter has a range of 0 to 1000 which represents 0.0 to +100.0 percent of output. When the user is adjusting the display value towards the programmed maximum display, the output will linearly approach the value of this parameter. For example, setting this parameter to 850 will configure the DP10 to output 85.0% when the user adjusts the display value to equal the display maximum, parameter 21. Setting this maximum percentage lower than the minimum (parameter 25) will cause the polarity of the output to be inverted. See parameters 20 - 22 and the application examples for additional information.

Parameter 30 – Input 1 (IN1) Configuration

This parameter determines the operating mode of input 1 (IN1).

Mode 1: Output 0% When IN1 Low

When the IN1 input is at an electrically low state or wired to the unit's common, the DP10 will force its output to 0%. Once the IN1 input returns to an electrically high (+5V) state or allowed to float disconnected, the output will once again correspond to the display value.

Mode 2: Output 0% When IN1 High

When the IN1 input is at an electrically high (+5V) state or allowed to float disconnected, the DP10 will force its output to 0%. Once the IN1 input returns to an electrically low state or wired to the unit's common, the output will once again correspond to the display value.

Mode 3: Output Setpoint When IN1 Low

When the IN1 input is at an electrically low state or wired to the unit's common, the DP10 will force its output to a percentage which corresponds to the programmed jog setpoint, parameter 31. Once the IN1 input returns to an electrically high (+5V) state or allowed to float disconnected, the output will once again correspond to the display value.

Mode 4: Output Setpoint When IN1 High

When the IN1 input is at an electrically high (+5V) state or allowed to float disconnected, the DP10 will force its output to a percentage which corresponds to the programmed jog setpoint, parameter 31. Once the IN1 input returns to an electrically low state or wired to the unit's common, the output will once again correspond to the display value.

Mode 5: Output 100% When IN1 Low

When the IN1 input is at an electrically low state or wired to the unit's common, the DP10 will force its output to 100%. Once the IN1 input returns to an electrically high (+5V) state or allowed to float disconnected, the output will once again correspond to the display value.

Mode 6: Output 100% When IN1 High

When the IN1 input is at an electrically high (+5V) state or allowed to float disconnected, the DP10 will force its output to 100%. Once the IN1 input returns to an electrically low state or wired to the unit's common, the output will once again correspond to the display value.

Mode 7: Lock Set Point when IN1 is Low

“LOC” is displayed when one of the front panel buttons is pressed with IN1 in an electrically Low State. Program by bringing IN1 terminal P3-9 to electrically High state or allow IN1 to float when disconnected from Common terminal P3-11. Enter Program Mode, Select Parameter 30, Press Enter, select value item 7, Press Enter again.

Note: (Select a value 1-6 to Exit the LOCK Set Point than press enter) Select Parameter 0 and press enter to Exit Program Mode. Activate for the new changes to take effect by cycling AC power Off/On.

Parameter 31 – Input 1 (IN1) Setpoint

When the S1 configuration, parameter 30, is set to one of the setpoint (jog) modes(modes 3 or 4), this parameter defines the jog setpoint in display units. This parameter is always set in display units.

Parameter 35 – Input 2 (IN2) Configuration

This parameter determines the operating mode of input 2 (IN2).

Mode 1: Output 0% When IN2 Low

When the IN2 input is at an electrically low state or wired to the unit's common, the DP10 will force its output to 0%. Once the IN2 input returns to an electrically high (+5V) state or allowed to float disconnected, the output will once again correspond to the display value.

Mode 2: Output 0% When IN2 High

When the IN2 input is at an electrically high (+5V) state or allowed to float disconnected, the DP10 will force its output to 0%. Once the IN2 input returns to an electrically low state or wired to the unit's common, the output will once again correspond to the display value.

Mode 3: Output Setpoint When IN2 Low

When the IN2 input is at an electrically low state or wired to the unit's common, the DP10 will force its output to a percentage which corresponds to the programmed jog setpoint, parameter 36. Once the IN2 input returns to an electrically high (+5V) state or allowed to float disconnected, the output will once again correspond to the display value.

Mode 4: Output Setpoint When IN2 High

When the IN2 input is at an electrically high (+5V) state or allowed to float disconnected, the DP10 will force its output to a percentage which corresponds to the programmed jog setpoint, parameter 36. Once the IN2 input returns to an electrically low state or wired to the unit's common, the output will once again correspond to the display value.

Mode 5: Output 100% When IN2 Low

When the IN2 input is at an electrically low state or wired to the unit's common, the DP10 will force its output to 100%. Once the IN2 input returns to an electrically high (+5V) state or allowed to float disconnected, the output will once again correspond to the display value.

Mode 6: Output 100% When IN2 High

When the IN2 input is at an electrically high (+5V) state or allowed to float disconnected, the DP10 will force its output to 100%. Once the IN2 input returns to an electrically low state or wired to the unit's common, the output will once again correspond to the display value.

Mode 7: Lock Set Point when IN2 is High

“LOC” is displayed when one of the front panel buttons is pressed with IN2 in an electrically High State. Program by bringing IN2 terminal P3-10 to electrically Low state or wire to unit's Common terminal P3-11. Enter Program Mode, Select Parameter 35, Press Enter, select value item 7, Press Enter again.

Note: (Select a value 1-6 to Exit the LOCK Set Point than press enter) Select Parameter 0 and press enter to Exit Program Mode. Activate for the new changes to take effect by cycling AC power Off/On.

Parameter 36 – Input 2 (IN2) Setpoint

When the IN2 configuration, parameter 35, is set to one of the setpoint (jog) modes (modes 3 or 4), this parameter defines the jog setpoint in display units. This parameter is always set in display units.

Parameter 95 – Factory Default Command

When set to a value of 5, the unit will be reset to factory default settings. This can also be achieved by applying power to the unit with both the Enter and Down buttons depressed. *The programming jumper must be in the "On" position for this method to function.*

Parameter 98 – Save to User Default Area Command

When set to a value of 1, the unit will store all adjustable parameters to the user default area. The user default area is intended to be a location where an OEM or integrator can store settings specific to their application. Using this, an OEM can easily refresh their custom settings in the field if an end-user accidentally reconfigures the unit unsuccessfully. Another common use for this area is testing and initial setup. The user can store known-good settings here and easily experiment without the fear of losing the optimal configuration.

Parameter 99 – Restore from User Default Area Command

When set to a value of 1, the unit will restore all adjustable parameters from the user default area. See parameter 98 for additional information.

Troubleshooting

Problem	Possible Case	Solution
Display is blank	Power not applied	Using a volt meter, verify that a voltage between 85 and 265VAC is measured between the L and N terminal block positions.
	Defective unit	Contact technical support for additional help and instructions.
Display is dim	Display intensity parameter is too low	Editing and increasing the display intensity parameter should cause the display digits to become brighter.
“-S1-” or “-S2-” displayed	Switch S1 or S2 is active	Remove S1 or S2 input. Refer to Parameter 30 and 35 for information on settings.
“LOC” displayed	Parameter 30 or 35 is set to 7	Change input state of S1 or S2; or reprogram Parameter 30 or 35.
Does not provide proper output.	Jumpers in wrong position	<p>Verify jumpers are properly set for desired operation (see table page 7)</p> <p>No output if either JP3 or JP4 in wrong location.</p> <p>JP1 in wrong location: No output for Vout; 4mA out for 4-20mA Out</p> <p>JP2 in wrong location: If in Gen position, no output change for change in input only for change from keypad entry.</p> <p>If in Scale position with no Input from Signal In input, then '0' out for Voltage mode and 4mA out for Current mode. If JP1, JP3 or JP4 are missing or on one pin, then it will have either minimal value output or none at all.</p> <p>If JP2 is missing or the jumper is on one pin, the unit will be in Scale mode.</p>

Technical Support Options

- Visit the Dart Controls Web Site at: www.dartcontrols.com
- Email technical support at: sales@dartcontrols.com
- Telephone technical support at 317-873-5211

What's Special About www.dartcontrols.com?

- Changes to printed material and product offerings first appear online
- Product manuals and other literature are easily accessible
- All information can be easily displayed or printed as needed

- Notes


REPAIR PROCEDURE

In the event that a Product manufactured by Dart Controls Incorporated (DCI) is in need of repair service, it should be shipped, freight paid, to: Dart Controls, Inc., 5000 W. 106th Street, Zionsville, IN. 46077, ATTN: Repair Department. Please include Name, Shipping Address (no P.O. Box), Phone Number and if possible, e-mail address.


Those orders received from anyone without an existing account with DCI must specify if they will be paying COD or Credit Card (Master Card/Visa/American Express). This information is required before work will begin. If you have an account with Dart your order will be processed according to the terms listed on your account. Products with Serial Number date codes over 5 years old will automatically be deemed Beyond Economical Repair (BER). A new, equivalent device will be offered at a substantial discount.

Completed repairs are returned with a Repair Report that states the problem with the control and the possible cause. Repair orders are returned via UPS Ground unless other arrangements are made. If you have further questions regarding repair procedures, contact Dart Controls, Inc. at 317-873-5211.


YOUR MOTOR SPEED CONTROL SOLUTION PROVIDER

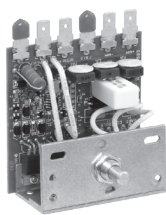

OEM Chassis SCR Drives
Dual Input voltage, adjustable HP range, isolated signal follower and reversing options

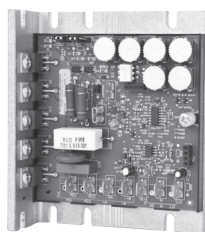

NEMA 4/4X SCR Drives
Dual Input voltage, adjustable HP range, isolated signal follower and reversing options

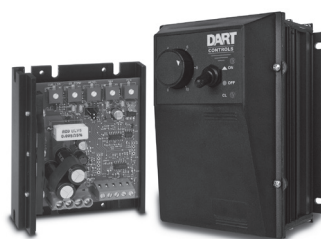

Low Voltage/Battery PWM Drives
Chassis and NEMA 4X versions, speed pot and signal follower operation



Digital SCR Drives
Closed loop accuracy, 4-20mA and serial communications, integral programmable display



Brushless DC Drives
Closed loop accuracy, line and low voltage versions through 1 HP



Digital Accessory & Resale Items

Motors to 700 HP, VFD's to 200 HP, NEMA rated encoder, digital programmable potentiometers and tachometers

Dart Controls, Inc. is a designer, manufacturer, and marketer of analog and digital electronic variable speed drives, controls, and accessories for AC, DC, and DC brushless motor applications.

Shown above is just a sampling of the expanded line of Dart controls that feature the latest in electronic technology and engineering. Products are manufactured in the U.S.A. at our Zionsville (Indianapolis, Indiana)

production and headquarters facility - with over 2,000,000 variable speed units in the field.

In addition to the standard off-the-shelf products, you can select from a wide variety of options to customize controls for your specific application. For further information and application assistance, contact your local Dart sales representative, stocking distributor, or Dart Controls, Inc.

Dart Controls, Inc.

Manufacturer of high quality DC and AC motor speed controls and accessories since 1963.

P.O. Box 10
5000 W. 106th Street
Zionsville, Indiana 46077
Phone: (317) 873-5211
Fax: (317) 873-1105

www.dartcontrols.com
ISO9001 REGISTERED
MADE IN USA