

# DVP-SA2

## Instruction Sheet

安 裝 說 明

安 装 说 明

Programmable Logic Controller

可程式控制器

可编程控制器

DVP-0180030-01  
20201216




Thank you for choosing Delta DVP-SA2. DVP-SA2 is embedded with a 12-point (8DI + 4DO) and a 28-point (16DI + 12DO) PLC MPU, offering various instructions and with 16k steps program memory, able to connect to all DVP-S series extension modules and high-speed extension modules, including digital I/O (max. 480 I/O points) and analog modules (for A/D, D/A conversion and temperature measurement). 2 points of 100 kHz and 2 points of 10 kHz high-speed pulse output satisfy all kinds of applications. DVP-SA2 series PLCs are battery-free, small in size and easy-to-install. The PLC programs and the latched data are stored in the high-speed flash memories.

- EN ✎ This guide provides information concerning features, electrical specifications and wiring, which should be brought to the attention of users. For other information related to programming and commands, please refer to DVP-SA2 Operation Manual, while the shipped installation instruction details the optional peripherals.
- EN ✎ DVP-SA2 is an OPEN-TYPE device. It should be installed in a control cabinet free of airborne dust, humidity, electric shock and vibration. To prevent non-maintenance staff from operating DVP-SA2, or to prevent an accident from damaging DVP-SA2, the control cabinet in which DVP-SA2 is installed should be equipped with a safeguard. For example, the control cabinet in which DVP-SA2 is installed can be unlocked with a special tool or key.
- EN ✎ DO NOT connect AC power to any of I/O terminals, otherwise serious damage may occur. Please check all wiring again before DVP-SA2 is powered up. After DVP-SA2 is disconnected, Do NOT touch any terminals in a minute. Make sure that the ground terminal ⚡ on DVP-SA2 is correctly grounded in order to prevent electromagnetic interference.
- FR ✎ Ce guide fournit des informations concernant les caractéristiques, les spécifications électriques et le câblage, qui doivent être portées à l'attention des utilisateurs. Pour d'autres informations relatives à la programmation et aux commandes, veuillez consulter le Manuel Utilisation du DVP-SA2, tandis que les instructions d'installation fournies avec le produit, détaillent les périphériques optionnels.
- FR ✎ DVP-SA2 est un module OUVERT. Il doit être installé que dans une enceinte protectrice (boîtier, armoire, etc.) saine, dépourvue de poussière, d'humidité, de vibrations et hors d'atteinte des chocs électriques. La protection doit éviter que les personnes non habilitées à la maintenance puissent accéder à l'appareil (par exemple, une clé ou un outil doit être nécessaire pour ouvrir a protection).
- FR ✎ Ne pas appliquer la tension secteur sur les bornes d'entrées/Sorties, ou l'appareil DVP-SA2 pourra être endommagé. Merci de vérifier encore une fois le câblage avant la mise sous tension du DVP-SA2. Lors de la déconnection de l'appareil, ne pas toucher les connecteurs dans la minute suivante. Vérifier que la terre est bien reliée au connecteur de terre ⚡ afin d'éviter toute interférence électromagnétique.

## ■ Product Profiles


### A. DVP12SA2

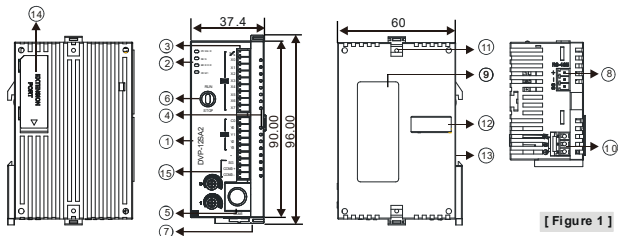

[ Figure 1 ]

Unit: mm

## B. DVP28SA2

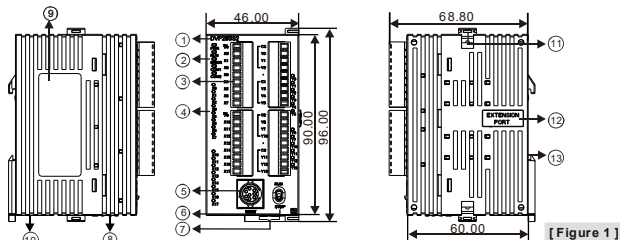

[ Figure 1 ]

Unit: mm

1. Model name	9. Nameplate
2. POWER, RUN, ERROR, COM1, COM2 indicator	10. DC power input
3. I/O terminals	11. Extension unit clip
4. I/O point/COM3 indicator	12. Extension port
5. COM1 (RS-232) port	13. DIN rail mounting slot (35mm)
6. RUN/STOP switch	14. High speed I/O connector (Only support by DVP12SA2)
7. DIN rail clip	15. COM3 (RS-485) port (Only support by DVP12SA2)
8. COM2 (RS-485) port	

## ■ Electrical Specifications

Item	DVP Models				
	12SA211R	12SA211T	28SA211R	28SA211T	28SA211S
Power supply voltage	24 VDC (-15 to 20%) (with counter-connection protection on the polarity of DC input power) DVPPS01/PS02: input 100 to 240 VAC, output 24 VDC/1A (PS02: 2A)				
Connector	European standard removable terminal block (Pin pitch: 3.5mm)				
Operation	Maximum power loss time is 10ms or less.				
Inrush current	Max. 7.5 A@24 VDC, $I^2t = 0.25A^2S$				
Fuse capacity	2.5 A/30 VDC, Polyswitch				
Power consumption	1.8 W	1.5 W	2.9W	1.7W	1.7W
Power protection	With counter-connection protection on the polarity of DC input power				
Insulation resistance	> 5MΩ (all I/O point-to-ground: 500 VDC)				
Noise immunity	ESD (IEC 61131-2, IEC 61000-4-2): 8kV Air Discharge EFT (IEC 61131-2, IEC 61000-4-4): Power Line: 2kV, Digital I/O: 1kV, Analog & Communication I/O: 1kV RS (IEC 61131-2, IEC 61000-4-3): 26MHz ~ 1GHz, 10V/m				
Grounding	The diameter of grounding wire cannot be smaller than the wire diameter of terminals L and N (All DVP units should be grounded directly to the ground pole).				
Operation / storage	Operation: 0 to 55°C (temp.), 5 to 95% (humidity), Pollution degree 2 Storage: -25 to 70°C (temp.), 5 to 95% (humidity) Non-condensing				


DVP Models	12SA211R	12SA211T	28SA211R	28SA211T	28SA211S
Item					
Vibration / shock resistance	International standards: IEC61131-2, IEC 68-2-6 (TEST Fc)/IEC61131-2 & IEC 68-2-27 (TEST Ea)				
Weight (g)	140g	131g	171g	134g	135g

Item	Spec.	Input Points		
		12SA2 / 28SA2		28SA2
Input No.		X0 ~ X2 (12SA2) X0 ~ X3 (28SA2)	X3 ~ X7 (12SA2) X4 ~ X7 (28SA2)	X10~X17
Input type		DC (SINK or SOURCE)		
Input current ( ±10% )		24 VDC · 5 mA		
Input impedance		4.7 kΩ		
Max. frequency		100 kHz	10 kHz	50Hz
Action level	Off → On	> 15 VDC		
	On → Off	< 5 VDC		
Response time	Off → On	< 2.5 μs	< 20 μs	<10ms
	On → Off	< 5 μs	< 50 μs	<10ms
Filter time		Adjustable within 0 ~ 20ms by D1020 (Default: 10ms)		

Item	Spec.	Output Points				
		Relay	Transistor (NPN & PNP)			
Output No.		Y0 ~ Y3	Y0, Y2	Y1, Y3	Y10~Y13	
Max. frequency		1 Hz	100 kHz	10 kHz	1kHz <sup>#5</sup>	
Working voltage		100~250 VAC, 5~30 VDC <sup>#4</sup>	5 ~ 30 VDC <sup>#1</sup>			
Leak current		-	<100uA			
Max. load	Resistive	1.5 A /1 point ( 5 A/COM )		0.5 A/1 point ( 4 A/COM )		
	Inductive	#2		15 W ( 30 VDC )		
	Lamp	20 WDC/100 WAC		2.5 W ( 30 VDC )		
Min. load		1mA / 5V		1mA/5V		
Response time	Off → On	Approx. 10 ms		2 μs <sup>#3</sup>	20 μs <sup>#3</sup>	100μs <sup>#3</sup>
	On → Off			3 μs <sup>#3</sup>	30 μs <sup>#3</sup>	100μs <sup>#3</sup>

#1: UP, ZP must work with external auxiliary power supply 24 VDC (-15 to +20%), rated consumption approx. 1mA/point.

#2: Relay contact life can be influenced by operating voltage , load types(cosφ/ t) and contact current rating. Figure 2 below shows the number of operations for reference.

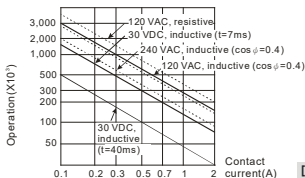

[ Figure 2 ]

#3: Load = 0.5A

#4: The max. Output speed is influenced by the actual PLC scan time.

## ■ I/O Configuration


12SA211R	12SA211T	28SA211R	28SA211T	28SA211S																																																																																				
Relay 8IN/4OUT	Transistor (NPN) 8IN/4OUT	Relay 16IN/12OUT	Transistor (NPN) 16IN/12OUT	Transistor (PNP) 16IN/12OUT																																																																																				
DC (Sink or Source)																																																																																								
<table border="1"> <tr><td>S/S</td></tr><tr><td>X0</td></tr><tr><td>X1</td></tr><tr><td>X2</td></tr><tr><td>X3</td></tr><tr><td>X4</td></tr><tr><td>X5</td></tr><tr><td>X6</td></tr><tr><td>X7</td></tr><tr><td>C0</td></tr><tr><td>Y0</td></tr><tr><td>Y1</td></tr><tr><td>Y2</td></tr><tr><td>Y3</td></tr><tr><td>●</td></tr><tr><td>S/G</td></tr><tr><td>COM3+</td></tr><tr><td>COM3-</td></tr></table>	S/S	X0	X1	X2	X3	X4	X5	X6	X7	C0	Y0	Y1	Y2	Y3	●	S/G	COM3+	COM3-	<table border="1"> <tr><td>S/S</td></tr><tr><td>X0</td></tr><tr><td>X1</td></tr><tr><td>X2</td></tr><tr><td>X3</td></tr><tr><td>X4</td></tr><tr><td>X5</td></tr><tr><td>X6</td></tr><tr><td>X7</td></tr><tr><td>Y0</td></tr><tr><td>Y1</td></tr><tr><td>Y2</td></tr><tr><td>Y3</td></tr><tr><td>UP</td></tr><tr><td>ZP</td></tr><tr><td>S/G</td></tr><tr><td>COM3+</td></tr><tr><td>COM3-</td></tr></table>	S/S	X0	X1	X2	X3	X4	X5	X6	X7	Y0	Y1	Y2	Y3	UP	ZP	S/G	COM3+	COM3-	<table border="1"> <tr><td>S/S</td></tr><tr><td>X0</td></tr><tr><td>X1</td></tr><tr><td>X2</td></tr><tr><td>X3</td></tr><tr><td>X4</td></tr><tr><td>X5</td></tr><tr><td>X6</td></tr><tr><td>X7</td></tr><tr><td>C1</td></tr><tr><td>Y3</td></tr><tr><td>Y4</td></tr><tr><td>Y5</td></tr><tr><td>C2</td></tr><tr><td>Y6</td></tr><tr><td>Y7</td></tr><tr><td>Y10</td></tr><tr><td>●</td></tr><tr><td>C3</td></tr><tr><td>Y11</td></tr><tr><td>Y12</td></tr><tr><td>Y13</td></tr></table>	S/S	X0	X1	X2	X3	X4	X5	X6	X7	C1	Y3	Y4	Y5	C2	Y6	Y7	Y10	●	C3	Y11	Y12	Y13	<table border="1"> <tr><td>S/S</td></tr><tr><td>X0</td></tr><tr><td>X1</td></tr><tr><td>X2</td></tr><tr><td>X3</td></tr><tr><td>X4</td></tr><tr><td>X5</td></tr><tr><td>X6</td></tr><tr><td>X7</td></tr><tr><td>UP0</td></tr><tr><td>ZP0</td></tr><tr><td>Y0</td></tr><tr><td>Y1</td></tr><tr><td>Y2</td></tr><tr><td>Y3</td></tr><tr><td>Y4</td></tr><tr><td>Y5</td></tr><tr><td>Y6</td></tr><tr><td>Y7</td></tr><tr><td>●</td></tr><tr><td>UP1</td></tr><tr><td>ZP1</td></tr><tr><td>Y10</td></tr><tr><td>Y11</td></tr><tr><td>Y12</td></tr><tr><td>Y13</td></tr><tr><td>●</td></tr></table>	S/S	X0	X1	X2	X3	X4	X5	X6	X7	UP0	ZP0	Y0	Y1	Y2	Y3	Y4	Y5	Y6	Y7	●	UP1	ZP1	Y10	Y11	Y12	Y13	●
S/S																																																																																								
X0																																																																																								
X1																																																																																								
X2																																																																																								
X3																																																																																								
X4																																																																																								
X5																																																																																								
X6																																																																																								
X7																																																																																								
C0																																																																																								
Y0																																																																																								
Y1																																																																																								
Y2																																																																																								
Y3																																																																																								
●																																																																																								
S/G																																																																																								
COM3+																																																																																								
COM3-																																																																																								
S/S																																																																																								
X0																																																																																								
X1																																																																																								
X2																																																																																								
X3																																																																																								
X4																																																																																								
X5																																																																																								
X6																																																																																								
X7																																																																																								
Y0																																																																																								
Y1																																																																																								
Y2																																																																																								
Y3																																																																																								
UP																																																																																								
ZP																																																																																								
S/G																																																																																								
COM3+																																																																																								
COM3-																																																																																								
S/S																																																																																								
X0																																																																																								
X1																																																																																								
X2																																																																																								
X3																																																																																								
X4																																																																																								
X5																																																																																								
X6																																																																																								
X7																																																																																								
C1																																																																																								
Y3																																																																																								
Y4																																																																																								
Y5																																																																																								
C2																																																																																								
Y6																																																																																								
Y7																																																																																								
Y10																																																																																								
●																																																																																								
C3																																																																																								
Y11																																																																																								
Y12																																																																																								
Y13																																																																																								
S/S																																																																																								
X0																																																																																								
X1																																																																																								
X2																																																																																								
X3																																																																																								
X4																																																																																								
X5																																																																																								
X6																																																																																								
X7																																																																																								
UP0																																																																																								
ZP0																																																																																								
Y0																																																																																								
Y1																																																																																								
Y2																																																																																								
Y3																																																																																								
Y4																																																																																								
Y5																																																																																								
Y6																																																																																								
Y7																																																																																								
●																																																																																								
UP1																																																																																								
ZP1																																																																																								
Y10																																																																																								
Y11																																																																																								
Y12																																																																																								
Y13																																																																																								
●																																																																																								

Note: The layout of output terminals on DVP-SA2 is different from that on DVP-SA.

## ■ Dimension & Installation

Please install the PLC in an enclosure with sufficient space around it to allow heat dissipation, See [Figure 3].


- **Direct Mounting:** Use M4 screw according to the dimension of the product.
- **DIN Rail Mounting:** When mounting the PLC to 35mm DIN rail, be sure to use the retaining clip to stop any side-to-side movement of the PLC and reduce the chance of wires being loose. The retaining clip is at the bottom of the PLC. To secure the PLC to DIN rail, pull down the clip, place it onto the rail and gently push it up. To remove the PLC, pull the retaining clip down with a flat screwdriver and gently remove the PLC from DIN rail.

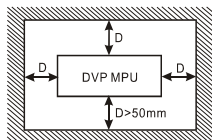

[ Figure 3 ]

## ■ Wiring

1. Use 22-16AWG (1.5mm) single or multiple core wire on I/O wiring terminals. See the figure in the right hand side for its specification. PLC terminal screws should be tightened to 1.90 kg-cm (1.65 in-lbs) and please use only 60/75°C copper conductor.
2. DO NOT wire empty terminal. DO NOT place the I/O signal cable in the same wiring circuit.
3. DO NOT drop tiny metallic conductor into the PLC while screwing and wiring. Tear off the sticker on the heat dissipation hole for preventing alien substances from dropping in to ensure normal heat dissipation of the PLC.




## ◆ Power Supply

The power input of DVP-SA2 is DC. When operating DVP-SA2, please note the following points:

1. The power is connected to two terminals, 24 VDC and 0 V, and the range of power is 20.4 to 28.8 VDC. If the power voltage is less than 17.5 VDC, the PLC will stop running, all outputs will go "Off", and the ERROR indicator will start to blink continuously.
2. The power shutdown for less than 10ms will not affect the operation of the PLC. However, the shutdown time that is too long or the drop of power voltage will stop the operation of the PLC, and all outputs will go off. When the power returns to normal status, the PLC will automatically resume the operation. (Please take care of the latched auxiliary relays and registers inside the PLC when doing the programming).

## ◆ Safety Wiring

Since DVP-SA2 is only compatible with DC power supply, Delta's power supply modules (DVPPS01/DVPPS02) are the suitable power supplies for DVP-SA2. We suggest you install the protection circuit at the power supply terminal to protect DVPPS01 or DVPPS02. See the figure below.

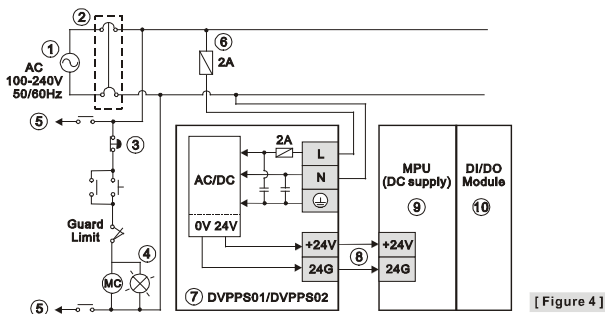

[ Figure 4 ]

① AC power supply: 100 ~ 240VAC, 50/60Hz      ② Breaker

③ Emergency stop: This button cuts off the system power supply when accidental emergency takes place.

④ Power indicator

⑤ AC power supply load

⑥ Power supply circuit protection fuse (2A)

⑦ DVPPS01/DVPPS02

⑧ DC power supply output: 24 VDC, 500 mA

⑨ DVP-PLC (main processing unit)


⑩ Digital I/O module

### ◆ Input Point Wiring

There are 2 types of DC inputs, SINK and SOURCE. (See the example below. For detailed point configuration, please refer to the specification of each model.)

#### ● DC Signal IN – SINK mode


Input point loop equivalent circuit

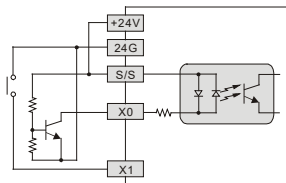

[ Figure 5 ]

#### ● DC Signal IN – SOURCE mode


Input point loop equivalent circuit

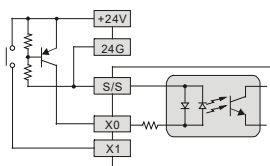


[ Figure 6 ]

### ◆ Output Point Wiring


1. DVP-SA2 has two output modules on it, relay and transistor. Be aware of the connection of shared terminal when wiring output terminals.
2. Relay output terminals Y0 to Y3 of 12SA2 relay model use C0 common port. See [Figure 7]. For 28SA211R relay model, see [Figure 8]. When the output points are enabled, their corresponding indicators on the front panel will be on.
3. Transistor output terminals, Y0 to Y3 of transistor (NPN) models use UP, ZP common port. For 12SA2-T, 28SA2-T and 28SA2-S models, See [Figure 9], [Figure 10] and [Figure 11].




[ Figure7 ]




[ Figure8 ]



[ Figure9 ]




[ Figure10 ]





[ Figure11 ]

4. Isolation circuit: The optical coupler is used to isolate signals between the circuit inside PLC and the output side of the circuit.

#### ● Relay (R) output circuit wiring

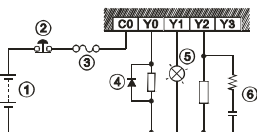

[ Figure12 ]

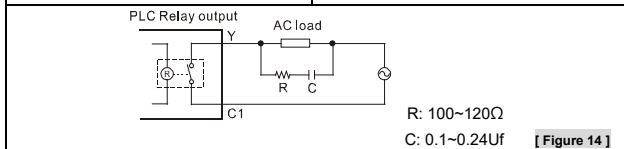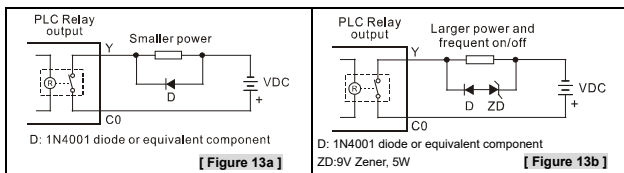

- ① DC power supply
- ② Emergency stop: Uses external switch
- ③ Fuse: 5 to 10A fuse at the shared terminal of output contacts to protect the output circuit
- ④ Transient voltage suppressor (SB360 3A 60V): Extends the life span of contact.
  - 1. Diode suppression of DC load: Used when in smaller power [Figure 10a]
  - 2. Diode + Zener suppression of DC load: Used when in larger power and frequent On/Off [Figure 10b]
- ⑤ Incandescent light (resistive load)
- ⑥ Absorber: Reduces the interference on AC load [Figure 11]

### • Transistor (T) output circuit wiring

