









# **Model Number**

### UB400-F77-F-V31


Ultrasonic direct detection sensor

## **Features**

- Miniature design
- Frequency output
- **Program input**
- **Degree of protection IP67**
- Switching status indicator, yellow LED

# **Diagrams**

## Characteristic response curve

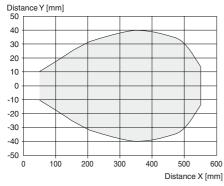



# **Technical data**

General specifications	
Sensing range	40 400 mm
Dead band	0 40 mm
Standard target plate	20 mm x 20 mm
Transducer frequency	approx. 300 kHz
Response delay	≤ 75 ms

#### **Nominal ratings**

Time delay before availability t<sub>v</sub> ≤ 150 ms

### Limit data

Permissible cable length max. 300 m

#### Indicators/operating means

LED yellow object inside the scanning range

#### **Electrical specifications** Rated operating voltage U<sub>e</sub> 24 V DC

20 ... 30 V DC , ripple 10  $\%_{\mbox{SS}}$  ; 12 ... 20 V DC sensitivity Operating voltage U<sub>B</sub>

reduced to 90 %

No-load supply current I<sub>0</sub> ≤ 20 mA

Input Input type 1 program input

low level: 0 ... 0.7 V (Teach-In active) Level  $\label{eq:high-level} \mbox{high level}: \mbox{U}_{\mbox{\footnotesize{B}}} \mbox{ or open input (Teach-In inactive)}$ 

Input impedance  $16~\text{k}\Omega$ 

Pulse length ≥ 3 s Output

Output type Frequency output, PNP

Rated operating current I<sub>e</sub> 100 mA, short-circuit/overload protected Voltage drop U<sub>d</sub> ≤ 2 V

Resolution Standard 2 Hz / mm Repeat accuracy ± 2.5 % Off-state current I<sub>r</sub> ≤ 0.01 mA

frequency: 80 ... 800 Hz (40 ... 400 Hz), adjustable Output frequency Temperature influence + 0.17 %/K

Ambient conditions -25 ... 70 °C (-13 ... 158 °F) Ambient temperature Storage temperature -40 ... 85 °C (-40 ... 185 °F) Shock resistance 30 g, 11 ms period

Vibration resistance 10 ... 55 Hz , Amplitude ± 1 mm

**Mechanical specifications** 

Connection type M8 x 1 connector, 4-pin

Degree of protection Material

Housing Polycarbonate

Transducer epoxy resin/hollow glass sphere mixture; polyurethane foam Installation position any position

10 g Mass Tightening torque, fastening screws max. 0.2 Nm

Compliance with standards and

directives

Standard conformity EN 60947-5-2:2007 + A1:2012 Standards

IEC 60947-5-2:2007 + A1:2012


Approvals and certificates

UL approval cULus Listed, General Purpose CSA approval cCSAus Listed, General Purpose


CCC approval CCC approval / marking not required for products rated

≤36 V

# **Dimensions**

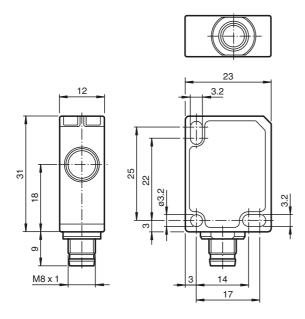

# **Electrical Connection**

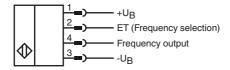

# **Pinout**



Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

## **Accessories**

## UB-PROG4-V31

Programming unit for ultrasonic sensors with Teach-in input at pin 2

#### OMH-ML7-01

Mounting aid for ML7 and ML8 series, Mounting bracket

### V31-GM-2M-PVC

Female cordset, M8, 4-pin, PVC cable

#### V31-WM-2M-PVC

Female cordset, M8, 4-pin, PVC cable

## **Description of Sensor Function**

The ultrasonic sensor transmits ultrasonic packages in quick succession and responds to their reflection off the detected object. It has a frequency output that delivers a square wave signal. The frequency of this signal changes linearly with the distance of the object. Two frequency ranges are available.

# **Description of the Frequency Selection**

Proceed as follows to select the frequency range:

### Standard frequency 80 ... 800 Hz

- 1. Connect terminal ET to  $+U_B$  or leave it open.
- 2. Switch on the operating voltage.
- 3. The sensor will be ready for operation after 3 seconds.

### Low frequency 40 ... 400 Hz

- 1. Connect terminal (ET) to -U<sub>B</sub>.
- 2. Switch on the operating voltage.
- 3. The sensor will be ready for operation after 3 seconds.

ET	unusable area	Sensing range 40 400 mm	> 400 mm or no object
Open or +U <sub>B</sub>	Undefined	80 800 Hz	800 Hz
-U <sub>B</sub>	Undefined	40 400 Hz	400 Hz

#### Note:

Switching the potential on ET during operation will not change the frequency range.

# **Mounting instruction**

If the sensor is operated at temperatures below 0 °C, use the supplied distance plate. Only use the two rearmost mounting holes (located opposite to the transducer) for mounting the sensor.

# **Safety Note**



The use of this device in applications, where the safety of persons depends from the devices function, is not allowed!